


# BLACK+ DECKER™

## MOBILE COOLER CART

### INSTRUCTION MANUAL

CATALOG NUMBER  
BCC20W

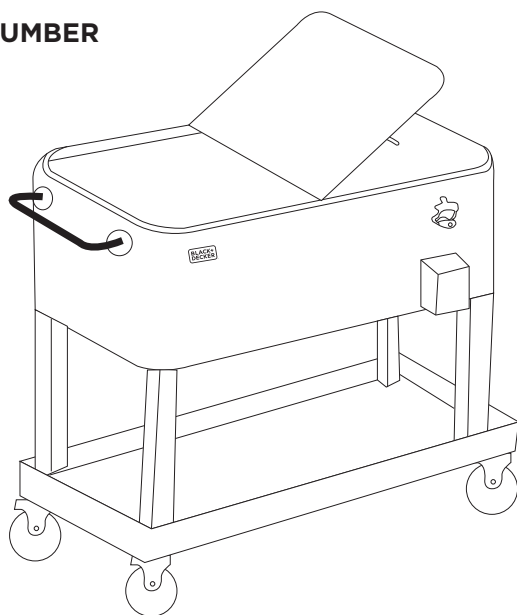

Thank you for choosing BLACK+DECKER!

**PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON.**

If you have a question or experience a problem with your BLACK+DECKER purchase, go to [www.blackanddecker.com/instantanswers](http://www.blackanddecker.com/instantanswers)

If you can't find the answer or do not have access to the Internet, call 844-299-0879 from 10:30 a.m. to 6:30 p.m. EST Mon. - Fri. to speak with an agent. Please have the catalog number available when you call.

**SAVE THIS MANUAL FOR FUTURE REFERENCE.**

# CONTENTS

## SAFETY INFORMATION

Important Safety Instructions..... 2

## SET UP & USE

Parts List..... 3

Assembly Instructions..... 4

CLEANING & CARE..... 5

## TROUBLE SHOOTING & WARRANTY

Customer Service..... 5

Limited Warranty ..... 6

# PRODUCT REGISTRATION

Thank you for purchasing our BLACK+DECKER product. This easy-to-use manual will guide you in getting the best use of your mobile cooler cart.

\_\_\_\_\_

Model number

\_\_\_\_\_

Serial number

Remember to record the model and serial numbers. They are on a label on the rear.

\_\_\_\_\_

Date of purchase

Staple your receipt to your manual. You will need it to obtain warranty service.

# SAFETY INFORMATION

## IMPORTANT SAFETY INSTRUCTIONS


1. READ ALL INSTRUCTIONS BEFORE USE

**SAVE THESE INSTRUCTIONS**  
**HOUSEHOLD USE ONLY**

# SET UP & USE

## PARTS LIST

Tools Required: Adjustable Wrench and Screwdriver

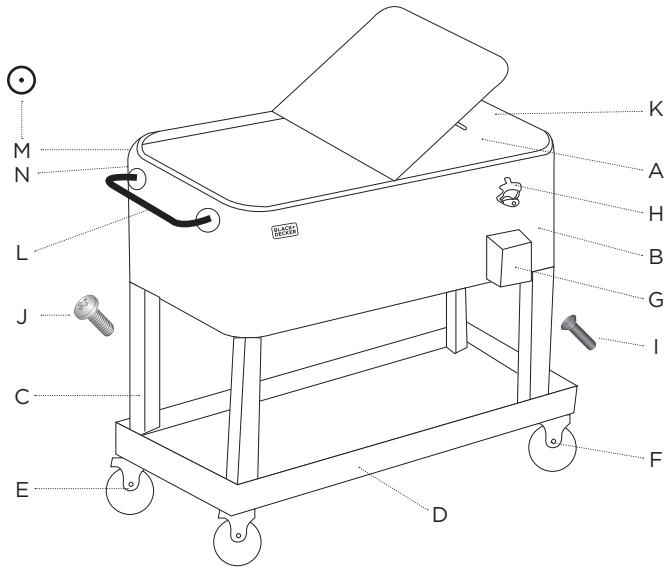

ID	DESCRIPTION	QUANTITY
A	Cooler Lid	1
B	Cooler Body	1
C	Legs	4
D	Bottom Tray	1
E	Caster Wheels with Locks	2
F	Caster Wheels	2
G	Bottle Cap Collector	1
H	Bottle Opener	1
I	M5 x 12 Bolts	18
J	M4 x 16 bolts	12
K	Lid Handles	2
L	Pull Handle	2
M	Drain Cap	1
N	Drain Extension Tube	1

# SET UP & USE

## ASSEMBLY INSTRUCTIONS

We suggest you assemble the unit on a soft surface to avoid damage to the finish.

1. Place the Cooler Body (B) upside down, so the bottom is facing up.
2. Attach the Leg Assemblies (C) by lining up the holes in the leg assemblies (C) and securing with M5x12 Bolts (I), (4) four should be used for each of the Leg Assemblies (C).
3. Next attach the Bottom Tray (D) to the Leg Assemblies (C) by lining up the thru holes in the Bottom Tray (D) with the threaded holes in the Leg Assemblies
4. Thread the (2) two Caster Wheels with Locks (E) into the threaded holes on the left side of the Leg and Tray Assembly. Make sure both of the Casters have locks on them. Secure them using an adjustable wrench. Do not over tighten as the threads may strip.
5. Repeat Step 4 with the remaining Caster Wheels (F) for the right side of the Leg and Tray Assembly.
6. Carefully turn the Cooler Cart onto its wheels. Lock the Casters by pressing down on the lock pedal until it clicks into the locked position.
7. Attach the Bottle Cap Collector (G) by slipping the tabs into the slots on the Cooler Body and then push down, it will click into position.
8. Secure the Bottle Opener (H) using (2) Two M5 x 12 Bolts (I). Do not over tighten as the threads may strip.
9. Attach the Pull Handle (L) using (12) Twelve M4x16 Bolts (J). Do not over tighten as the threads may strip.
10. Attach the first Lid Handle (K) to the Cooler Lid using M4 x 16 bolts. Repeat for remaining Lid Handle. Do not over tighten as the threads may strip.
11. Place the assembled lid into position on the Cooler Body and press down to seal the Cooler. There should be a snug fit.
12. When using the Cooler Cart remember to have the Drain Extension Tube tightened onto the drain spout then tighten the Drain Cap onto the threaded end of the Drain Extension Tube to keep water run off from the melting ice from leaking out. When finished using the Cooler Cart remove the Drain Cap from the Drain Extension Tube so the water from the melted ice can easily drain.

## SET UP & USE

### CLEANING AND MAINTENANCE

When cleaning your mobile cooler cart use non-abrasive tools like soft clothes and plastic scouring pads. Use water or non-chemical cleaner to clean the interior.

## TROUBLESHOOTING & WARRANTY

### IMPORTANT

#### **DO NOT RETURN THIS PRODUCT TO THE STORE**

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 844-299-0879 or [service@appliance.com](mailto:service@appliance.com).

**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #  
REQUIRED FOR WARRANTY SERVICE**

# TROUBLESHOOTING & WARRANTY

## LIMITED WARRANTY

Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at **844-299-0879** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)**.

W Appliance Co. agrees that it will, at its option, replace the defective product with either a new or remanufactured unit equivalent to your original purchase during the warranty period.

**Exclusions:** This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If damage is due to general misuse, accidents or acts of God.
4. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
5. On units that have been transferred from the original owner.
6. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
7. To products used in a commercial or rental setting.
8. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
9. To damages for service calls for improper installations.
10. Transportation and shipping costs associated with the replacement of the unit.
11. Service calls to instruct you how to use your product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**Obtaining Service:** To obtain service, product literature, supplies or accessories please call **844-299-0879** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co.. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **844-299-0879**.

W Appliance Co.  
1356 Broadway  
New York, NY 10018



BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names and the orange and black color scheme are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

Product in this box may differ slightly from that pictured. Does not affect function. Not all accessories shown in photography are included in this package.

Imported by W Appliance, Inc., 1356 Broadway, New York, NY 10018