

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>


3-TIER WOODEN PLANT STAND DSL-947


Review all assembly and care information before using this product. Save this manual for future reference.
Assemble components on a soft, clean surface to avoid damaging the finish.



 
 


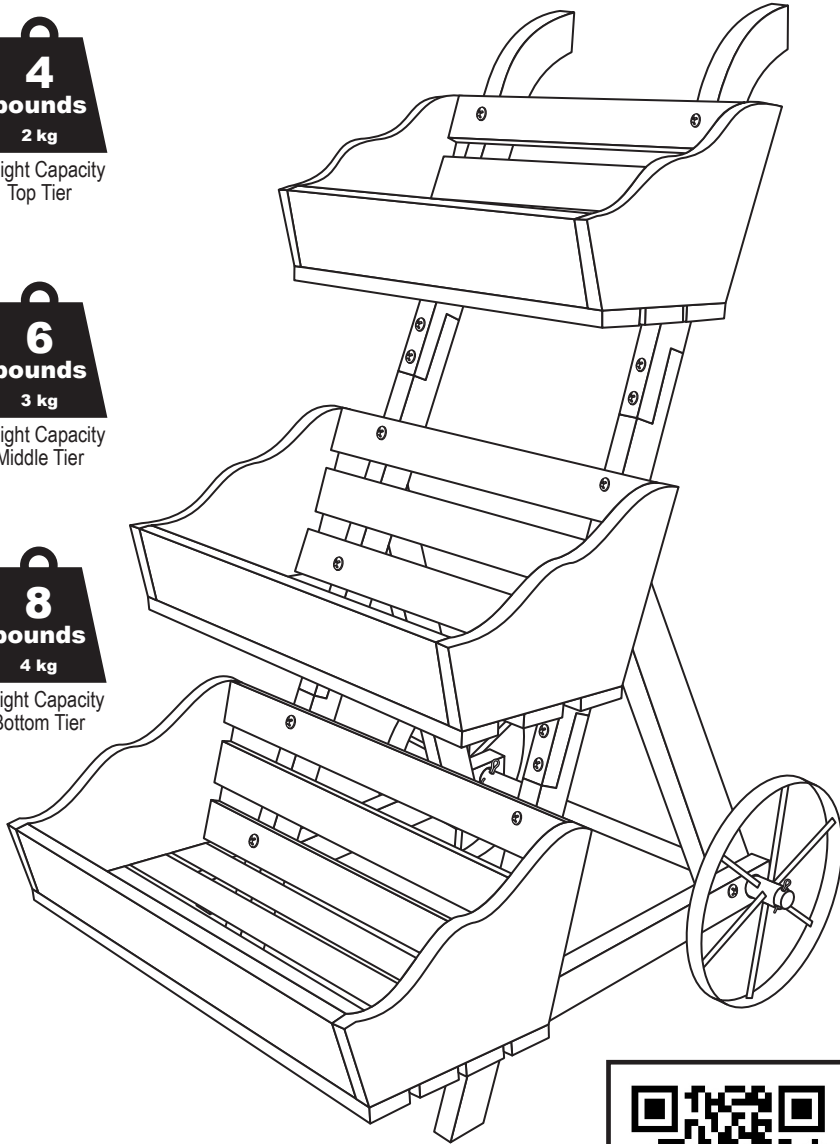


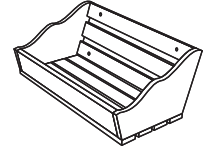
4 pounds
2 kg
Weight Capacity
Top Tier






6 pounds
3 kg
Weight Capacity
Middle Tier


8 pounds
4 kg
Weight Capacity
Bottom Tier



 **Inspect packaging to ensure all parts are accounted for before disposing of packing materials.**
Save the packing slip.

No.	PARTS		QTY.
1		Handle Top	2
2		Handle Center	2
3		Handle Bottom	2
4		Vertical Support	2
5		Horizontal Support	2
6		Wheel	2
7		Axle	1
8		Top Planter Box	1
9		Middle Planter Box	1
10		Bottom Planter Box	1

No.	HARDWARE		QTY.
A		M6x50mm Bolt Set	12
B		M6x65mm Bolt Set	6
C		M6x75mm Bolt Set	2
D		M3.5x30mm Screw	6
E		Cotter Pin	6

 TOOLS REQUIRED (not included)
 Phillips Screwdriver

NOTE: Wood is a natural product. Some checking (splits in the wood) is a normal feature of wooden products. Checking is part of what gives wood decor an authentic appearance.



SCAN THIS CODE WITH YOUR SMARTPHONE TO VIEW OUR ASSEMBLY VIDEO

⚠ WARNING ⚠
CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.


ASSEMBLY

Review all steps and understand assembly before beginning.

Do not fully tighten hardware until all components have been loosely assembled.

STEP 1

- 1: 2
- 2: 2
- 3: 2
- A: 8

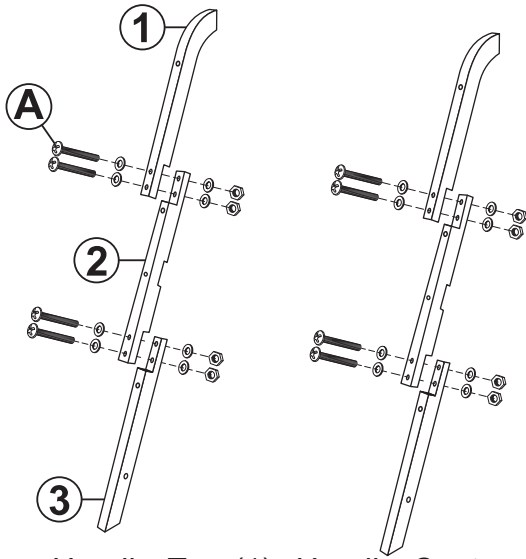


Loosely fasten Handle Top (1), Handle Center (2) and Handle Bottom (3) using four M6x50mm Bolt Sets (A), as shown.

Repeat for the opposite handle.

Do not fully tighten hardware until step 5 is complete.

STEP 2

- 4: 2
- 5: 2
- A: 4
- C: 2

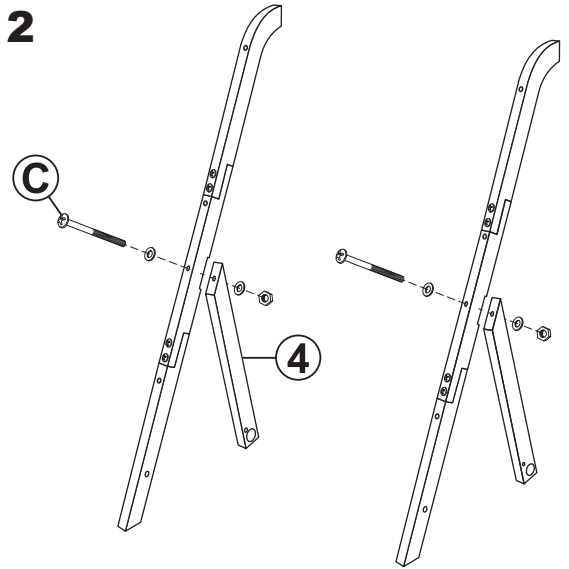


Loosely fasten the angled edge of Vertical Support (4) to the backside of the center handle using one M6x75mm Bolt Set (C).

Repeat for the opposite handle.

Do not fully tighten hardware until step 5 is complete.

STEP 3

- 5: 2
- A: 4

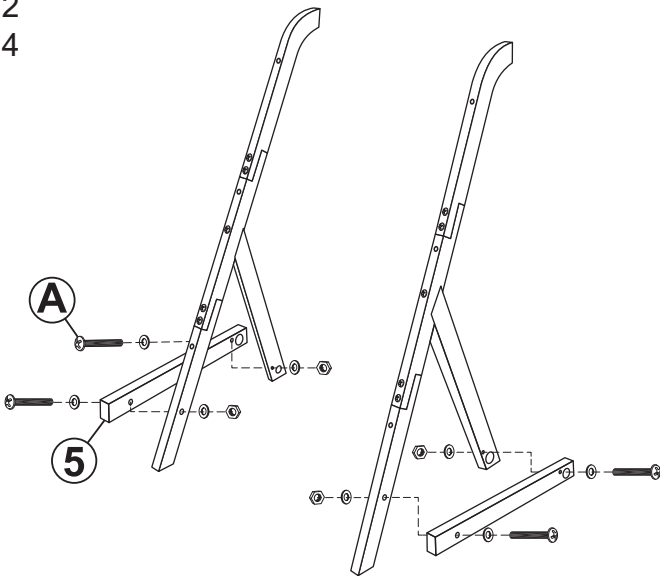

Loosely fasten one Horizontal Support (5) with the outside of the handle using two M6x50mm Bolt Sets (5).


Repeat for the opposite handle.

Do not fully tighten hardware until step 5 is complete.

STEP 4

- 6: 2
- 7: 1
- E: 6

IMPORTANT: Ensure you fully understand this step before installing cotter pins.

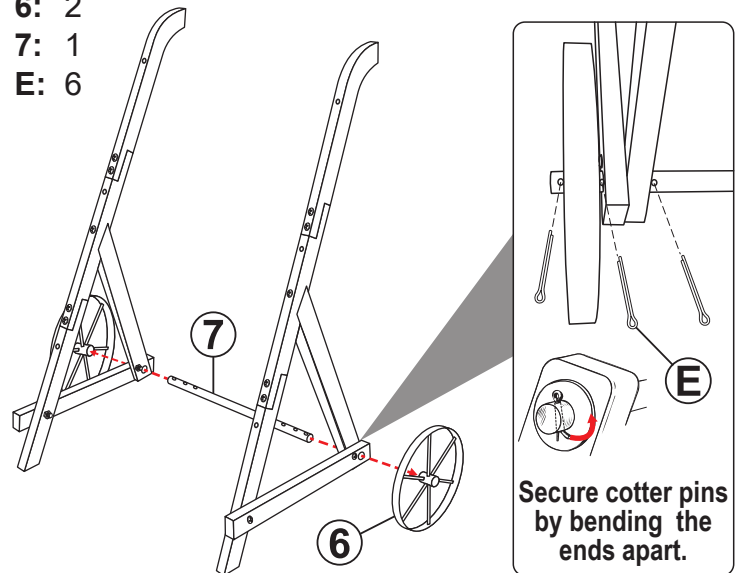

Run Axle (7) between the legs as shown.


Affix one Cotter Pin (E) to the inner-most mounting hole on each side of the axle (inside of handles).

Affix another cotter pin to the center mounting hole on each side of the axle (outside of handles).

Place Wheels (6) on the outside of the axle and affix with the remaining cotter pins.

STEP 5

8: 1
9: 1
10: 1
B: 6

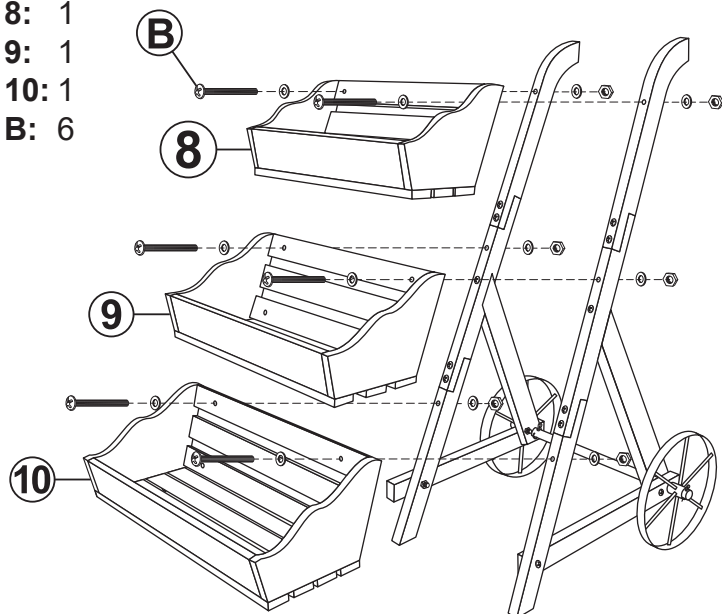


Loosely fasten the top mounting holes of Top Box (8), Middle Box (9) and Bottom Box (10) to the handles using six M6x65mm Bolt Sets (B).

Fully tighten all hardware after this step is complete.

STEP 6

D: 6

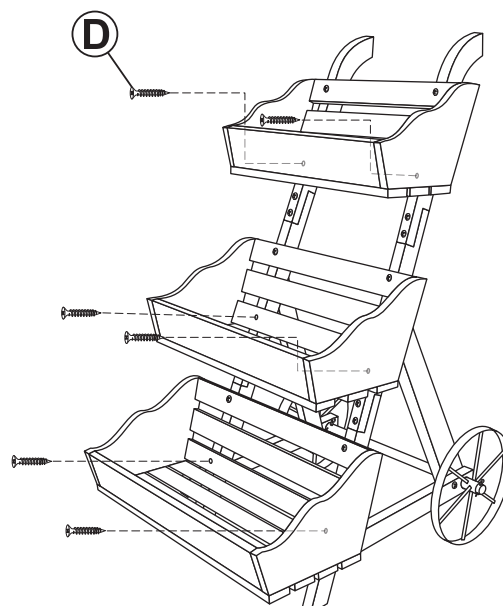

Fasten the bottom of the boxes using six M3.5x30mm Screws (D).

Care & Maintenance

SAFE USE: Only use on a flat, level surface. Do not stand or climb on any part of this unit.

INSPECT: Periodically check hardware and tighten as necessary.

MOVING: Do not move the planter while it is full or in use. Do not let the wooden components drag when moving the unit as doing so will weaken assembly points and could cause breakage.

CLEANING: Follow the woodgrain with a soft brush or cloth to remove dust, dirt and debris. Do not use chemicals or abrasive materials as they will damage the wood and/or finish.

WINTER CARE & STORAGE: Maintain the appearance and prevent damage by emptying and storing this item indoors when not in use.

Wood expands when wet and contracts when it dries. Repeated and excessive exposure to moisture, rain or snow can cause damage to the product. Resulting damage includes, but is not limited to, assembly points becoming loose, wood cracking, mold and mildew growth, and hardware rust.

MAINTENANCE: If left untreated, the wood may weather. To maintain the appearance, apply a suitable penetrating Wood, Teak or Linseed Oil (not included) yearly, or when the wood looks particularly dry.

Clean the unit and bring it into a dry, warm, indoor location. Allow the unit to thoroughly dry before applying oil; drying may take several days. Only apply oil to wooden surfaces. Apply oil as directed by the wood oil manufacturer.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, OR CLEANING PRODUCTS.

SAFETY STATEMENTS & WARNINGS

- Do not exceed the weight capacity of each tier.
- For decorative purposes only; not intended for use as a cart — empty all tiers before attempting to move the planter.
- Inspect hardware often and tighten loose hardware as necessary.
- Do not step or climb on any part of this unit.
- Keep this unit a safe distance from heat sources such as, but not limited to, fire pits, patio heaters, and grills.
- Do not allow children to use this product.
- Do not use harsh chemicals or abrasive materials to clean the furniture.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.