



SKU# 2213416



# Metal Utility Heater With Thermostat

## Features :

- Three Heat settings: High(1500W)/Low(1300W)/Fan only
- Adjustable thermostat with anti-freeze setting
- Supplementary heat coverage up to 150 sq.ft
- Tip-over protection
- Overheat protection
- Stay cool durable metal housing
- 120V A.C., 60Hz., 12.5A, 5120 BTUs



Save These Instructions

## SAVE THESE INSTRUCTIONS:

To ensure the best performance from your heater, please read and save the following instructions.

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSON, INCLUDING THE FOLLOWING:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use grip handle when provided.
- Keep combustible materials such as drapes, furniture, pillows, bedding, papers, clothes, and curtains at least three (3) feet (0.9m) from the front of heater and keep them at least 1 foot(0.3m) from the sides and rear of the heater.
- Extreme caution is necessary when heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not use any heater with a damaged cord or plug or after the heater malfunctions or has been dropped or damaged in any manner. Return heater to manufacturer for examination, electrical or mechanical adjustment, or repair. (See Warranty for information).
- Do not use outdoors.
- This heater is not to be used in bathrooms, laundry areas or other similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throwing rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- To disconnect heater, turn control to OFF then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock or fire or damage the heater.
- To prevent possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use this heater only as directed in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- If the heater will not operate: See specific instructions in Safety Feature explained in this manual.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## CLEANING MAINTENANCE INSTRUCTIONS:

### During Season Care:

- Before cleaning, be sure to turn off and unplug the heater.
- Carefully wipe the unit with a soft, damp cloth. Please be very cautious near the motor and heating elements.
- Do not immerse the heater in water.
- Never use gasoline, benzene or thinner. This will damage the surface of the heater.
- After cleaning, be sure to completely dry the unit with a cloth or towel.

### AFTER SEASON CARE:

- Store heater in a cool and dry location with power cord properly secured.
- Please store the unit in its original carton or suitable container.

## PRE-OPERATING INSTRUCTIONS:

- Carefully remove your heater from the box (please save the carton for off-season storage).
- Make sure the unit is in the OFF position before plugging the heater into the outlet.
- Place heater on a firm level surface.

## USAGE:

### HEATER OPERATION:

- Plug the power cord into a wall outlet (110-120VAC, 60Hz).
- Turn the Select-Control Knob to desired heat setting (1300W for Low or 1500W for High).
- When the unit is turned on the power indicator light will illuminate to tell you that the heater is functioning.

## THERMOSTAT INSTRUCTIONS:

- Before setting the thermostat, allow the heater to operate and warm up the room. You need to set the thermostat on HI to start the heater.
- When the desired temperature/comfort level is reached, lower the thermostat setting until the fan/heater stops operating.
- Turning the knob clockwise will increase the temperature setting.
- The control will now automatically maintain the pre-set temperature level by turning the heater ON and OFF.

Black border shows page size and should not print

## Note:

It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to change the thermostat setting.

## AUTOMATIC TIP-OVER SAFETY SWITCH:

- The Tip-over safety switch is located inside the cabinet housing.
- The tip-over safety switch allows the unit to operate only when the heater is placed on a level surface. If the heater is tipped or tilted while in operation, it will automatically shut off.

## AUTOMATIC OVERHEAT SAFETY CONTROL DEVICE:

This heater is equipped with a patented, technologically-advanced safety internal heat limiting thermostat and over-heat protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off.

## TROUBLESHOOTING:

PROBLEM	PROBABLE CAUSE	SOLUTION
Heater will not power on.	Heater is not plugged into a 120V polarized-outlet/receptacle.	Ensure unit is in OFF position. Plug in unit and attempt to turn on again.
	Breaker/fuse has been tripped	Please check your electrical box to confirm the breaker has not been blown. This may occur if the unit is sharing a receptacle with another high power consuming appliance. Ensure unit is in OFF position. Plug in unit and attempt to turn on again. Attempt to plug unit into another independent output in the house.
The power-indicator light is illuminated, but no heat disperses from the unit.	Room temperature has been warmed up to thermostat setting.	To resume heating, adjust thermostat to a higher setting.
	The fan only function is on.	At this setting, the unit will circulate the air but produce no heat.
The heater is creating a burning smell.	A drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not occur again.	Ensure room in which heater is situated is well ventilated.
	Check and ensure there are no combustible materials within 3' / 1 m of the heater.	Remove the combustible materials preventing air intake into the heater.

**PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF DOING SO WILL VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.**

## LIMITED WARRANTY

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, call 1-888-376-9601. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, over heating or alteration. Repairs made by anyone other than Tractor Supply Co. are not covered in this warranty. Tractor Supply Co. will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either expressed or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Distributed by:  
TRACTOR SUPPLY COMPANY  
5401 VIRGINIA WAY  
BRENTWOOD, TN 37027  
For customer support,  
call: 1-888-376-9601  
www.TractorSupply.com  
MADE IN CHINA

Black border shows page size and should not print

11.0"  
280mm

8.50"  
216mm