INSTRUCTION MANUAL AIR 19






NOTICE Please retain these instructions for future reference.

- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure, crush and cut.
- If any parts are missing,broken,damaged,or worn,stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer' s instructions as this could void the product warranty.



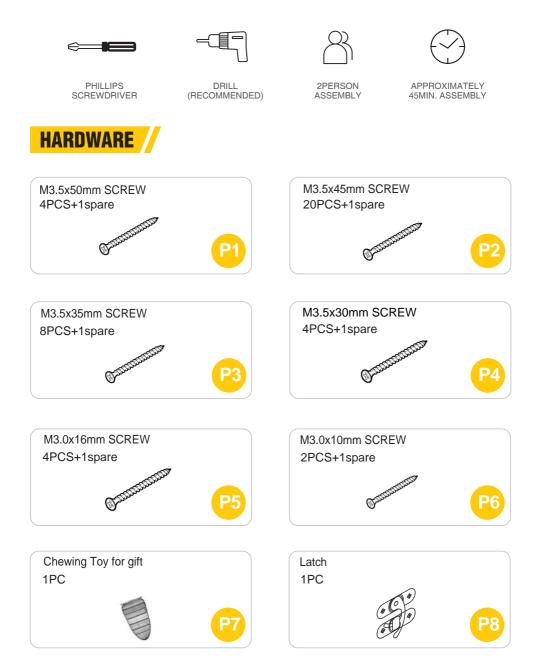











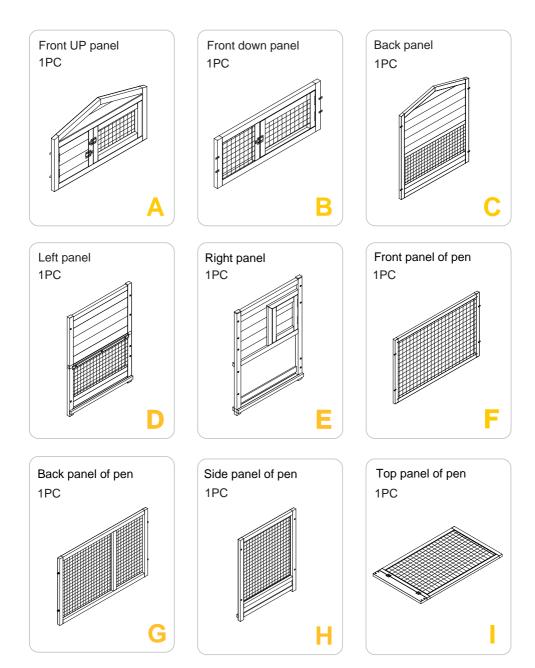




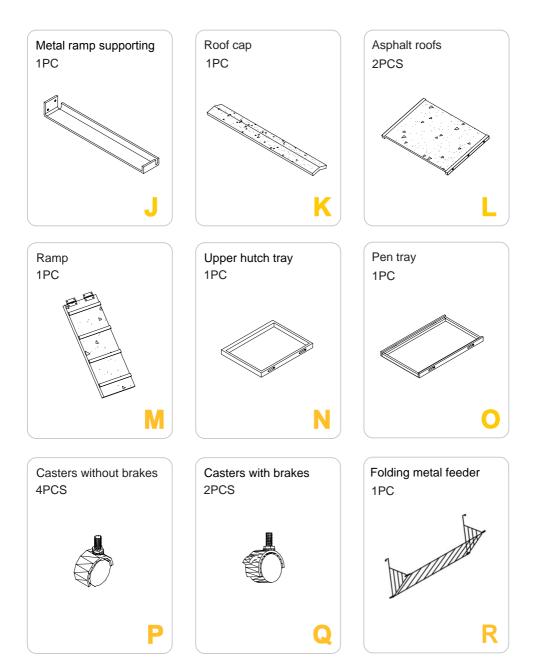





Attach front panel Part A, B & back panel Part C to the right panel Part E by 4xP2 one side and 2xP2 the other side. Notice there are predrill screws holes to direct.

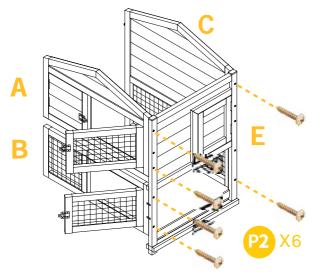





U1


Attach left panel Part D to step 1 by 2xP2 one side and 4xP2 the other side.

Notice there are predrill screws holes to direct.

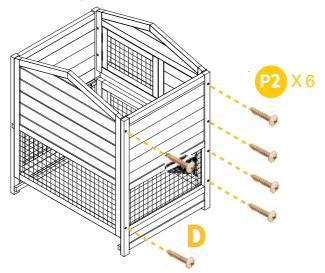


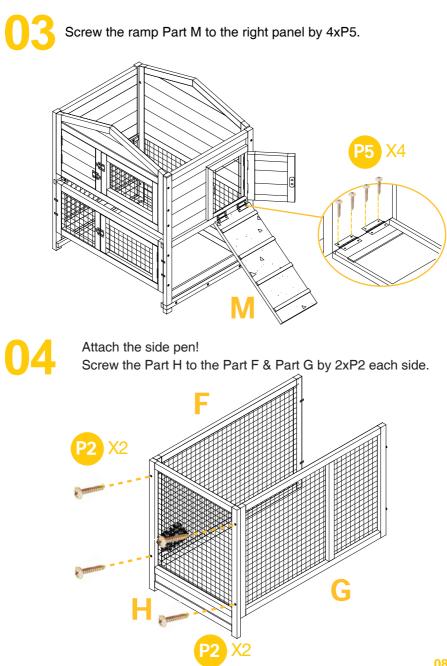



Screw the metal ramp supporting board Part J inside the **back panel of pen Part G** by 2xP9.

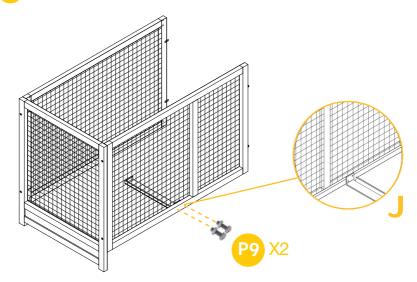


Attach the pen to the wood hutch by screwing 2xP1 each side.

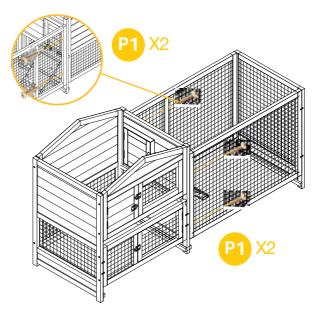

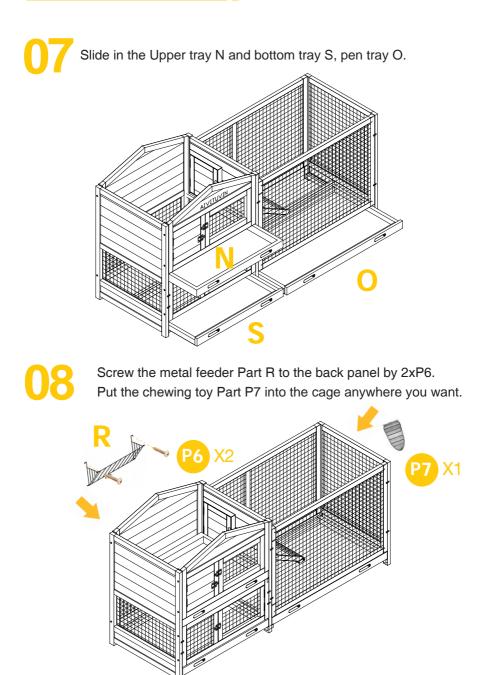

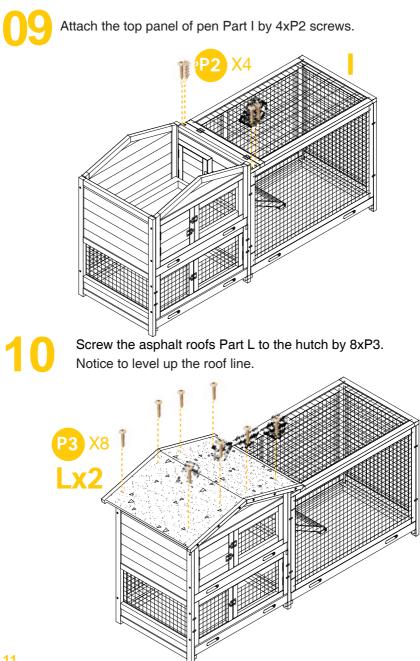




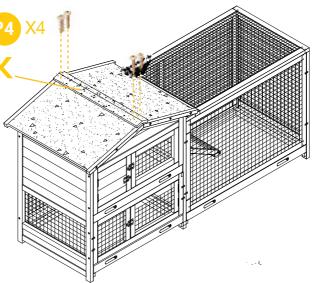




Attach top panel of pen and side panel of pen with 1xP8 by 4xP10 screws.

Screw two brake casters Part Q to the 2 back legs, and one caster without brake Part P to the middle leg.

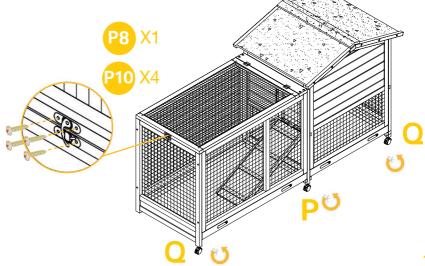

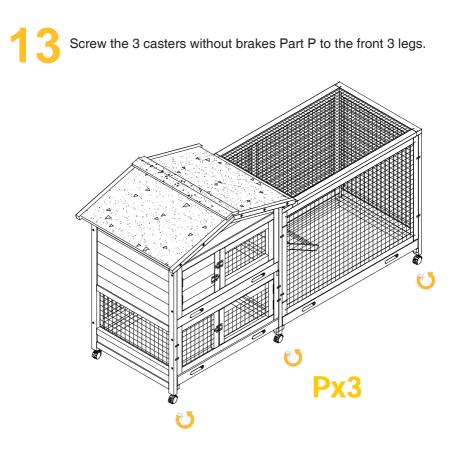



Finish



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate miantenance, or neglect of this product.