


INSTRUCTION MANUAL

AIR 71

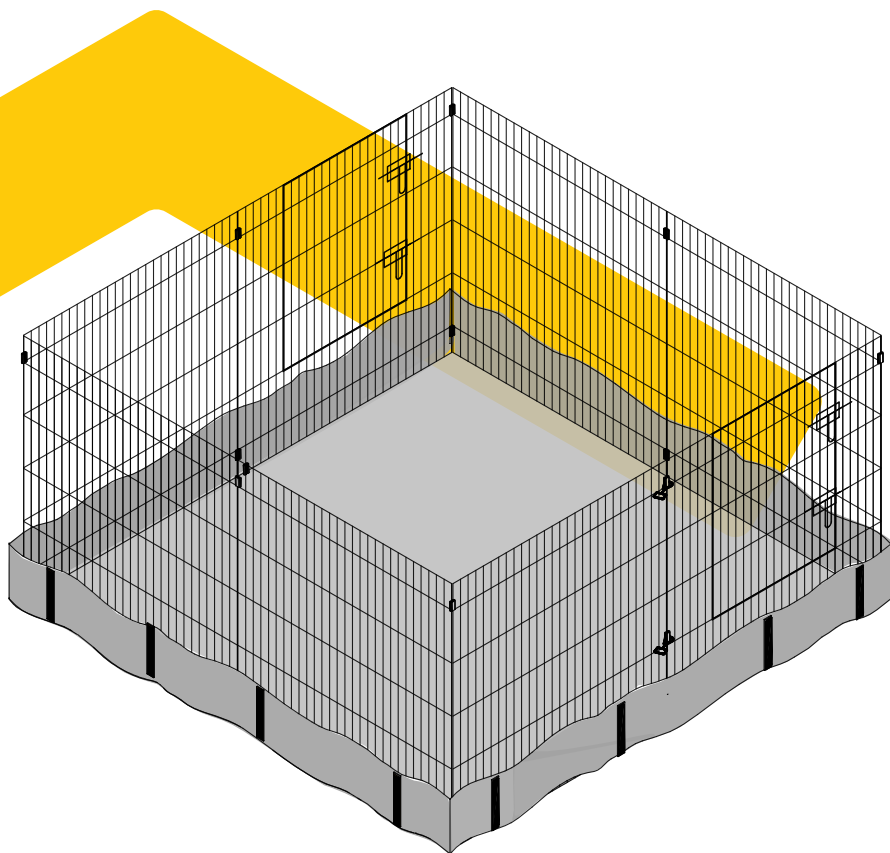



NOTICE

Please retain these instructions for future reference.

- Firmly secure all bolts,screws and knobs before use.
- Reconfirm that all bolts,screws,and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure,crush and cut.
- If any parts are missing,broken,damaged,or worn,stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

HARDWARE //

Hook
2PCS




P1

Hook
8PCS




P2

Foldable Steel Panels
1PC

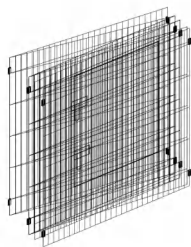

A

Bottom Screen
1PC

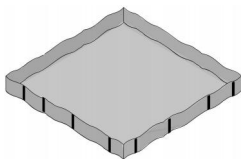


B


PRODUCT ASSEMBLY //

01

Open the playpen.

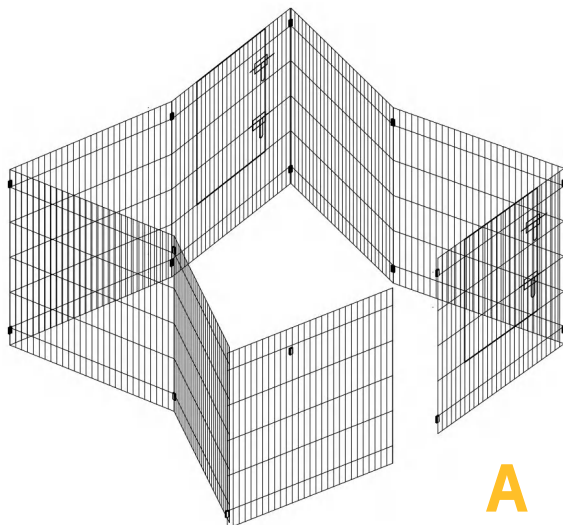

A

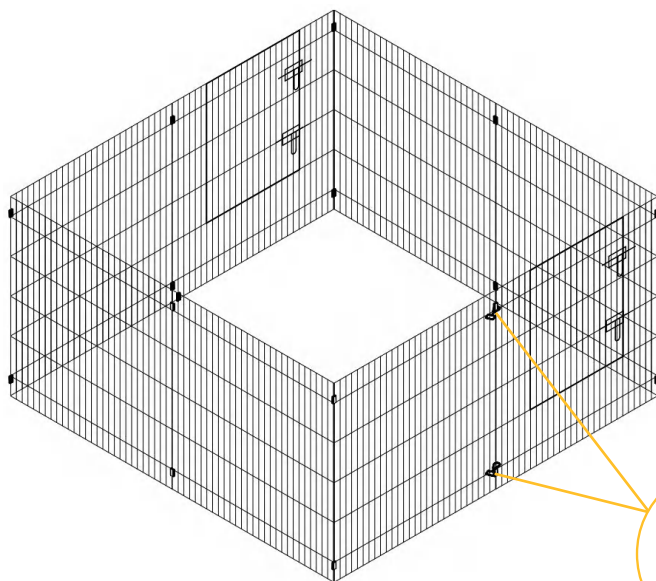

P1 X2




Hook P1x2 to the playpen.

PRODUCT ASSEMBLY //


02

Put the playpen into the bottom screen.

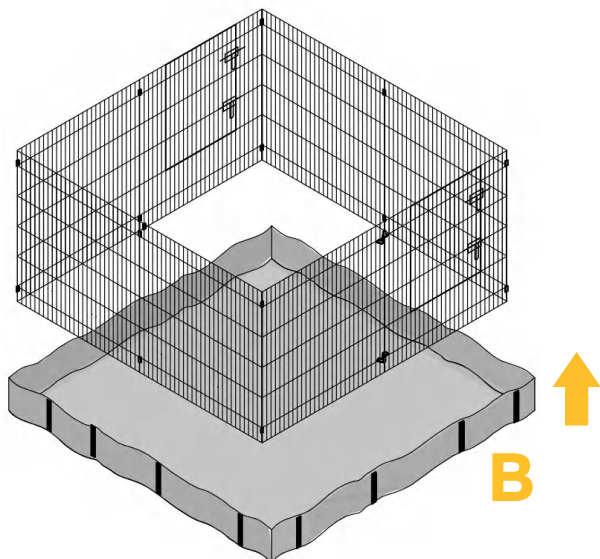


03

Attach the bottom screen to the playpen by the hook & loop.
(Pls stick the four corners firstly)

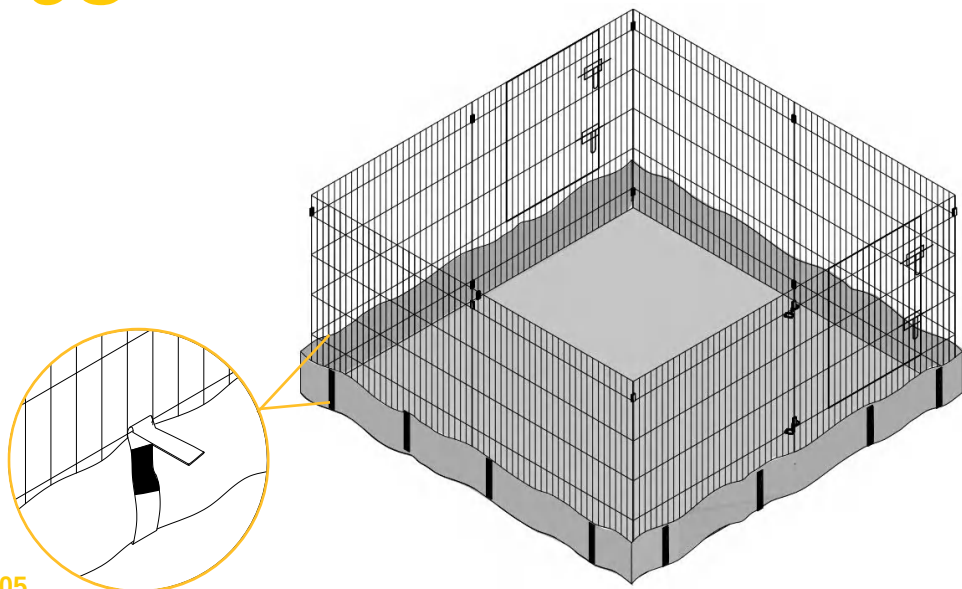

04

Insert the P2x8 into the land to fix position for outdoor using.

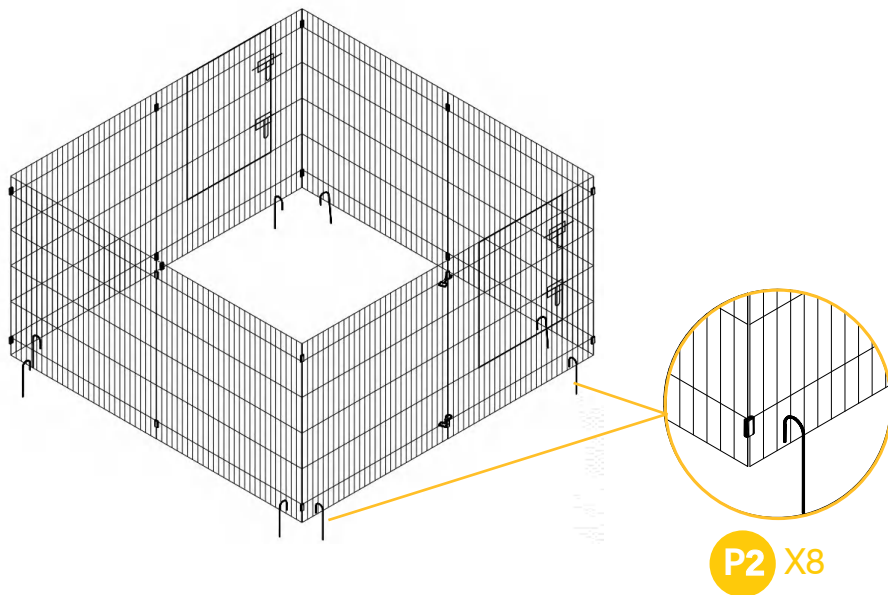

**WARNING**

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.