



## **How to Use and Care for your No Spill can**

**Before Use: Press & release green button to relieve pressure.**  
**Carefully read and follow all warnings and cautions on can.**

### **Instructions:**

1. Press & release green button to relieve pressure.
2. Place spout in target tank.
3. Press green button to start flow.
4. Release green button when fuel reaches desired level.

**To Fill:** Remove nozzle by pressing black tab while turning black collar.

**To Close:** Turn black collar until tight and child resistant locking is fully engaged.

### **Caring for your No Spill can**

- Vent you can regularly by pushing the green button
- Keep the cans full of fuel as much as possible.
- Keep the can out of direct sunlight and keep from extreme temperature swings if at all possible.
- Point the nozzle in a safe direction and press the button to equalize the pressure as often as possible.
- When storing or using keep away from flames, sparks, pilot lights, stoves, heaters, electric motors or switches, lit tobacco and other sources of ignition.
- Never store in vehicle or living space. Store only in a well ventilated area. Use outdoors only