

Troubleshooting / Warranty

Problem

A. The sprayer does not start.

Cause

1. The sprayer is not plugged in.
2. The ON/OFF switch is set to OFF.
3. No voltage at wall plug.
5. The extension cord is damaged or has too low a capacity.
6. There is a problem with the turbine.

Solution

1. Plug the sprayer in.
2. Turn the ON/OFF switch to ON.
3. Properly test the power supply voltage.
5. Replace the extension cord.
6. Take sprayer to Authorized Service Center.

B. No material coming from the sprayer.

1. Material too thick.
2. Nozzle too small for thickness of material.
3. Plugged or dirty sprayer.

1. Thin the material by adding water.
2. Switch to a larger nozzle and/or thin the material.
3. Thoroughly clean the sprayer.

C. Application speed too slow.

1. Nozzle too small.
2. Plugged or dirty sprayer.
3. O-ring on turbine damaged, missing or dirty.

1. Switch to a larger nozzle.
2. Thoroughly clean the sprayer.
3. Clean or replace the O-ring.

D. Sputtering/intermittent flow.

1. Hopper empty.
2. Plugged or dirty sprayer.

1. Fill the hopper.
2. Thoroughly clean the sprayer.

E. Clumpy spray pattern.

1. Material not sufficiently mixed.

1. Mix the material.

F. Material leakage at hopper connection.

1. O-ring on hopper damaged, missing or dirty.

1. Clean or replace the O-ring.

WAGNER ONE-YEAR LIMITED WARRANTY - Keep on File

This product, manufactured by Wagner Spray Tech Corporation (Wagner) is warranted against defects in material and workmanship for one year following date of purchase if operated in accordance with Wagner's printed recommendations and instructions. This warranty does not cover damage resulting from improper use, accidents, user's negligence or normal wear. This warranty does not cover any defects or damages caused by service or repair performed by anyone other than a Wagner Authorized Service Center.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO ONE YEAR FOLLOWING DATE OF PURCHASE. THIS PRODUCT IS DESIGNED FOR HOME USAGE ONLY. IF USED FOR COMMERCIAL OR RENTAL PURPOSES, THIS WARRANTY APPLIES ONLY FOR 30 DAYS FROM DATE OF PURCHASE. WAGNER SHALL NOT IN ANY EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER FOR BREACH OF THIS WARRANTY OR ANY OTHER REASON. THIS WARRANTY DOES NOT APPLY TO ACCESSORIES.

If any product is defective in material and/or workmanship during the applicable warranty period, return it with proof of purchase, transportation prepaid, to any Wagner Authorized Service Center. (A listing of Service Center locations is enclosed with this product.) Wagner's Authorized Service Center will either repair or replace the product (at Wagner's option) and return it to you, postage prepaid.