



Furme[™]

GROOMING VACUUM

USER GUIDE


Professional Pet Grooming Vacuum Kit

Model: FM-01

TABLE OF CONTENTS

Included Parts.....	1
Safety Precautions.....	2-4
Instructions for use.....	5-7
Care and Maintenance.....	8-10
Proper Storage.....	11
Specifications and Support.....	12
Warranty Information.....	13

 INCLUDED PARTS

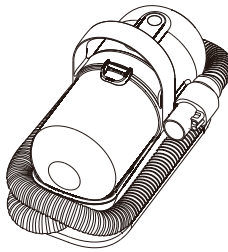

Main Unit



De-Shedding Brush



Grooming Brush



 
AirClipper™



Crevice Nozzle




Cleaning Brush



AirClipper™ Guards



 AirClipper™ Suction Extender

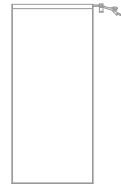

Accessory Storage Bag



HEPA Filter



Black Sponge Debris Filter

Note: If any piece listed above is missing from your package, please contact support for assistance. The filters are pre-installed on your vacuum. The AirClipper suction extender is in the same sealed package as the AirClipper and Guards.

SAFETY PRECAUTIONS

Always follow all safety precautions before using this product. Read and fully understand all instructions in this manual prior to first use.

- This product is for residential use only, not for commercial or industrial use.
- Never allow children to use this product; with or without supervision.
- Never let children or pets play with this product. This is not a toy.
- This product is not suitable for outdoor or humid environments.

DANGER:

To reduce the risk of death or injury by electric shock:

- Do not store in a bathroom or other wet environment.
- Do not touch the POWER button or the product with wet hands.
- Never use on a wet animal or attempt to suction any liquid.
- Do not use this product when the power cord or POWER button are visibly damaged
- Do not use this product if it seems to be functioning abnormally, damaged, kept outdoors, or submerged in water. Please contact support immediately.
- Use this appliance only for its intended use as described in this manual.
- Use only genuine FurMe™ attachments.
- Do not disassemble this product beyond normal instruction in this manual. Doing so will terminate any existing manufacturer's warranty. Any incorrect assembly will risk electric shock, fire, or physical damage or injury. Please contact support for maintenance.
- Do not use near flammable liquids or gases. Do not smoke, vape, or inhale any other combustible substance while using this product. This product is not to be used around fire, smoke, or any other high temperatures.
- Unplug the power cord before performing any routine maintenance.

SAFETY PRECAUTIONS

WARNING:

To reduce the risk of burns, fire, electric shock, or injury to persons:

- Do not crush, disassemble, heat above 100° C (212 ° F), or incinerate the appliance, due to risk of fire, explosion, or burns.
- Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
- Use this appliance only for its intended use as described in this manual.
- Use only genuine FurMe™ attachments.
- Do not use this appliance with damaged or broken blades or broken attachments, as injury may occur.
- Never operate this appliance if it has a damaged cord or battery charger transformer, if it is not working properly, if it has been dropped or damaged, dropped into water. Do not modify or attempt to repair the machine or attachments. Contact Support for examination and repair.
- Do not carry this appliance by supply cord or use cord as a handle. Never pull on the power cord
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening of the machine.
- Do not place or leave the appliance where it is expected to be subject to damage by an animal or exposed to weather
- The new materials used to make this product may have a slight smell on first use. This is normal and will disappear over time. However, if the smell of smoke is present, stop use immediately, unplug your product, and contact support.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered. Do not use clipper germicide cleaners containing phynyl phenol.
- Use only the charger, plug-in transformer and battery pack supplied by the manufacturer
- Do not stack or store heavy objects on top of the machine. Do not clamp the power cord.
- Never block the vacuum opening.
- Do not use fragrances or a fragrance filter with this product.
- Keep the appliance and all attachments dry.
- Empty the collection container after every use or as needed during use.
- Clogged filters or over-full containers risk damaging your machine. Take care to inspect your filters and the fill level in your collection container.
- This product will automatically shut down if the motor overheats. When this happens, shut down your machine, unplug it from the power source, empty the collection container, and clean out the filter. Wait 60 minutes before returning to use so machine can properly cool down. If you rinsed the filter, wait 24 hours for the filter to completely dry before replacing.
- If there is a blockage to the vacuum, the product will shut down. Unplug your machine from the power source, empty the collection container, and clean out the filter. Wait 60 minutes before returning to use so the machine can cool down. If you rinsed the filter, wait 24 hours for the filter to completely dry before replacing.
- If you remove the filter for cleaning or replacement, be sure to install it back into the machine prior to use. The product could be damaged if use occurs without a filter.

SAFETY PRECAUTIONS

 
For answers to frequently asked questions, visit our website at www.shopFurMe.com or scan the QR Code below with your smartphone.

Most importantly, review our steps on how to introduce furMe™ to your pet for the first time prior to your first use. See the link "Product User Manual" on the QR code below to find this post.





INSTRUCTIONS FOR USE

Prior to use, ensure the container is securely on your machine in the direction illustrated below

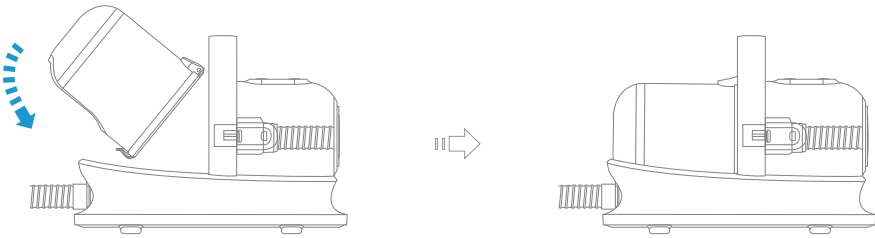

Attachments for your machine

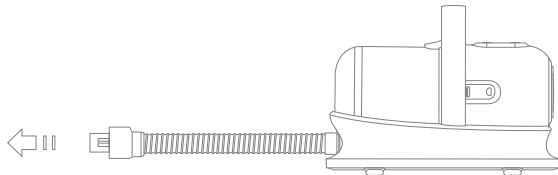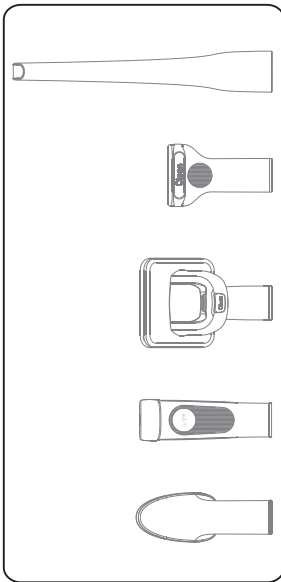  


Each attachment included can be connected to your machine at the end of the hose. Push the attachment tightly onto the hose until you hear a click.

To release the attachment, simply pull with one hand on the attachment and the other on the black end of the hose. Do not pull from the hose itself.

Read all safety precautions prior to use. Details on each attachment can be found on page 7.

INSTRUCTIONS FOR USE

 Speed Controls

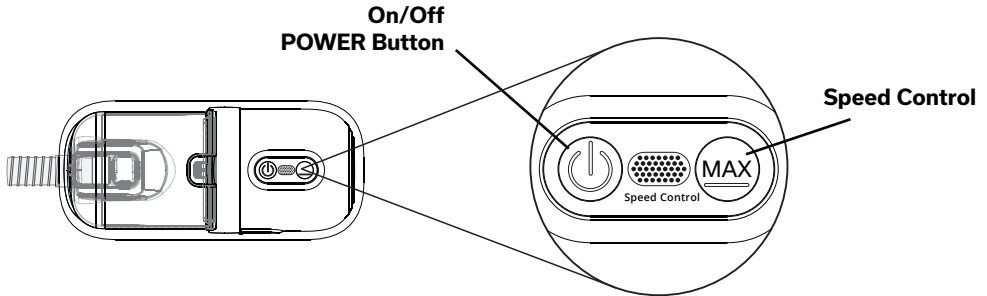

Your machine has three (3) suction speeds:

 
- Whisper (LOW)**
- Normal (MEDIUM)**
- Boost (HIGH)**

To turn your machine on, press the **POWER** button once.


By default, your machine will start in **whisper (LOW)** mode. This is the quietest setting.

To adjust the speed of the suction, press the **MAX** button. Your machine will toggle through each speed with each press.


It's recommended that you start **LOW** with your pet then adjust if necessary.

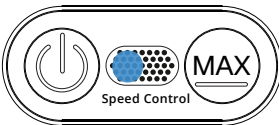

Whisper (LOW) Mode

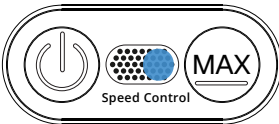 

Normal (MEDIUM) Mode

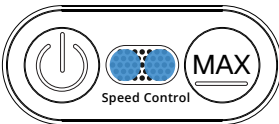 

Boost (HIGH) Mode

INSTRUCTIONS FOR USE

Attachment Uses

 
De-Shedding Brush: Remove your pet's heavy undercoat or loose fur.

This attachment may be used on most animals that shed. Do not use this attachment on non-shedding breeds or on pets with sensitive skin. **Never use on wet fur or hair.** Before using this attachment, perform a complete physical inspection of your pet. Look for sores, bruises and skin conditions, which your pet's coat may conceal. If your pet has any of these conditions, seek treatment from a veterinarian before brushing.

Use this attachment like a brush. Start at your pet's head and work in short, gentle strokes down it's back. Use extra care near the stomach or other more bare areas.

Avoid excessive repeating strokes in a single area.


When the comb is full, press the CLEAN lever to release the captured hair. The hair will be collected in the attached container by the suction of the vacuum.

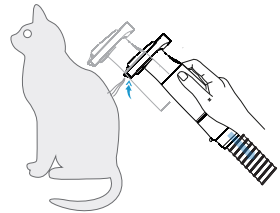

Grooming Brush: Brush out loose hair and tame unruly long fur.

Before using this attachment, perform a complete physical inspection of your pet. Look for sores, bruises, or skin conditions, which your pet's coat may conceal. If your pet has any of these conditions, seek treatment from a veterinarian before brushing. **Never use on wet fur or hair.** Use this attachment like a brush. Start at your pet's head and work in gentle strokes down it's back. Use extra care near the stomach or other more bare areas.

 
When the brush is full, press the CLEAN lever to release the captured hair. The hair will be collected in the attached container.

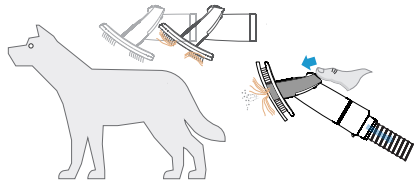

AirClipper™: Trim or shave your pet's hair to a desired length with included guards.

Snap the included Suction Extender on your AirClipper™ for better suction into the machine while clipping shorter hair. Your AirClipper™ has 3 (three) lengths on the attachment. To reduce the length, slide the black adjuster button up to the lowest blade setting. To increase, press the blue self-locking button to release the black adjuster and slide the adjuster down. If longer lengths are desired, attach one of the genuine FurMe™ Guards.

 Only use this attachment with Whisper (LOW) and Normal (MEDIUM) speed settings. Trimmings are automatically collected in the attached container.

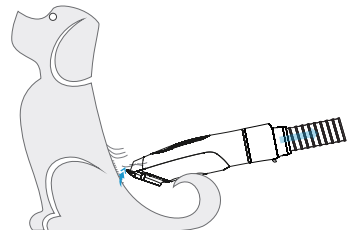




Cleaning Brush: Vacuum up loose hair or other debris with this soft, bristled attachment.

Crevice Nozzle: Vacuum up loose hair or other debris in hard-to-reach areas.

CARE AND MAINTENANCE

Emptying your collection container

   1. Use your thumb to apply light pressure on the end of the container to release and lift up in the direction illustrated below to remove the container from the machine.
2. Push the gray release lever to open the container lid to empty the contents into the trash. Wipe off your metal filter if any debris remains.
3. Close the lid and mount the container back on your machine in the direction illustrated below.

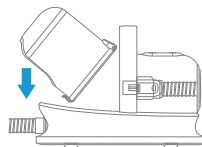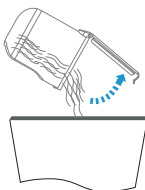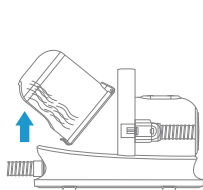

Note:

Please take care when handling your collection container. If the collection container is washed, allow the container to fully dry before re-mounting on your machine. Any moisture could cause risk of electric shock or damage to your machine.

Cleaning your AirClipper™

 
1. Retract the adjustable blade setting to the lowest position and remove the clear suction extender that snaps on and off.
2. Use your machine to vacuum any hair or debris from your blade and AirClipper. Use a lubricant on the blade as needed (not included).

To remove the blade, hold the AirClipper with the furMe logo facing you. Using one or both thumbs, press firmly on the top of the blade to release it from the AirClipper.


To put the blade back on your AirClipper, anchor the base of the blade into the clipper by placing the small tab protruding out of the base of the blade into the slot opening of the clippers. With that tab in place, then press the top part of the blade into the clipper with a little bit of force using your thumb. It should snap right in.



Blade

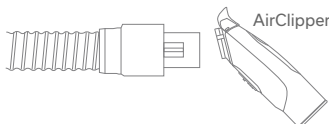

AirClipper

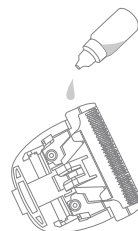 


CARE AND MAINTENANCE


HEPA Filter Cleaning

Your filter should be cleaned at least once a month with the below steps. Take care to clean more regularly if your machine is used frequently.

 1 Unplug your machine from electrical power.

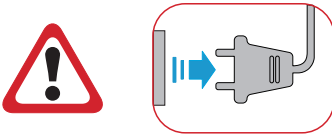

 2 Remove the collection container from your machine and remove your filter.

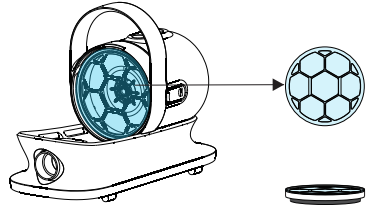


3 Rinse your filter with cold tap water. Shake off any excess water.



4 Allow the filter to completely dry in a well-ventilated area for at least 24 hours.



 5 When the filter is completely dry, install the filter back on the machine.

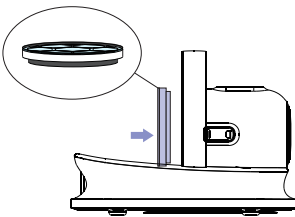

Never install a wet filter on your machine.

 


CARE AND MAINTENANCE


Metal Lid and Sponge Filter Cleaning

Your collection container lid is a metal filter that is fit with a sponge filter as well. This should be cleaned at least once a month with the below steps. Take care to clean more regularly if your machine is used frequently.


1 Unplug your machine from electrical power.

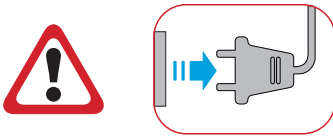

 2 Remove the collection container from your machine and remove your black sponge filter from the container.

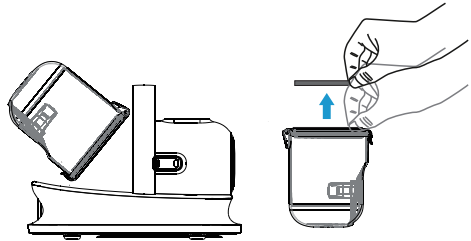

 3 Clean both your metal filter on the lid and the sponge with cold tap water. Squeeze out any excess water from the sponge.

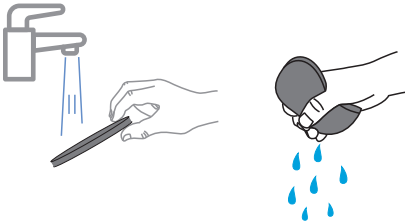



4 Allow the filters to completely dry in a well-ventilated area for at least 24 hours.



5 When the filters are completely dry, fit the sponge back onto the metal lid and ensure a correct fit onto your collection container.



  
Never put a wet filter on your container.

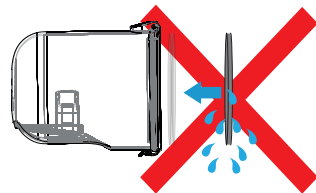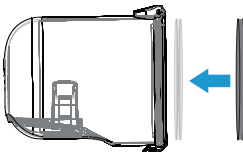

Please visit our website if you need to order any replacement filters, blades, or other parts www.shopfurMe.com


PROPER STORAGE

 Hose Storage

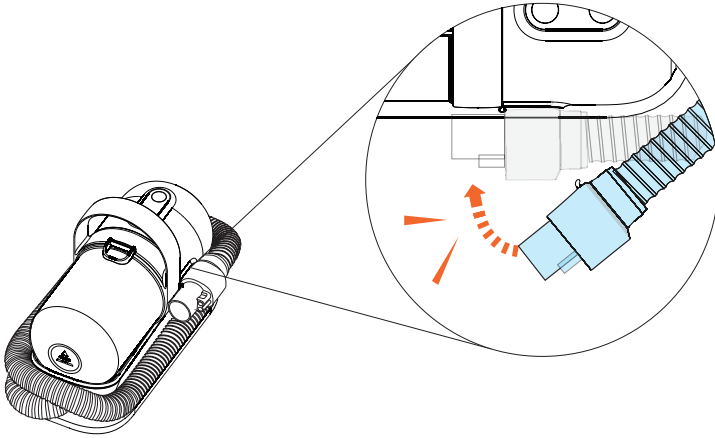

Wrap the hose clockwise around the machine about 1.5 times. Locate the gray plate with a tab and two holes on the side of your machine. Secure the hose by anchoring the protruding piece into the first hole, then press the top of the hose into the other side of the plate until it depresses the tab and clicks into place.

 Power Cord Storage

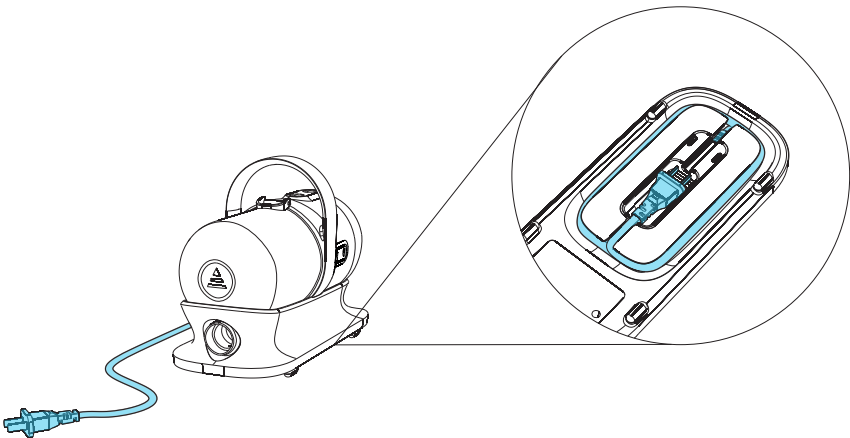

Unplug the power cord from the electrical source. The cord should be completely wrapped into the designated storage area underneath the machine. Store all accessory parts in the included storage bag.

PRODUCT SPECIFICATIONS

Model Number: FM-01

UPC: 850023971760

Voltage: 120V

Power: 300W

Net Weight: 4.19 LBS

Unit Dimensions: 11.42 x 5.20 x 8.27 in

Materials: ABS/Metal/PC/PP

Max Noise Level: 75dB

Collection Container Size: 1L

Hose Length: 4.3 ft

Power Cord Length: 8.2 ft

**Have a question? Contact us by scanning
the QR Code below with your smart
phone, or by visiting us at
www.shopFurMe.com**



WARRANTY INFORMATION

We extend a warranty against defects in material and workmanship to the original purchaser of the products manufactured by furMe Technology, LLC beginning from the date of purchase subject to the terms and conditions of this warranty.

furMe Technology, LLC warrants the Covered Product to be free of all defects in material and workmanship for 12 months from the date of purchase. Within the period of this warranty, furMe Technology, LLC will repair or replace, free of charge; any part proving defective in material or workmanship upon return of the defective furMe Technology, LLC product from the original purchaser with proof of purchase from an authorized seller. Because furMe Technology, LLC cannot control the quality of products sold by unauthorized sellers, this warranty applies only to products that were purchased from an furMe Technology, LLC authorized seller, unless otherwise prohibited by law.

If the machine is damaged or malfunctions during normal use, it will be repaired free of charge within the warranty period. If it cannot be repaired, a replacement will be provided. All warranty repairs and service must be performed by an authorized furMe Technology, LLC technician, or at an authorized furMe Technology, LLC service facility.

This warranty does not apply to any costs, repairs, or services for the following:

1. Damage resulting from misuse, abuse, accidents, carelessness, alterations, or improper installation.
2. Damage caused by pets (scratches, bites).
3. Failure and damaged caused by fire, earthquake, and any other natural disasters.
4. Equipment use outside of the intended consumer/residential setting.
5. Alterations or corrective work necessitated by repairs made by anyone other than an furMe Technology, LLC authorized service technician.
6. Products not purchased directly from FurMe™ sales channels or authorized retailers (e.g personal sales, auctions, etc.)
7. Product is a consumables or accessory. Consumables and accessories are not subject to warranty.
8. If 12 months lapses after the purchase date.

Shipping cost will be reimbursed by FurMe™ when the product is covered by warranty service. However, the cost of packaging materials will not be covered. If it is not covered by the warranty, shipping cost and repair fees will need to be charged when returning.

The warranty period for the exchanged product is subject to the warranty period before the exchange (counted from the original purchase date). Repair or replacement is only valid in certain countries.

Please contact hello@shopFurMe.com for guidance if you have a question or need to initiate a repair.

Regulations may be changed without notice. FurMe™ reserves the rights to update warranty when needed. All repairs and request will be handled according to the most updated warranty.

Furme™

FURME and AIRCLIPPER are registered trademarks of FurMe Technology LLC.

© 2023 FurMe Technology LLC, Wilmington, DE 19802

PATENT PENDING