

ISOtunes®

AIR DEFENDER

AM/FM Radio Earmuffs



TABLE OF CONTENTS

FITTING.....	2
BATTERIES.....	2
BUTTON FUNCTIONS.....	3
VOLUME FUNCTION.....	3
POWER ON/OFF.....	4
RADIO CONTROLS.....	4
MEMORY PRESETS.....	5
AUX CORD.....	5
CLEANING & MAINTENANCE.....	6
NEED SUPPORT?.....	6

FITTING

- 1 Pull the earcups apart. (Figure 1)
- 2 Place the product on your head. (Figure 2)
- 3 Adjust the earcup position by extending the headband to ensure a good fit around the ears. (Figure 3)

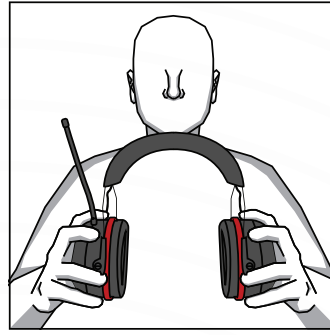


Figure 1



Figure 2



Figure 3

BATTERIES

These earmuffs use 2 AA batteries (not included) and will hold a charge for up to **60 hours**, depending on usage. Once the batteries have been depleted, they will need to be replaced. You will find the battery compartment on the back of the left earmuff.

- 1 Push down on the small clip at the top of the battery door and pull it forward, opening the battery compartment.
- 2 Place the 2 AA batteries in the battery compartment. Ensure you have oriented the batteries correctly.



BUTTON FUNCTIONS

○ Memory Button

— Tune/Seek Down

⏻ Power/Audio Mode

+ Tune/Seek Up

Volume Knob



VOLUME FUNCTIONS

To adjust the volume, turn the volume knob on the bottom of the right earcup.



POWER ON/OFF

POWER ON

Press and hold the power button. You will hear "Power On."

POWER OFF

Press and hold the power button. You will hear "Power Off."



RADIO CONTROLS

CHANGE RADIO MODE

Press the Power Button once to rotate between AM and FM modes.

RADIO TUNING

Tune: Go up by one station number

Single press the left minus (-) button or right plus (+) button to tune up

Seek: Jump to the next available station

Press and hold the left minus (-) button or right plus (+) button to seek up



MEMORY

MEMORY PRESET STATIONS

- 1** To save a favorite station, first tune to the desired station.
- 2** Press and hold the memory button (O) for 1 second, the display should flash once and the preset number should appear.
- 3** Press the left minus (-) button or right plus (+) button to adjust the preset number.
- 4** Press the memory button (O) again to save the station in the selected preset.
- 5** Press the memory button (O) to cycle through and access a memory preset station.



AUX CORD

To listen to music via the line input use the 3.5 mm audio cable included. Insert one end into the AIR DEFENDER and insert the other end into your phone or other personal media device.

Will not work for phone calls.



CLEANING & MAINTENANCE

TRILOGY™ foam ear cushions should be regularly inspected for deterioration, cracking, or other damage. TRILOGY™ cushions are disposable and should be replaced over time. **We recommend replacing your ear cushions every 1- 3 months or when they become damaged.** Additional AIR DEFENDER AM/FM ear cushions are available at [ISOtunes.com](https://www.isotunes.com).

Ear cushions can be cleaned in between uses with a damp cloth and water.

- Clean your product by gently wiping them with a clean, damp cloth with mild soap.
- Do not immerse the product in water.
- Do not use abrasive cleaning solvents to clean the product.
- If the products get wet from sweat or rain, please discontinue use, and allow them to dry.

NEED SUPPORT?

CONTACT CUSTOMER SERVICE

USA & Canada

support@isotunes.com

+1 (317) 740-0419

Mon-Fri 9:00 AM - 5:00 PM EST

UK & Europe

uk-eurosupport@isotunes.com

SUBSCRIBE AND SAVE



Receive automatic eartip and/or ear cushion replacement deliveries. No commitments, obligations, or surprise fees.

Visit:

[ISOtunes.com/replacements](https://www.isotunes.com/replacements)

ISOtunes

CONNECT WITH US ON SOCIAL MEDIA

Show us your **#ISOtunes** in action!

