



LED LIGHTED FRAME


BATTERY INSTALLATION

Adult installation required.
3 AA Batteries are required but not included.
The battery compartment is located on bottom of the swing.
Three screws are used to secure the battery cover.
Use #1 Phillips screwdriver to remove screws and cover.
Insert 3 "AA" Batteries
Replace battery cover and secure with screws.
Make sure battery cover is properly sealed to keep out moisture.


- Press button under swing to activate LED lights. Swinging motion of the swing will keep light enabled. Lights will automatically turn off after several minutes of non-use / non-motion.
- When lights get dim or go out, replace with new AA batteries.

BATTERY WARNING:

Battery Acid Leakage can cause severe injury to people and cause significant damage to the product and to property that comes within contact with it. If battery leakage occurs, wear hand and eye protection and wash with water and baking soda (if available) and make sure to not get acid on your clothing – wash them immediately or damage may occur. If you get acid on your body, rinse with water immediately and seek medical attention. Dispose all batteries according to Local, State and Federal Law.

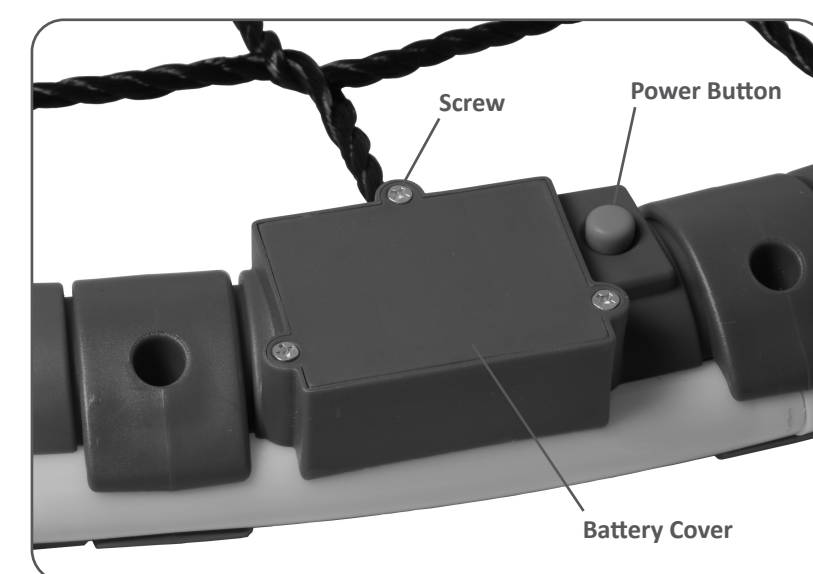


(All images shown are for illustration purpose only. Actual product may vary due to product enhancement)

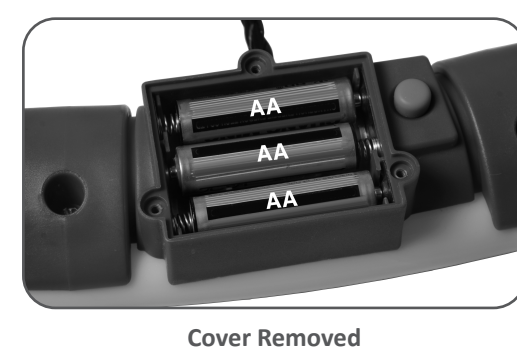


Cover Removed

WEB RIDERZ WEB SWING INSTALLATION INSTRUCTIONS


- Do not install web swing over concrete, asphalt, packed earth, or any other hard surface.
- Confirm that the supporting structure is secure, it will support at least 400lbs., is over level ground, has a minimum height of 7 ft. and is no less than 6 ft. on all sides from vertical elements. Web swing should have a clearance of at least 1.5 times the total length of all the rope measured from the tree limb/horizontal beam to the spring clip(s) attachment point.

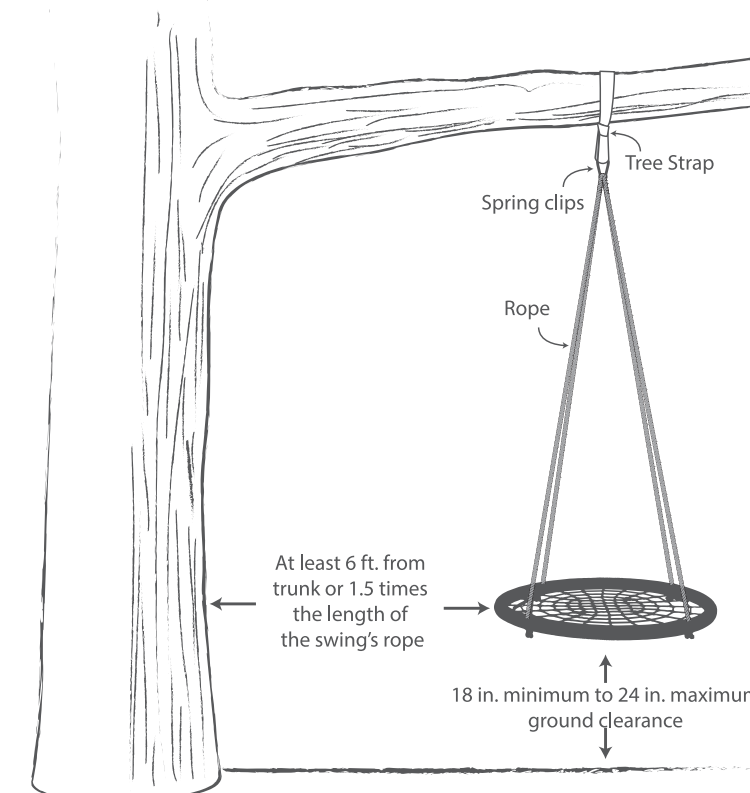

CLEARANCE REQUIREMENTS

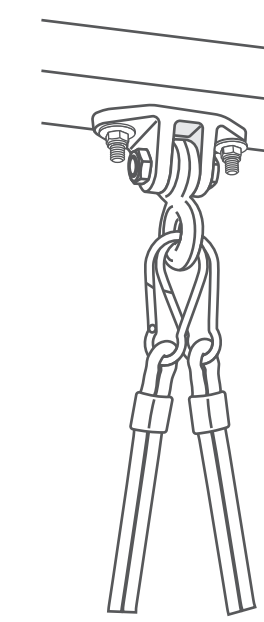

SINGLE ATTACHMENT EXAMPLE

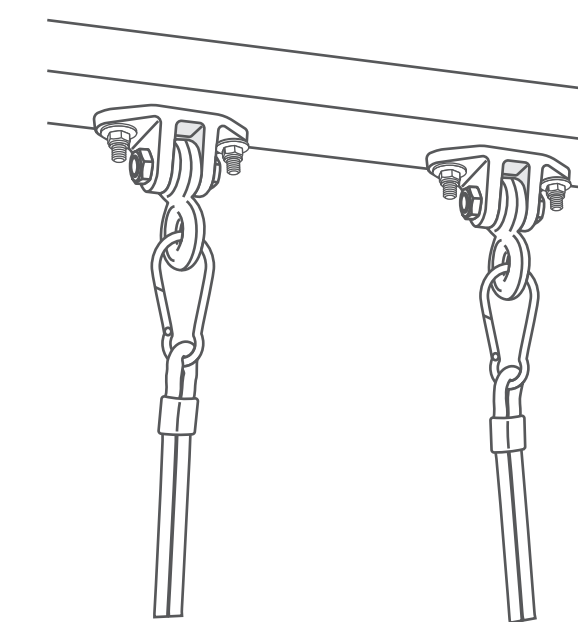

DUAL ATTACHMENT EXAMPLE

ADJUSTING SWING HEIGHT - This swing has adjustable S-hooks that allow you to adjust the hanging height of the swing. Recommended swing height is 18-24 inches above ground.
TREE LIMB ASSEMBLY - Test tree limb to ensure that it will hold the weight limit of 200 lbs. safely. Bottom of swing should be no more than 24in. and no less than 18 in. from the ground.
SWING SET OR OTHER HORIZONTAL BEAM ASSEMBLY - Attach the web swing to a swing set by removing two sets of swings from the existing swing set and attaching the spring clips to the chain support hooks. Allow 1.5 times the total length of the rope to the spring clips for clearance on each side of the swing from stationary objects or other swinging elements of any kind. Bottom of swing should be no more than 24 in. and no less than 18 in. from the ground.

OPERATION INSTRUCTIONS

- An adult should supervise play on this product for children of all ages.
- Only for family domestic outdoor use.
- Dress children appropriately, including wearing well-fitting shoes that protect feet.
- **INSTRUCT CHILDREN:** Avoid swinging empty swing platform. Never swing higher than hook attachment. Get off the swing only after it has completely stopped and hold the rope until both feet are planted firmly on the ground. Remove articles that create hazards when they get tangled and caught (examples include: ponchos, scarves and other loose-fitting clothing, bike helmets) before playing on equipment. Do not walk close to, in front of, or behind moving items.

MAINTENANCE INSTRUCTIONS

- At the beginning of each season and at least twice monthly during usage, treat ropes with a Teflon-based lubricant.
- Before each use, check the ropes, knots, support, and all connections for evidence of deterioration, excessive wear, fractures, breaks or sharp edges and replace as necessary.
- Take swing indoors when temperature drops below 32°F.
- **WARNING:** Failure to carry out these checks and inspections could result in a fall or injury.



Adult supervision and installation are required. See product instruction card for complete assembly and usage instructions.

This product is for children ages 5+
Maximum user weight is 400 lbs
NOT FOR COMPLETE DARKNESS

Requires 3 AA batteries. When lights start to dim, replace batteries as shown above.

Do not mix old batteries with new batteries. Do not mix alkaline standard (carbon, zinc) or rechargeable (NI-CAD, NI-MH, etc.) batteries.

SAFETY INFORMATION

To reduce the likelihood of injury please follow the guidelines as outlined in this manual. You can also visit our website (www.mandsalesinc.com) to review Section 4 of the Consumer Product Safety Commissions Outdoor Home Playground Safety Handbook. Your M&M Web Riderz Swing has been tested to ensure safety and complies with: ASTM F1148 Standard Consumer Safety Performance Specifications for Playground Equipment of Public Use, and CPSIA Specifications for lead paint.

Warranty: Limited - 90 day warranty from purchase date.

Do not return to retailer if help is needed. Please contact M&M Sales Enterprises, Inc. at our phone/email/website noted on front side of this instruction card.

