

# ICOTec

# Rascal

Wildlife Audio Attractor  
Operating Instructions



## Play sounds from your Rascal via your phone!

The ICOTec Rascal with Bluetooth allows you to stream audio files from your phone. Place 4 AA batteries in your Rascal, turn it on, locate the Rascal on your phone's Bluetooth list of devices, and connect. You are ready to play any sound files on your phone. Launch an audio app like Animal Audio and play from a large list of professional animal sounds and get ready! You are about to see and hear wildlife like never before.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ICOTec is under license. Other trademarks and trade names are those of their respective owners.

## ICOTec TNT Power Kit

ICOTec offers a high efficiency  
AA battery kit. 2700mAh @ 1.2V

- 4 AA NIMH Batteries
- USB Rapid Charger
- AC/DC Power Inverter



Battery kit sold separately.

## To purchase accessories, batteries, decoys, tripods, remotes, merch & more... logon to [icotec.com](http://icotec.com).

*ICOTec offers a discount for current and former military, law enforcement officers, EMT and firefighters. We call it our Patriot Discount. Logon to ICOTec to learn more.*

### Always Test Your Batteries Before You Leave The House!

The ICOTec remote control, and caller have integrated battery level sensors for your convenience. REMOTE - Turn on remote power, press and hold any call button, if the LED blinks then it needs changed. CALLER - Turn power on, play two calls at the same time by pressing two separate call buttons, if the LED blinks then change the batteries.

### 2 YEAR LIMITED WARRANTY (Register within 15 days of purchase)

Your ICOTec product is warranted to be free of material defects and workmanship for 2 years after the date of purchase. In the event of a defect under this warranty, we will, at our discretion, repair or replace the product provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling or improper repairs performed by someone other than an authorized service contractor. Any return made under this warranty must be accompanied by the items listed below:

- 1) Contact Customer Service for instructions. You will need to complete a Warranty Claim form online prior to shipping product back to ICOTec. For service call (419) 450-3566 or email [service@icotec.com](mailto:service@icotec.com).
- 2) Proof of purchase with date of purchase (store receipt)
- 3) Product should be well packed in a sturdy shipping carton with return postage prepaid to the address provided in your Warranty Claim Form.

This warranty gives you specific legal rights. Specifications and product designs are subject to change without notice or obligation.



## Animal Audio App Instruction Guide

\* Please refer to FAQ in app for up-to-date instructions. These instructions were compiled during development and may have changed slightly by the time the app is available.

**Step 1** – Download Animal Audio from Apple App Store or Google Play depending on your smartphone operating system. Then, sign up for a free account.

**Step 2** – Sign in to your Animal Audio account.

**Step 3** – Tap the “Sounds” icon located on the toolbar to browse available sounds. You will see “All Sounds,” “Categories,” and “Creator” at the top. These are different ways to sort through which sounds are available for download or purchase.

**Step 4** – Downloading sounds is very simple. Search for a sound that you like with a \$0 price and click “GET”. The sound will download to your device, and be stored in the “My Library” section of the app. You now have access to a new sound file through the Animal Audio app even if you do not have cell service. This sound will play to any Bluetooth device.


**Step 5** – To view all the categories that you have sounds located in, select “My Library” from the toolbar. You will see an animal species category listing in which you have a sound file located. By tapping the “+” icon next to a category, you will see all of the sounds that you own within that category.

**Step 6** – Press the “Playlist” icon in the toolbar at the bottom of the app. To name your playlist, click in the “Playlist Name” text input field at the top of the screen. Tap the “+” icon next to a category, then tap the square to add that particular sound. When you’re done adding sounds, tap “Save” at the bottom of the screen.

Open your playlist to set up your sound settings. “Select Coax” lets you select (program) which sound will play when you hit the “COAX” button. If you have multiple sounds in your playlist, the lines on the left side of the sound name will allow you to rearrange the order of sounds.

To change the Delay, Repeat, and Volume settings for each sound, select the edit button in the green box to the right of the sound. Delay time will keep a sound from playing until a set amount of time has passed. Repeat will allow you to loop a sound infinitely, a finite amount of times, or repeating for a set amount of time.

You may play each sound in the playlist individually by pressing the play button to the right of the green box, or you can play them as you have them programmed based on your

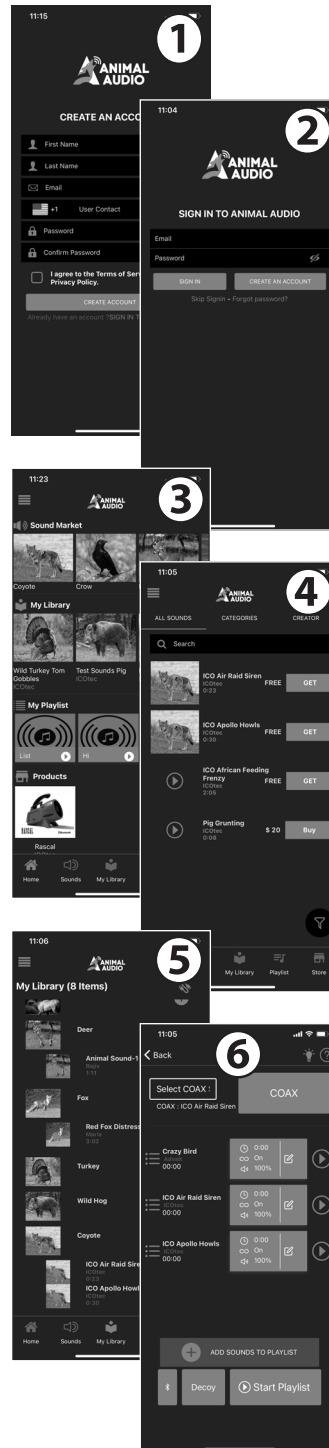

sound settings. There is an “Add Sounds to Playlist” button which allows you to put new sounds on the list. There is also a “Remove from Playlist” option in the sound edit field.

Tap the Bluetooth icon button to set up a decoy. Once you tap it, you will then tap “Scan Bluetooth.” A list of Bluetooth devices should appear. If you have a Bluetooth capable caller near you and on, it should appear in the list. Tap that caller and then tap “Set as default.” Then when you tap “Test Decoy” it should turn the decoy on and off on the caller. (THIS DECOY FEATURE IS STILL GOING THROUGH COSMETIC/FUNCTIONAL IMPROVEMENTS. PROCESS SUBJECT TO CHANGE.)

Tapping “Start Playlist” will begin your playlist. The “?” icon will feature an instructional guide on how to use the Playlist portion of the application.

Night Hunt screen setting is available. Press the light bulb icon in the top right corner of the Playlist screen which will automatically dim your screen to its lowest brightness setting. Press icon again to automatically return your screen brightness to 50%.


**Step 7** – The “Store” page hosts physical products for sale. This will include the Rascal, and a selection of accessories (decoy, tripods, batteries, etc.). Select the item in the store for product details page. Click on Add to Cart or Buy Now if you choose to purchase.

### Serial Number Location

- Remove speaker battery cover

Please register your product with ICOTec for full warranty coverage. There is a separate warranty card in the package with your call and remote.

Or register online: [www.icotec.com/product-registration/](http://www.icotec.com/product-registration/)

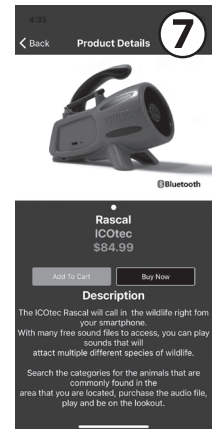

Google Play and the Google Play logo are trademarks of Google LLC.

Apple® and Apple Store® are registered trademarks of Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ICOTec, LLC is under license. Other trademarks and trade names are those of their respective owners.

ICOTec reserves the right to make product changes without notice. All photos are an approximate representation of the unit enclosed in the package. The products may vary slightly from the photos. The product specifications may vary from claims due to the timing of packaging production

ICOTec is a registered trademark of ICOTec LLC.  
©2022 ICOTec LLC, All rights reserved.