

**ICOtec** Electronic Game Calls 300+ **Electronic Predator Call Operating Instructions** 



# Play sounds to your ICOtec 300+ with your phone!

The ICOtec 300+ with Bluetooth allows you to stream audio files from your phone. Locate the ICOtec 300 Plus on your phone's Bluetooth and connect it as an external speaker. Switch from remote mode to Bluetooth mode and begin. You can play from up to 50 yards\* away with a direct line of sight.



\* Raise the call off the ground 2'- 4' for best results. Remote is good for 300 yards non-line-of-sight.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG,Inc. and any use of such marks by ICOtec is under license. Other trademarks and trade names are those of their respective owners.

lo purchas

accessories,

COtec

**TNT Power** 

batteries, decoys, tripods, remotes, merch icotec.com. & more...

ICOtec offers a discount for current and former military, law enforcement officers, EMT and firefighters. We call it our Patriot Discount. Logon to ICOtec to learn more.

# ALWAYS TEST YOUR BATTERIES BEFORE YOU LEAVE THE HOUSE

your convenience. REMOTE - Turn on remote power, press and hold any call button, if the LED blinks then it needs changed. CALLER - Turn power on, play blinks then change the batteries. The ICOtec remote control, and caller have integrated battery level sensors for

damages caused by misuse, improper handling or improper repairs performed by someone other than an authorized service contractor. Any return made under this warranty must be accompanied by the items listed below: 1) Contact Customer Service for instructions. You will need to complete a Warranty Claim form online prior to shipping product back to ICOtec. For service call (419) 450-3566 or email service@icotec.com. product postage prepaid. This warranty does not cover

3) Product should be well packed in a sturdy shipping carton with return postage prepaid to the address provided in your Warranty Claim Form Proof of purchase with date of purchase (store receipt)

Specifications and product designs are subject to change without notice or obligation

# **Setup & Operation Instructions**

ICOtec 300+ Electronic Predator Call



### **Add Batteries**

**CALLER** - Place 4 new AA batteries as indicated inside of the game call, close panel door and tighten screw. Use lithium batteries for best results in cold weather.

**REMOTE** - Place an A23 battery as indicated and replace the cover. Turn on the power switch and press a call button to play a sound.



### **Turn Caller On**

Slide the power switch to the ON position. The LED indicator will light up if unit is on and the batteries are good. If the LED does not light up, check that your batteries are new and installed properly.



### **Turn Remote On**

Turn the power switch to ON. When the power comes on the LED will blink twice to notify you that the remote is ready.



### **Raise Antenna**

Place antenna in upright position on main unit. Carefully slide the remote antenna up for maximum distance.



### Select Call(s)/Pause Call(s)

When you select a call it will play 30-40 seconds and then replay automatically. You may press PAUSE to immediately stop the sound. Press PAUSE again to restart the sound where it was paused. To end calls press STOP.



### **Adjust Volume**

Press volume up arrow for louder or volume down arrow for quieter.



### **Buttons Light Up**

Press the LIGHT button to turn ON and illuminate the remote buttons for night hunting. DO NOT leave lights on while hunting, it will rapidly deplete the battery.



### **Pairing Remote to Unit**

If you purchase a replacement remote or your remote becomes unresponsive you can pair it up to the call unit.

Using a small paper clip, press the reset button located inside the hole to the left of the "ON/OFF" switch. This will activate the pairing process, while the call unit LED light is blinking, turn remote on then press any call button on the remote, it will begin playing that sound within 3 seconds.

### **Trouble Shooting**

**Unit does not play calls** - Be sure batteries are NEW and are installed properly. If you press a call button on the remote and the LED light blinks, you need to replace the A23 battery. If the unit begins behaving strangely and not playing proper sounds, or you have trouble starting and stopping sounds, check the battery indicator light on the unit. If it is blinking you need new batteries.

### **Lost Your Remote?**

For replacement remote: https://icotec.com/icotec-replacement-remote-controls/ Or you can go to www.icotec.com and do a search for replacement remote.



## **300+ Remote Features**

- A- ON/OFF Power Switch
- **B** Red LED
- **C- Call Buttons**
- **D-Volume Up & Down Buttons**
- **E- PAUSE Button**
- F- STOP Button
- G- Key Pad Back Light
  - H- Decoy Activate/Deactivate Button
  - **I- Lanyard Loop**
  - J- Extendable Antenna

### 300+ Call List

Coyote Female	Coyote Fight	Woodpecker
Coyote Male	Baby Cottontail	Red Fox
Coyote Duet	Cottontail Distress	Whitetail Fawn
Coyote Group Howl	Baby Jack Rabbit	Raccoon Fight
Coyote Pup Distress	Jack Rabbit Distress	Mouse

### **Replacing Remote Antenna**

- · Remove remote battery cover
- Remove silver screw
- · Slide the old antenna out
- Slide the new antenna in
- Replace the wire and screw



### **Serial Number Location**

· Remove speaker battery cover



Please register your product with ICOtec for full warranty coverage. There is a separate warranty card in the package with your call and remote.

Or register online: www.icotec.com/product-registration/