

ICOTec

Electronic Game Calls

320+

Electronic Predator Call/Decoy Combo Operating Instructions

Play 2 Sounds at the Same Time!

Press a call button for one sound and then press a second button for two sounds at the same time.



Play sounds to your ICOTec 320+ with your phone!

The ICOTec 320+ with Bluetooth allows you to stream audio files from your phone. Locate the ICOTec 320 Plus on your phone's Bluetooth and connect it as an external speaker. Switch from remote mode to Bluetooth mode and begin. You can play from up to 50 yards* away with a direct line of sight.



** Raise the call off the ground 2'- 4' for best results. Remote is good for 300 yards non-line-of-sight.*

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ICOTec is under license. Other trademarks and trade names are those of their respective owners.

ICOTec TNT Power Kit

ICOTec offers a high efficiency
AA battery kit. 2700mAh @ 1.2V

- 4 AA NIMH Batteries
- USB Rapid Charger
- AC/DC Power Inverter



Battery kit sold separately.

2 YEAR LIMITED WARRANTY (Register within 15 days of purchase)

Your ICOTec product is warranted to be free of material defects and workmanship for 2 years after the date of purchase. In the event of a defect under this warranty, we will, at our discretion, repair or replace the product provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling or improper repairs performed by someone other than an authorized service contractor. Any return made under this warranty must be accompanied by the items listed below:

- 1) Contact Customer Service for instructions. You will need to complete a Warranty Claim form online prior to shipping product back to ICOTec. For service call (419) 450-3566 or email service@icotec.com.
- 2) Proof of purchase with date of purchase (store receipt)
- 3) Product should be well packed in a sturdy shipping carton with return postage prepaid to the address provided in your Warranty Claim Form.

This warranty gives you specific legal rights. Specifications and product designs are subject to change without notice or obligation.

To purchase accessories, batteries, decoys, tripods, remotes, merch & more... log on to icotec.com.

ICOTec offers a discount for current and former military, law enforcement officers, EMT and firefighters. We call it our Patriot Discount. Log on to icotec.com to learn more.

ALWAYS TEST YOUR BATTERIES BEFORE YOU LEAVE THE HOUSE!

The ICOTec remote control, caller and decoy have integrated battery level sensors for your convenience: REMOTE - Turn on remote power, press and hold any call button, if the LED blinks then it needs changed. CALLER - Turn power on, play two calls at the same time by pressing two separate call buttons, if the LED blinks then change the batteries. DECOY - Turn decoy on, if the LED blinks then change the batteries.

Setup & Operation Instructions

ICOTec 320+ Electronic Predator Call

1

Add Batteries

CALLER - Remove the decoy from the call unit. Place 4 new AA batteries as indicated, replace decoy and tighten thumb screw.

DECOY - Remove the battery cover by sliding ribbed plate downward. Place 4 new AA batteries as indicated.

REMOTE - Place an A23 battery as indicated and replace the cover. Turn on the power switch and press a call button to play a sound.



2

Turn Caller On

Slide the power switch to the ON position. The LED indicator will light up if unit is on and the batteries are good. If the LED does not light up, check that your batteries are new and in the proper positions.

3

Turn Remote On

Turn the power switch to ON. When the power comes on the LED will blink once to notify you that the remote is ready.

4

Raise Antenna

Place antenna in upright position on main unit. Carefully slide the remote antenna up for maximum distance.

5

Select Call(s)/Pause Call(s)

When you select a call it will play 30-40 seconds and then replay automatically. You may press PAUSE to immediately stop the sound. Press PAUSE again to restart the sound where it was paused. To end calls press STOP.

6

Adjust Volume

Press volume up arrow for louder or volume down arrow for quieter.

7

Buttons Light Up

Press the LIGHT button to turn ON and illuminate the remote buttons for night hunting. DO NOT leave lights on while hunting, it will rapidly deplete the battery.



Pairing Remote to Unit

If you purchase a replacement remote or your remote becomes unresponsive you can pair it up to the call unit.


Using a small paper clip, press the reset button located inside the hole to the left of the "ON/OFF" switch. This will activate the pairing process, while the call unit LED light is blinking, turn remote on then press any call button on the remote, it will begin playing that sound within 3 seconds.

Trouble Shooting

Unit does not play calls - Be sure batteries are NEW and are installed properly. If you press a call button on the remote and the LED light blinks, you need to replace the A23 battery. If the unit begins behaving strangely and not playing proper sounds, or you have trouble starting and stopping sounds, check the battery indicator light on the unit. If it is blinking you need new batteries.

Lost Your Remote?

For replacement remote: <https://icotec.com/icotec-replacement-remote-controls/>
Or you can go to www.icotec.com and do a search for replacement remote.

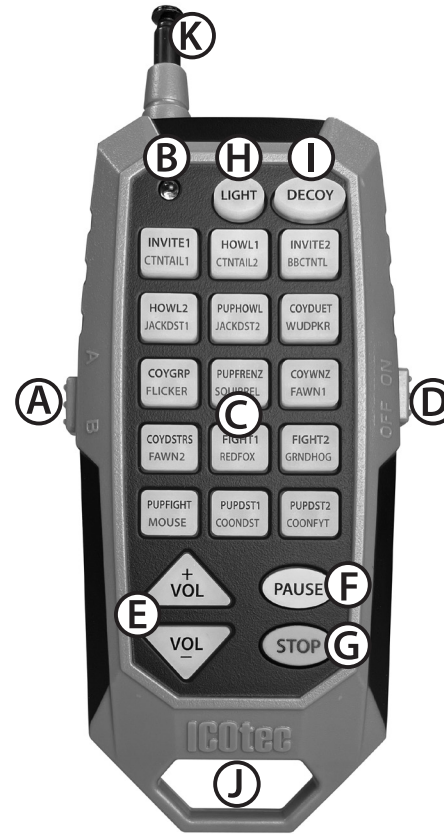

320+ Remote Features

- A- A/B Sound Bank Switch
- B- Red LED
- C- Call Buttons
- D- ON/OFF Power Switch
- E- Volume Up & Down Buttons
- F- PAUSE Button
- G- STOP Button
- H- Key Pad Back Light
- I - Decoy Activate/Deactivate Button
- J- Lanyard Loop
- K- Extendable Antenna

320+ Call List

- | | |
|-----------------------|--------------------------|
| Coyote Female Invite | Cottontail Distress 1 |
| Coyote Female Howl | Cottontail Distress 2 |
| Coyote Male Invite | Baby Cottontail Distress |
| Coyote Male Howl | Jack Rabbit Distress |
| Coyote Pup Howl | Hare Distress |
| Coyote Duet | Woodpecker Distress |
| Coyote Group Howl | Flicker Distress |
| Coyote Pup Frenzy | Baby Squirrel Distress |
| Coyote Whines | Fawn Distress 1 |
| Coyote Distress | Fawn Distress 2 |
| Coyote Fight 1 | Red Fox Distress |
| Coyote Fight 2 | Groundhog Distress |
| Coyote Pup Fight | Mouse Distress |
| Coyote Pup Distress 1 | Raccoon Distress |
| Coyote Pup Distress 2 | Raccoon Fight |

Replacing Remote Antenna

- Remove remote battery cover
- Remove silver screw
- Slide the old antenna out
- Slide the new antenna in
- Replace the wire and screw



Serial Number Location

- Remove speaker battery cover



Please register your product with ICOTec for full warranty coverage. There is a separate warranty card in the package with your call and remote.
Or register online: www.icotec.com/product-registration/