



Google Play and the Google Play logo are trademarks of Google LLC.

Apple® and Apple Store® are registered trademarks of Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ICOTec, LLC is under license. Other trademarks and trade names are those of their respective owners.

*ICOTec reserves the right to make product changes without notice. All photos are an approximate representation of the products enclosed in the package. The products may vary slightly from the photos. The product specifications may vary from claims due to the timing of packaging production*

ICOTec is a registered trademark of ICOTec LLC.  
©2023 ICOTec LLC, All rights reserved.

### Accessories available at [icotec.com](http://icotec.com)



Lithium Battery



Light Weight Tripod

External Speaker

**Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes RSS exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes:

- (1) Ce dispositif ne peut causer d'interférences, et
- (2) Ce dispositif doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.



6415 Angola Rd. | Holland, OH 43528 | 419-867-6900 | [icotec.com](http://icotec.com)  
 Technical Support: 419-450-3566 (M-F 9a-5p EST) or [service@icotec.com](mailto:service@icotec.com)



## Outlaw+ Operation Manual

Hybrid Bluetooth & traditional RF remote controlled device.

Play sounds from your phone. Play sounds from the 300 yard non-line-of-sight remote. Play two sounds at the same time from your remote. Play multiple sounds at different volumes with delayed starts and custom number of loops from the free app. The plus versatility and flexibility! **ICOTec - Like No Other Callers on the Planet.**

### What's in the box.

- One Outlaw+ caller
- One AD400 electronic decoy
- One GCX+ remote control
- One USB cable
- One remote synch cable
- Operation manual

### Setting up your Outlaw+

**You will need: 14-AA batteries or 1-C4 Lithium battery and 4-AA batteries**

- 1. Place 4-AA batteries in the remote. Place 4-AA batteries in the decoy.**
- 2. Place 10-AA batteries in the caller:** Remove the thumb screw from the battery compartment door. The largest door covers the battery compartment. We suggest the ICOTec C4 Power House Rechargeable Battery Kit.
- 3. Power on caller and decoy:** Slide the power switch to the on position. The Power is the left hand slider switch. The red LED light will appear if the batteries are in correctly, or a blinking blue light if it is in the Bluetooth mode.
- 4. Select control mode** The right hand slider switch will change the device controls from Remote to Bluetooth (smartphone).
- 5. Power on remote:** Press the red power switch on the right side of the remote to the on position. As soon as the Main Menu appears on the screen, you are ready to operate your call.






## Unbeatable remote functions that make your predator hunt a snap.



### To change screen settings:

1. Go to MENU SETTINGS, press SELECT button.
2. Press navigation buttons to highlight the desired setting you want to change.
3. Press VOL - or + to change the selected setting.
4. Press BACK to exit Settings. Your setting changes will automatically save.

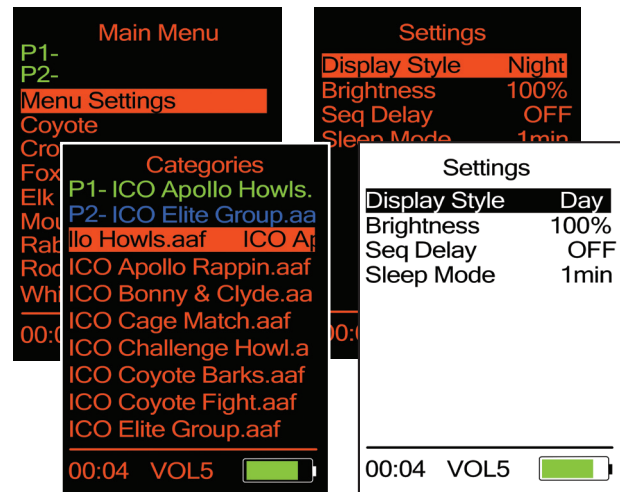

### Main Menu

The (Main Menu) is the default screen. The P1- and P2- will display the sounds that are currently in either PLAY or PAUSE mode. When the P1 is green, the sound will be playing, if you select the PAUSE button under PLAY1 the sound will pause and the words will turn from green to red in daytime mode or from green to blue in night mode. To unpause the sounds, press the PAUSE button again, the sound will resume and the name will turn green once again.

### Display Style & Brightness

There are two display options for the GCX+ remote, day & night. For daytime use the day setting. Set the brightness based on your conditions, the brighter the sun, the brighter you will need the remote screen to be. Save batteries by turning the brightness down. Night display mode will need to be reduced from 100% to as low as you can go and still read it.

### Sequence Delay

The (Seq Delay) is a pause in the sound sequence after the initial call sound file ends. You have the option to set it to 20 seconds (20s) or turn it OFF. When OFF, sounds will play continuously. When set to 20s pause, you will extend your call battery life and it adds a natural pause in the sounds.

### Sleep Mode

The (Sleep Mode) refers to the display sleep timer setting. You have 10 seconds, 30 seconds and 1 minute options. The timer starts after you have selected a button and will go to sleep in the amount of time that you have preset. To wake the remote, press any button. The shorter the timer setting the more power you will reserve for your batteries.

### Saving your Settings

After making your setting changes simply press the BACK button, the remote will remember your settings until you change them. You may turn the remote off or allow it to go into sleep mode and it will remember your display settings.

### Creating Favorites Lists (FAV1 & FAV2)

**To create a favorites list or short-cut to a list of sounds, do the following:**

- Locate a sound in a category and scroll to highlight the sound name
- Press & hold down on FAV1 or FAV2 button
- The selected sound will appear on FAV1 or FAV2 screen
- Press the same FAV button again to return to the category
- Locate more sounds in categories and repeat until your lists are full
- Save up to ten sounds per FAV list

To remove sounds from your FAV1 or FAV2: Highlight the sound you want to remove, press and hold FAV button, the sound will disappear in 2-3 seconds.

When you sync your remote after adding new sounds, you'll have to recreate your favorites. You may also create a category folder and place any sounds you want in there for quick reference.

## Using the Animal Audio app to play sounds via Bluetooth and to download sounds to your calling device for use with your remote.

### Animal Audio App Instruction Guide

\*Please refer to FAQ in app for up-to-date instructions. These instructions were compiled during development and may have changed slightly by the time the app is available.

**Step 1 "Free Animal Audio account"** – Download Animal Audio from Apple App Store or Google Play depending on your smartphone operating system. Then, sign up for a free account.

**Step 2 "Searching for sounds"** – Tap the "Sounds" icon located on the tool bar to browse available sounds. You will see "All Sounds," "Categories," and "Creator" at the top. These are different ways to sort through which sounds are available for download or purchase.

**Step 3 "Purchasing sounds"** – Downloading sounds is very simple. Search for a sound that you like and click "GET". The sound will download to your device, and be stored in the "My Library" section of the app. You now have access to a new sound file through the Animal Audio app even if you do not have cell service. This sound will play to any Bluetooth device.

**Step 4 "My Library"** – To view all the categories that you have sounds located in, select "My Library" from the tool bar. You will see an animal species category listing in which you have a sound file located. By tapping the "+" icon next to a category, you will see all of the sounds that you own within that category.

**Step 5 "Creating a Playlist"** – Press the "Playlist" icon in the tool bar. To name your playlist, click in the "Playlist Name" text input field at the top of the screen. Tap the "+" icon next to a category, then tap the square to add that particular sound. When you're done adding sounds, tap "Save" at the bottom of the screen.

Open your playlist to set up your sound settings. "Select Coax" lets you select (program) which sound will play when you hit the "COAX" button. If you have multiple sounds in your playlist, the lines on the left side of the sound name will allow you to rearrange the order of sounds.

To change the Delay, Repeat, and Volume settings for each sound, select the edit button in the green box to the right of the sound. Delay time will keep a sound from playing until a set amount of time has passed. Repeat will allow you to loop a sound infinitely, a finite amount of times, or repeating for a set amount of time.

You may play each sound in the playlist individually by pressing the play button to the right of the green box, or you can play them as you have them programmed based on your sound settings. There is an "Add Sounds to Playlist" button which allows you to put new sounds on the list. There is also a "Remove from Playlist" option in the sound edit field.

Tapping "Start Playlist" will begin your playlist. The "?" icon will feature an instructional guide on how to use the Playlist portion of the application.

Night Hunt screen setting is available. Press the light bulb icon in the top right corner of the Playlist screen which will automatically dim your screen to its lowest brightness setting. Press icon again to automatically return your screen brightness to 50%.

**Step 6 & 7 "Downloading sounds to your caller"** – In your "My Library" find the sounds you wish to download to your phone, SD card or caller by selecting the + symbol to the right of the category. Now you can see the list of sounds available for downloading. Select the cloud download icon beside each sound you wish to download. You will see a checked box once the sound is ready to be sent to the desired location. Now select the icon to the right of the "My Library" heading at the top of the screen.

You are now on the "SOUND FILE TRANSFER" screen when you can select the folder where your sounds are located for final selection to download to a device or to your phone file storage drive. Click on the folder and then click on the sounds that you saved from the cloud server. You are ready to select "TRANSFER" at the bottom of the screen. Select the folder or drive that you wish to store these files for access to your game call. If you select "Save to Files" you will have access to an external device that is plugged into your phone.

**Step 8 "Buying products from Store"** – The "Store" page hosts physical products for sale. This will include the Rascal, and a selection of accessories (decoy, tripods, batteries, etc.). Select the item in the store for product details page. Click on Add to Cart or Buy Now if you choose to purchase.

