



PD250

Electronic Predator Decoy



Operating Instructions

1 YEAR LIMITED WARRANTY (Register within 15 days of purchase)

Your ICOTec product is warranted to be free of material defects and workmanship for 2 years after the date of purchase. In the event of a defect under this warranty, we will, at our discretion, repair or replace the product provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling or improper repairs performed by someone other than an authorized service contractor. Any return made under this warranty must be accompanied by the items listed below:

- 1) Contact Customer Service for instructions. You will need to complete a Warranty Claim form online prior to shipping product back to ICOTec.
- For service call (419) 450-3566 or email service@icotec.com.
- 2) Proof of purchase with date of purchase (store receipt)
- 3) If you are returning the product for service, the product should be well packed in a sturdy shipping carton with return; Name, Address, Email Address, and Phone Number.

This warranty gives you specific legal rights. Specifications and product designs are subject to change without notice or obligation.

©2023 ICOTec. All rights reserved.

Thank you for the purchase!

Please fill out your product registration information and mail it back to us **within 15 days** of your purchase date. Or, you may go to our web site to register your product. Please retain your original receipt in the event that you would need to return the unit for a warranty repair.

Failure to mail in your product registration card, or registering your product on our web site within the 15 day period of the purchase will result in the voiding of the warranty.

Name: _____

Phone Number: _____

Street Address: _____

City: _____

State: _____

Zip: _____

Email Address: _____

Date of Purchase: _____

Place Purchased: _____

Serial Number: _____

Serial # on label in battery compartment.

Setup & Operation Instructions

ICOTec PD250 Electronic Predator Decoy

1 Add Batteries

Open battery panel on back of unit, place 4 new AA batteries as indicated below then close panel. *Lithium batteries for best results in cold conditions. 1.5 volt AA batteries only.*

2 Turn Power Switch On

Slide switch up to ON to activate decoy, slide switch up to ON/L to activate decoy with LED light for night time hunting. When finished slide switch down to OFF.

3 Connect Stake, Shaft & Topper

Remove aluminum stake from side of decoy and screw into bottom of unit. Remove the spring topper connector and place into the top of the decoy. Select the topper, press topper onto the spring using the plastic connector in the topper. Push decoy into the soil while holding firmly with both hands toward the bottom of the decoy. Be sure to push straight downward.


4 Connecting to an Electronic Caller

Connect the 3.5mm cable to the connection port on the left side of the decoy, connect the other end to the DECOY port on the caller. Turn the caller on. Turn decoy ON, if decoy begins to run select the DECOY button on the caller remote to deactivate it.

For long term storage, we recommend removing batteries from your decoy.

**For technical questions call Customer Service Dept.
419-450-3566. M-F, 8 am - 5 pm EST.**

PD250 Battery Order

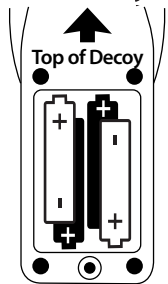


4 - 1.5 Volt AA Batteries ONLY



Product Warranty Registration

Please register your new ICOTec product(s) with us for your convenience. This form must be filled out at the time of purchase for you to receive full coverage of any potential warranty repair. Thank you in advance for your cooperation.

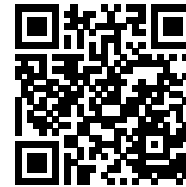

Replacement Decoy Toppers

Use this QR code to link to our web store to order a replacement topper kit. Hawks, owls and eagles routinely swipe the toppers from decoys. Get your extra kit or get a replacement if yours was already stolen.



TNT Rechargeable Battery Kit

Use this link to purchase AA batteries designed specifically for the requirements of your new ICOTec Plus Series 300, 320, 350, Nomad and Hellion callers. Works great for the ICOTec GCX+ remotes and decoys. Not recommended for use in Outlaw+, Night Stalker+ or Renegade+ callers.

CAUTION!

Please be sure to remove the stake from the bottom of the decoy and place it in the holder when walking with decoy in your hand. The stake is potentially dangerous if you should trip and fall.



Mail to:
ICOTec, LLC
ATTN: Warranty Department
6415 Angola Road
Holland, OH 43528

Or, use QR Code above

**AD400 Electronic Predator Decoy
Warranty Registration Card**

