

CARE

GARMENT CARE

Please read entire instructions before starting laundry process

DO NOT DRY CLEAN

HAND WASH ONLY

--Prepare the garment for washing

- Remove battery and Thermogauge controller
- Tuck plugs into its zippered pockets and close zippers
- Check pockets for any other items you may have left in them and remove

--Prepare wash basin or sink

- Use a clean sink or other large basin and fill with lukewarm or cold water
- Put in a few drops of mild detergent (like Woolite); for best results follow directions on detergent bottle
- Gently swirl the clothing in the sink for a minute or two just enough so that it gets soaped up
- Drain sink and use clean tap water and Rinse thoroughly until no more suds are visible
- Turn off water or drain sink then GENTLY squeeze out the water; do not wring or twist
- Remove from sink and lay flat between towels to soak up as much water as you can; the more you soak up the quicker it will dry
- After soaking up most of the water, you may want to hang up the garment so the air can circulate inside and out for faster drying; consider laying a towel down or hang over sink to catch any additional water that may be left
- Allow garment to completely air dry before using

--Once the garment is completely dry

- Gently tap plugs to confirm they are dry
- Enjoy your refreshed garment

DO NOT IRON

DO NOT PUT IN DRYER

DO NOT USE HAIR DRYER OR HEAT GUN