

BRAUN

MultiServe Coffee maker



Instructions

Type KF 901AN, KF 901BN

Register your product

www.braunhousehold.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:


READ ALL INSTRUCTIONS.

1. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
2. Always unplug appliance from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
3. To protect against the risk of electric shock, do not put cord, plugs or appliances in water or other liquids.
4. The use of attachments/accessories not sold or recommended by Braun may cause fire, electrical shock or risk of injuries to persons.
5. Regularly inspect the power cord, power plug and actual appliance for any damage. Do not operate if damaged in any way or after the appliance malfunctions. Immediately cease use of the appliance and call Braun Customer Service for examination, repair or adjustment.
6. Do not use outdoors or for anything other than its intended purpose.
7. Snap lid securely onto carafe before serving any coffee.
8. Scalding may occur if the reservoir cover is opened during the brewing cycle.
9. The glass carafe is designed for use with this appliance only. It must never be used on a range top or in a microwave oven.
10. Do not set a hot carafe on a wet or cold surface.
11. Do not use cracked carafe or a carafe having a loose or weakened handle.
12. Do not clean carafe or keep warm plate with abrasive cleansers, steel wool pads, or other abrasive materials.
13. Do not immerse in water.
14. Do not touch hot surfaces. Use handles and buttons.
15. Do not let cord hang over edge of table or counter, or touch hot surface.
16. Do not place on or near a hot gas or electric burner, or in a heated oven.
17. Always fill water reservoir first, then plug cord into the wall outlet. To disconnect, press the «On/Off» button, then remove plug from wall outlet.
18. Warning: Risk of fire or electric shock. Do not remove the base panel. No user serviceable parts are inside. Repair should be done by authorized service personnel only.
19. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
20. Never open the reservoir cover during the brewing cycle, even if no water is draining from the filter basket, since extremely hot water/coffee can spill out from the filter basket and cause injury. If water/coffee is not draining from the filter basket during the brewing cycle, unplug the unit and wait 10 minutes before opening the top cover and checking the filter basket.
21. We suggest you save all packing materials in the event that future shipping of the machine is needed. Keep all plastic bags away from children.
22. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
23. Do not modify the plug in any way.

De'Longhi Braun Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany

57XXXXXXXX


EN/FR/ES

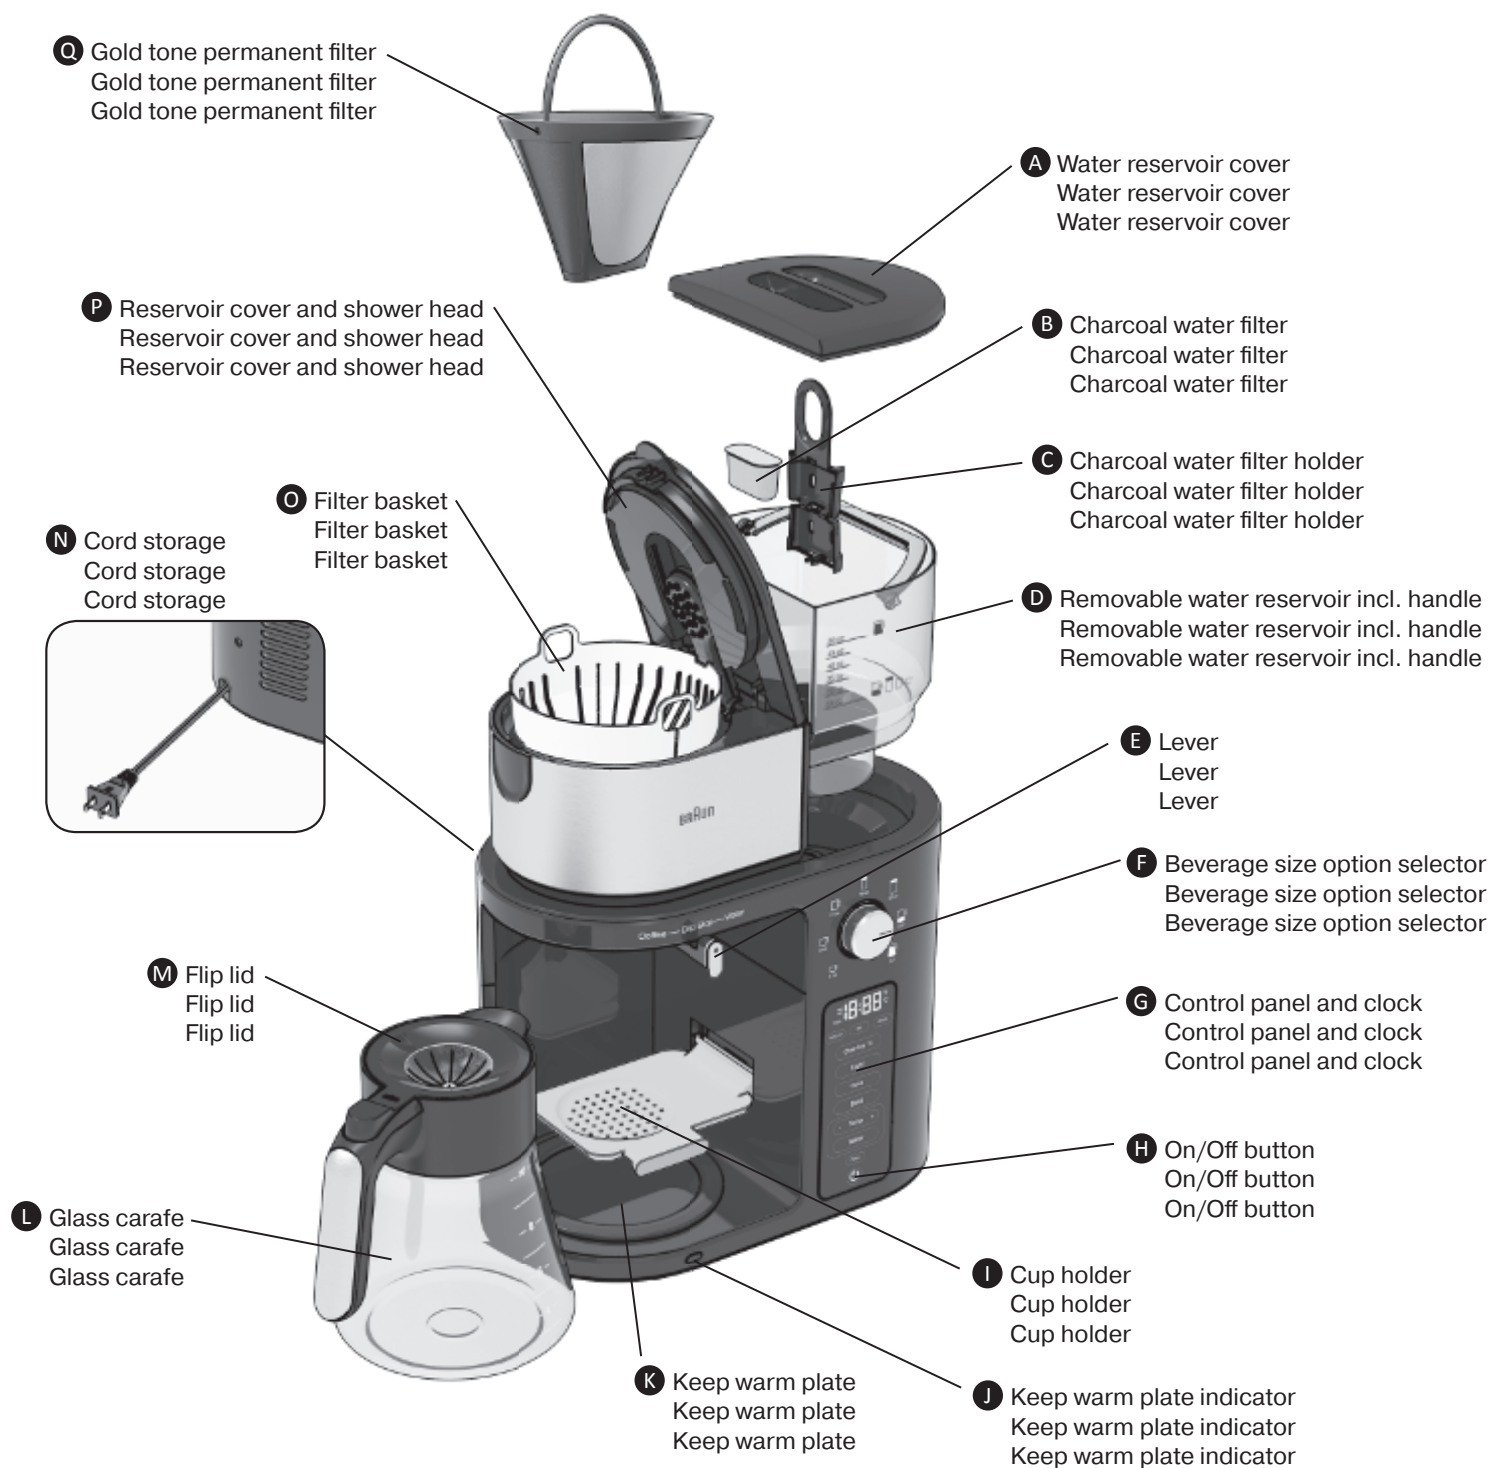

R Travel mug, 20oz*
Travel mug, 20oz*
Travel mug, 20oz*



S 2-sided coffee measuring scoop
2-sided coffee measuring scoop
2-sided coffee measuring scoop

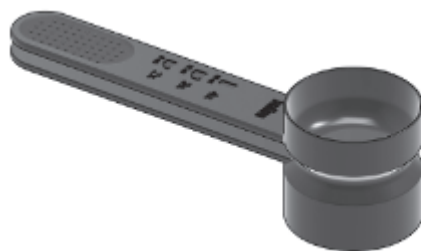


* included with certain models only

EN Control Panel

Display shows the following options:


- Time of the day ①
- Temperature (F/C) (certain models only) – Hot water function ②
- Freshness Indicator – Provides an indication of your coffee freshness based on the period of time since brewing started. ③

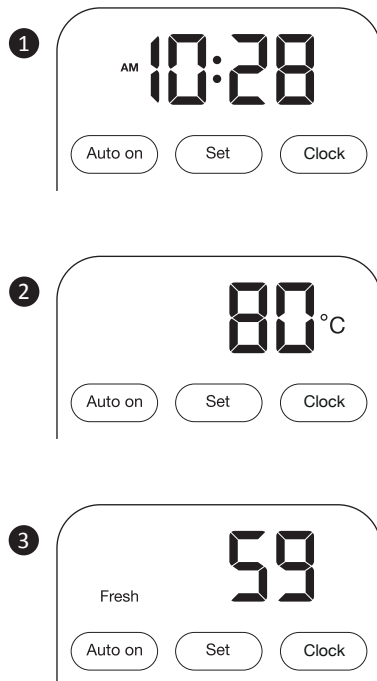

FR Control Panel

Display shows the following options:

- Time of the day ①
- Temperature (F/C) (certain models only) – Hot water function ②
- Freshness Indicator – Provides an indication of your coffee freshness based on the period of time since brewing started. ③

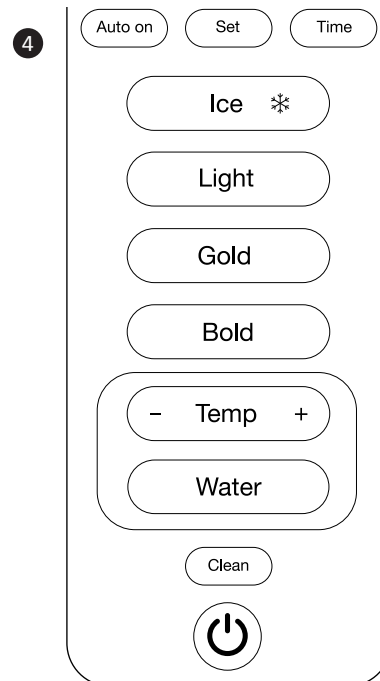

ES Control Panel

Display shows the following options:

- Time of the day ①
- Temperature (F/C) (certain models only) – Hot water function ②
- Freshness Indicator – Provides an indication of your coffee freshness based on the period of time since brewing started. ③

Functions: ④

Auto on: Use to program the start time of the brew cycle and activate the brew cycle.

Set: Use to program the time of day and auto on.

Clock: Use to set/change time of day.

Over Ice: Use to brew over –ice coffee.

Light/Gold/Bold: Use to select the brew mode and start the brew cycle.

Temp: Use to select the water temperature when heating up water. To change from F to C press **- Temp +** at the same time for a few seconds.

Water: Use to begin the water dispensing.

Clean: Descaling indicator and use to activate the descaling process.

On/Off button: Use to switch on/off the unit.

Functions: ④

Auto on: Use to program the start time of the brew cycle and activate the brew cycle.

Set: Use to program the time of day and auto on.

Clock: Use to set/change time of day.

Over Ice: Use to brew over –ice coffee.

Light/Gold/Bold: Use to select the brew mode and start the brew cycle.

Temp: Use to select the water temperature when heating up water. To change from F to C press **- Temp +** at the same time for a few seconds.

Water: Use to begin the water dispensing.

Clean: Descaling indicator and use to activate the descaling process.

On/Off button: Use to switch on/off the unit.

Functions: ④

Auto on: Use to program the start time of the brew cycle and activate the brew cycle.

Set: Use to program the time of day and auto on.

Clock: Use to set/change time of day.

Over Ice: Use to brew over –ice coffee.

Light/Gold/Bold: Use to select the brew mode and start the brew cycle.

Temp: Use to select the water temperature when heating up water. To change from F to C press **- Temp +** at the same time for a few seconds.

Water: Use to begin the water dispensing.

Clean: Descaling indicator and use to activate the descaling process.

On/Off button: Use to switch on/off the unit.

EN Before first use

Please read instructions carefully and completely before using the appliance.

Remove all packaging material and stickers from the appliance.

Switch on the appliance.

Set «time of day» and «water hardness level» (see explanation in dedicated paragraphs hereafter).

Run the coffee maker through a complete brew cycle without ground coffee.

Use a full carafe (10 cups) of fresh cold water. This will remove any dust from the manufacturing process or residues that have remained in the unit.

During the setting process the information displayed will be saved after 10 seconds.

EN Time of day

When the coffee maker is first plugged in or when power is restored after an interruption, the display starts flashing 2:00 AM and you hear an acoustic signal.

FR Before first use

Please read instructions carefully and completely before using the appliance.

Remove all packaging material and stickers from the appliance.

Switch on the appliance.

Set «time of day» and «water hardness level» (see explanation in dedicated paragraphs hereafter).

Run the coffee maker through a complete brew cycle without ground coffee.

Use a full carafe (10 cups) of fresh cold water. This will remove any dust from the manufacturing process or residues that have remained in the unit.

During the setting process the information displayed will be saved after 10 seconds.

EN Time of day

When the coffee maker is first plugged in or when power is restored after an interruption, the display starts flashing 2:00 AM and you hear an acoustic signal.

ES Before first use

Please read instructions carefully and completely before using the appliance.

Remove all packaging material and stickers from the appliance.

Switch on the appliance.

Set «time of day» and «water hardness level» (see explanation in dedicated paragraphs hereafter).


Run the coffee maker through a complete brew cycle without ground coffee.

Use a full carafe (10 cups) of fresh cold water. This will remove any dust from the manufacturing process or residues that have remained in the unit.

During the setting process the information displayed will be saved after 10 seconds.

EN Time of day

When the coffee maker is first plugged in or when power is restored after an interruption, the display starts flashing 2:00 AM and you hear an acoustic signal.

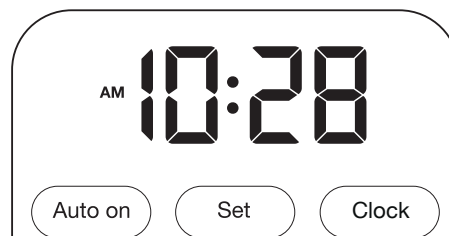

1. Switch on and press CLOCK.
2. Press and hold SET to scroll through the hours. Release it once the desired hour is displayed.
3. To set the minutes, press CLOCK. The minutes start flashing.
4. Press and hold SET to scroll through the minutes. Release it once the desired minutes are displayed.
5. Press CLOCK again to save the desired time.

NOTE: When the number count passes 12, the PM light will be displayed.

1. Switch on and press CLOCK.
2. Press and hold SET to scroll through the hours. Release it once the desired hour is displayed.
3. To set the minutes, press CLOCK. The minutes start flashing.
4. Press and hold SET to scroll through the minutes. Release it once the desired minutes are displayed.
5. Press CLOCK again to save the desired time.

NOTE: When the number count passes 12, the PM light will be displayed.

1. Switch on and press CLOCK.
2. Press and hold SET to scroll through the hours. Release it once the desired hour is displayed.
3. To set the minutes, press CLOCK. The minutes start flashing.
4. Press and hold SET to scroll through the minutes. Release it once the desired minutes are displayed.
5. Press CLOCK again to save the desired time.

NOTE: When the number count passes 12, the PM light will be displayed.

EN Water hardness level

Set the water hardness level on the coffee maker to the water hardness level for your local area.

1. Switch on the appliance and press CLEAN for 2 seconds.
2. The default setting (h3) is flashing.
3. Press SET to scroll through the options (h1 = soft, h2 = normal, h3 = hard) and select the appropriate water hardness level.
4. Press CLEAN to save the hardness level.

EN Water hardness level

Set the water hardness level on the coffee maker to the water hardness level for your local area.

1. Switch on the appliance and press CLEAN for 2 seconds.
2. The default setting (h3) is flashing.
3. Press SET to scroll through the options (h1 = soft, h2 = normal, h3 = hard) and select the appropriate water hardness level.
4. Press CLEAN to save the hardness level.


EN Water hardness level

Set the water hardness level on the coffee maker to the water hardness level for your local area.

1. Switch on the appliance and press CLEAN for 2 seconds.
2. The default setting (h3) is flashing.
3. Press SET to scroll through the options (h1 = soft, h2 = normal, h3 = hard) and select the appropriate water hardness level.
4. Press CLEAN to save the hardness level.

EN Operation Instructions

EN Installing the Charcoal Water Filter

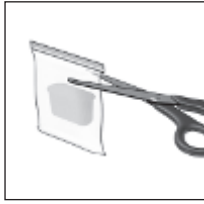

FR Operation Instructions

FR Installing the Charcoal Water Filter



ES Operation Instructions

ES Installing the Charcoal Water Filter



EN Use of the charcoal water filter is optional, but strongly recommended. The filter eliminates chlorine, bad tastes and odors from tap water. The coffee maker will operate normally without it. Replacement water filters can be purchased in stores, through the Braun website, or by calling Customer Service.

FR Use of the charcoal water filter is optional, but strongly recommended. The filter eliminates chlorine, bad tastes and odors from tap water. The coffee maker will operate normally without it. Replacement water filters can be purchased in stores, through the Braun website, or by calling Customer Service.

ES Use of the charcoal water filter is optional, but strongly recommended. The filter eliminates chlorine, bad tastes and odors from tap water. The coffee maker will operate normally without it. Replacement water filters can be purchased in stores, through the Braun website, or by calling Customer Service.

EN Switching On/Off

- To switch on the coffee maker press the On/Off button (H). The green indicator light will illuminate indicating that the coffee maker is in "ready" mode. Time of the day is displayed.

NOTE: When switching on and the lever is in position "Drip Stop", the On/Off button starts flashing.

- To switch off the coffee maker, press the On/Off button again. The green indicator light will turn off indicating that the coffee maker is in "stand by" mode. Time of day remains visible.

NOTE: If the On/Off button is pressed and no further function is selected within 60 seconds the coffee maker goes into "stand by" mode. The last selected brewing mode and the LED of the On/Off button disappear. To get out of stand by mode, press the On/Off button.

FR Switching On/Off

- To switch on the coffee maker press the On/Off button (H). The green indicator light will illuminate indicating that the coffee maker is in "ready" mode. Time of the day is displayed.

NOTE: When switching on and the lever is in position "Drip Stop", the On/Off button starts flashing.

- To switch off the coffee maker, press the On/Off button again. The green indicator light will turn off indicating that the coffee maker is in "stand by" mode. Time of day remains visible.

NOTE: If the On/Off button is pressed and no further function is selected within 60 seconds the coffee maker goes into "stand by" mode. The last selected brewing mode and the LED of the On/Off button disappear. To get out of stand by mode, press the On/Off button.

ES Switching On/Off

- To switch on the coffee maker press the On/Off button (H). The green indicator light will illuminate indicating that the coffee maker is in "ready" mode. Time of the day is displayed.

NOTE: When switching on and the lever is in position "Drip Stop", the On/Off button starts flashing.

- To switch off the coffee maker, press the On/Off button again. The green indicator light will turn off indicating that the coffee maker is in "stand by" mode. Time of day remains visible.

NOTE: If the On/Off button is pressed and no further function is selected within 60 seconds the coffee maker goes into "stand by" mode. The last selected brewing mode and the LED of the On/Off button disappear. To get out of stand by mode, press the On/Off button.

EN Programming the Coffee Maker

EN Before programming, always switch the coffee maker on.

NOTE: The coffee maker features a 60-second power loss back-up system that remembers all programmed information, including time of day and auto on time in the event of a power interruption.

EN Setting the AUTO ON Time

The AUTO ON time can be set for any time, day or night. "PM" is displayed on the LED for nighttime program times.

1. Place the lever in position "Coffee" or "Drip Stop".
2. Press AUTO ON for a minimum of 2 seconds.
3. The time of day in the display starts flashing.
4. Press and hold SET to scroll through the hours. Release it once the desired hour is displayed.
5. To set the minutes, press AUTO ON. The minutes in the display starts flashing.
6. Press and hold SET to scroll through the minutes. Release it once the desired minutes is displayed.
7. Press AUTO ON to save the desired time.
8. The set auto on time disappears after a few seconds and the time of day shows on the display.

EN Activate the AUTO ON Time

This function can only be activated if the AUTO ON time and the time of the day have been set.

- Place the lever (E) in position "Coffee" and select the beverage size (F).
- Place the carafe or your empty cup underneath the brew basket outlet. For smaller cups use the Single-serve cup holder.
- Press AUTO ON and select the desired taste. AUTO ON turns permanently on. The coffee maker will start to brew at the preset auto on time.
- The preset AUTO ON time and the selected taste disappears after a few seconds.
- To switch off the function, press AUTO ON again: AUTO ON will disappear.

FR Programming the Coffee Maker

FR Before programming, always switch the coffee maker on.

NOTE: The coffee maker features a 60-second power loss back-up system that remembers all programmed information, including time of day and auto on time in the event of a power interruption.

FR Setting the AUTO ON Time

The AUTO ON time can be set for any time, day or night. "PM" is displayed on the LED for nighttime program times.

1. Place the lever in position "Coffee" or "Drip Stop".
2. Press AUTO ON for a minimum of 2 seconds.
3. The time of day in the display starts flashing.
4. Press and hold SET to scroll through the hours. Release it once the desired hour is displayed.
5. To set the minutes, press AUTO ON. The minutes in the display starts flashing.
6. Press and hold SET to scroll through the minutes. Release it once the desired minutes is displayed.
7. Press AUTO ON to save the desired time.
8. The set auto on time disappears after a few seconds and the time of day shows on the display.

FR Activate the AUTO ON Time

This function can only be activated if the AUTO ON time and the time of the day have been set.

- Place the lever (E) in position "Coffee" and select the beverage size (F).
- Place the carafe or your empty cup underneath the brew basket outlet. For smaller cups use the Single-serve cup holder.
- Press AUTO ON and select the desired taste. AUTO ON turns permanently on. The coffee maker will start to brew at the preset auto on time.
- The preset AUTO ON time and the selected taste disappears after a few seconds.
- To switch off the function, press AUTO ON again: AUTO ON will disappear.

ES Programming the Coffee Maker

ES Before programming, always switch the coffee maker on.

NOTE: The coffee maker features a 60-second power loss back-up system that remembers all programmed information, including time of day and auto on time in the event of a power interruption.

ES Setting the AUTO ON Time

The AUTO ON time can be set for any time, day or night. "PM" is displayed on the LED for nighttime program times.

1. Place the lever in position "Coffee" or "Drip Stop".
2. Press AUTO ON for a minimum of 2 seconds.
3. The time of day in the display starts flashing.
4. Press and hold SET to scroll through the hours. Release it once the desired hour is displayed.
5. To set the minutes, press AUTO ON. The minutes in the display starts flashing.
6. Press and hold SET to scroll through the minutes. Release it once the desired minutes is displayed.
7. Press AUTO ON to save the desired time.
8. The set auto on time disappears after a few seconds and the time of day shows on the display.

ES Activate the AUTO ON Time

This function can only be activated if the AUTO ON time and the time of the day have been set.

- Place the lever (E) in position "Coffee" and select the beverage size (F).
- Place the carafe or your empty cup underneath the brew basket outlet. For smaller cups use the Single-serve cup holder.
- Press AUTO ON and select the desired taste. AUTO ON turns permanently on. The coffee maker will start to brew at the preset auto on time.
- The preset AUTO ON time and the selected taste disappears after a few seconds.
- To switch off the function, press AUTO ON again: AUTO ON will disappear.

NOTE: The AUTO ON function remains activated and is permanently on even when the appliance has been switched off.

NOTE: The AUTO ON function remains activated and is permanently on even when the appliance has been switched off.

NOTE: The AUTO ON function remains activated and is permanently on even when the appliance has been switched off.

EN Features


EN Size Option Selector

FR Features


FR Size Option Selector

ES Features

ES Size Option Selector

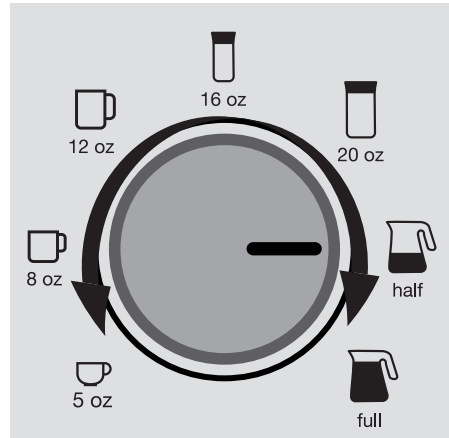

 The keep warm plate and the freshness indicator are only activated with size options



and the LED (J) is illuminated.

The keep warm plate and the freshness indicator are only activated with size options



and the LED (J) is illuminated.

The keep warm plate and the freshness indicator are only activated with size options



and the LED (J) is illuminated.

EN Single-Serve Cup Holder

Pull down the cup holder to brew directly into your favorite cup or mug.

Brew into a cup or travel mug:

NOTE: Do not place the travel mug on the keep warm plate when the indicator (J) is illuminated.

travel mug:



All other steps are described under “Making Coffee”.

FR Single-Serve Cup Holder

Pull down the cup holder to brew directly into your favorite cup or mug.

Brew into a cup or travel mug:

NOTE: Do not place the travel mug on the keep warm plate when the indicator (J) is illuminated.

cup:



All other steps are described under “Making Coffee”.

ES Single-Serve Cup Holder

Pull down the cup holder to brew directly into your favorite cup or mug.

Brew into a cup or travel mug:

NOTE: Do not place the travel mug on the keep warm plate when the indicator (J) is illuminated.

All other steps are described under “Making Coffee”.

EN Brew modes

FR Brew modes

ES Brew modes

Light

Gold

Bold

Light: Brew setting is automatically adjusted so you get a milder cup of coffee.

Light: Brew setting is automatically adjusted so you get a milder cup of coffee.

Light: Brew setting is automatically adjusted so you get a milder cup of coffee.

Gold: This mode has been certified by the SCA (Specialty Coffee Association) to meet their rigorous technical requirements using the Cone Filter Basket and water volume of 1.5L (corresponding to the 50 oz. mark in the water tank) with a brew ratio of 55 g of coffee to 1.0L of water.

Gold: This mode has been certified by the SCA (Specialty Coffee Association) to meet their rigorous technical requirements using the Cone Filter Basket and water volume of 1.5L (corresponding to the 50 oz. mark in the water tank) with a brew ratio of 55 g of coffee to 1.0L of water.

Gold: This mode has been certified by the SCA (Specialty Coffee Association) to meet their rigorous technical requirements using the Cone Filter Basket and water volume of 1.5L (corresponding to the 50 oz. mark in the water tank) with a brew ratio of 55 g of coffee to 1.0L of water.



If a brewer passes all of the tests in the certification procedure, as conducted by the SCA, that brewer will be eligible to be recognized as an exemplary home brewer and join the short list of SCA Certified Home Brewers.

The Braun coffee maker has met these SCA requirements when using the “Gold” setting.

If a brewer passes all of the tests in the certification procedure, as conducted by the SCA, that brewer will be eligible to be recognized as an exemplary home brewer and join the short list of SCA Certified Home Brewers.

The Braun coffee maker has met these SCA requirements when using the “Gold” setting.

If a brewer passes all of the tests in the certification procedure, as conducted by the SCA, that brewer will be eligible to be recognized as an exemplary home brewer and join the short list of SCA Certified Home Brewers.

The Braun coffee maker has met these SCA requirements when using the “Gold” setting.

Bold: Brew setting is automatically adjusted so you get a stronger cup of coffee.

Bold: Brew setting is automatically adjusted so you get a stronger cup of coffee.

Bold: Brew setting is automatically adjusted so you get a stronger cup of coffee.

EN Making Coffee


1. Fill water in the water reservoir.

FR Making Coffee

1. Fill water in the water reservoir.

ES Making Coffee


1. Fill water in the water reservoir.

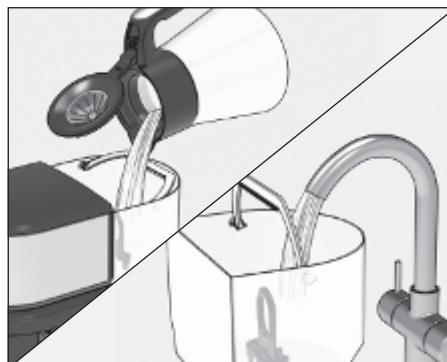

2. Insert the gold tone permanent filter (Q) or a paper filter (cone type # 4) in the filter basket (O). Never use both at the same time
3. Add the desired amount of ground coffee, corresponding to the number of cups being brewed. We recommend using the Braun coffee measuring scoop. Refer to the indications on the Braun coffee measuring scoop (S).
4. Close the water reservoir and place the carafe or your empty cup underneath the brew basket outlet.
5. Press the On/Off button (H).
6. Place the lever (E) in position "Coffee".
7. Select the beverage size (F).

2. Insert the gold tone permanent filter (Q) or a paper filter (cone type # 4) in the filter basket (O). Never use both at the same time
3. Add the desired amount of ground coffee, corresponding to the number of cups being brewed. We recommend using the Braun coffee measuring scoop. Refer to the indications on the Braun coffee measuring scoop (S).
4. Close the water reservoir and place the carafe or your empty cup underneath the brew basket outlet.
5. Press the On/Off button (H).
6. Place the lever (E) in position "Coffee".
7. Select the beverage size (F).


2. Insert the gold tone permanent filter (Q) or a paper filter (cone type # 4) in the filter basket (O). Never use both at the same time
3. Add the desired amount of ground coffee, corresponding to the number of cups being brewed. We recommend using the Braun coffee measuring scoop. Refer to the indications on the Braun coffee measuring scoop (S).
4. Close the water reservoir and place the carafe or your empty cup underneath the brew basket outlet.
5. Press the On/Off button (H).
6. Place the lever (E) in position "Coffee".
7. Select the beverage size (F).

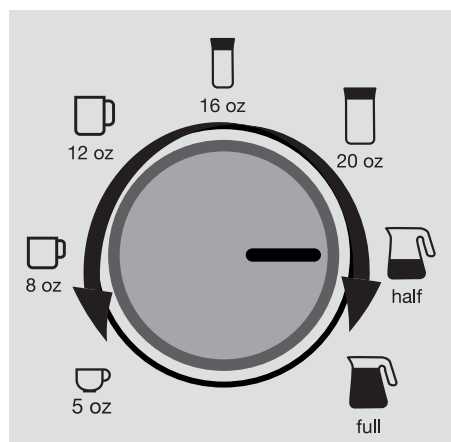

8. Select your brew mode to start the brew cycle. After the brew mode has been selected the brewing process starts immediately.

8. Select your brew mode to start the brew cycle. After the brew mode has been selected the brewing process starts immediately.


8. Select your brew mode to start the brew cycle. After the brew mode has been selected the brewing process starts immediately.

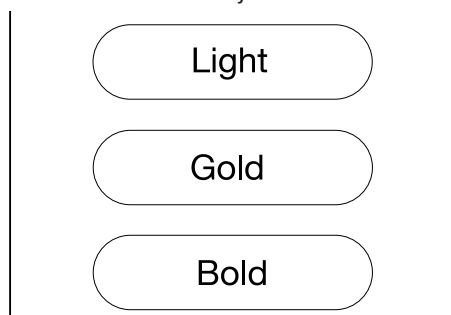

9. During brewing, the On/Off button and the selected brewing mode are illuminated continuously.

9. During brewing, the On/Off button and the selected brewing mode are illuminated continuously.

9. During brewing, the On/Off button and the selected brewing mode are illuminated continuously.

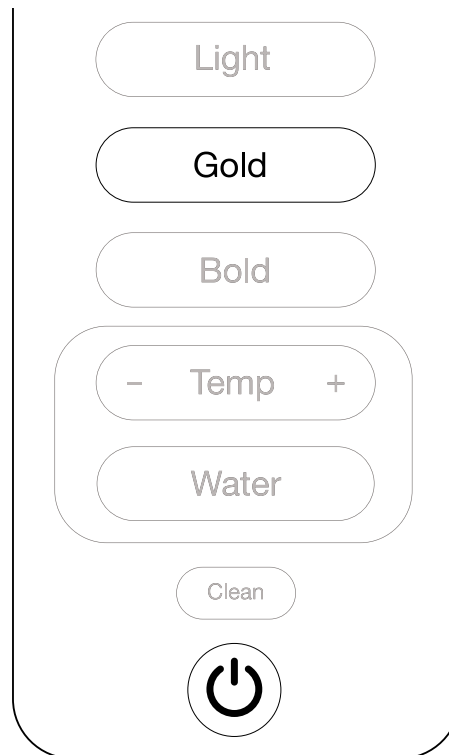

10. The unit will beep when the brew is complete.

10. The unit will beep when the brew is complete.

10. The unit will beep when the brew is complete.

11. Place the lever in position "Drip Stop".

11. Place the lever in position "Drip Stop".

11. Place the lever in position "Drip Stop".



12. If the size options half or full have been selected the coffee maker goes into the keep warm function and the LED (J) turns on. After 2 hours the coffee maker switches off automatically.



12. If the size options half or full have been selected the coffee maker goes into the keep warm function and the LED (J) turns on. After 2 hours the coffee maker switches off automatically.



12. If the size options half or full have been selected the coffee maker goes into the keep warm function and the LED (J) turns on. After 2 hours the coffee maker switches off automatically.

EN Recommended Use of 2-sided coffee measuring scoop

FR Recommended Use of 2-sided coffee measuring scoop

ES Recommended Use of 2-sided coffee measuring scoop



2-sided coffee measuring scoop (S)

EN Beverage Size							
FR Beverage Size	5 oz	8 oz	12 oz	16 oz	20 oz	half	full
ES Beverage Size							
EN Amount of ground coffee	1 big scoop	2 small scoops	3 small scoops	4 small scoops	4 big scoops	5 big scoops	10 big scoops
FR Amount of ground coffee							
ES Amount of ground coffee							

EN For Best Results

- When using paper filters, be sure that it is completely open and fully inserted in the basket. It may help to fold and flatten the seams of the paper filter beforehand.
- Once the coffee has finished brewing, stir it before serving to blend the flavors. The coffee at the bottom of the carafe will be somewhat stronger than the coffee at the top.

FR For Best Results

- When using paper filters, be sure that it is completely open and fully inserted in the basket. It may help to fold and flatten the seams of the paper filter beforehand.
- Once the coffee has finished brewing, stir it before serving to blend the flavors. The coffee at the bottom of the carafe will be somewhat stronger than the coffee at the top.

ES For Best Results

- When using paper filters, be sure that it is completely open and fully inserted in the basket. It may help to fold and flatten the seams of the paper filter beforehand.
- Once the coffee has finished brewing, stir it before serving to blend the flavors. The coffee at the bottom of the carafe will be somewhat stronger than the coffee at the top.

EN Brew over – ice coffee

1. Press the On/Off button.
2. Place the lever (E) in position “Coffee”.

3. Fill water in the water reservoir.
4. Fill your desired carafe/cup half with ice cubes and place it below the filter basket.
5. Select the beverage size (F).

6. Press the “Over Ice” button.
7. Select the Bold brew mode to start the brewing cycle.

8. The selected brew mode and the On/Off button (H) are illuminated continuously during the brewing process.
9. The unit will beep when the brew is complete and the selected brew mode and “Over Ice” turn off.
10. Place the lever (E) in position “Drip Stop”.


NOTE: Be sure the cup size fits to the selected beverage size. Never fill ice cubes in the water reservoir. We recommend using the carafe or a thermo-resistant glass.

FR Brew over – ice coffee


1. Press the On/Off button.
2. Place the lever (E) in position “Coffee”.



3. Fill water in the water reservoir.
4. Fill your desired carafe/cup half with ice cubes and place it below the filter basket.
5. Select the beverage size (F).

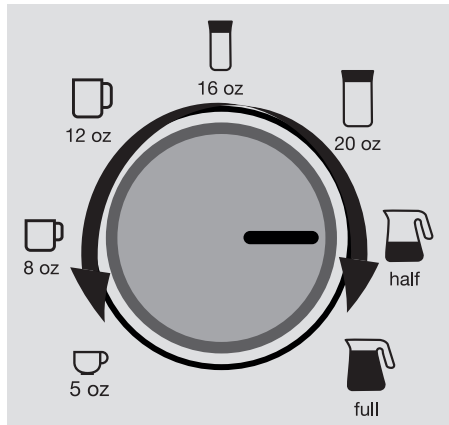

 6. Press the “Over Ice” button.
7. Select the Bold brew mode to start the brewing cycle.



8. The selected brew mode and the On/Off button (H) are illuminated continuously during the brewing process.
9. The unit will beep when the brew is complete and the selected brew mode and “Over Ice” turn off.
10. Place the lever (E) in position “Drip Stop”.



NOTE: Be sure the cup size fits to the selected beverage size. Never fill ice cubes in the water reservoir. We recommend using the carafe or a thermo-resistant glass.

ES Brew over – ice coffee

1. Press the On/Off button.
2. Place the lever (E) in position “Coffee”.

3. Fill water in the water reservoir.
4. Fill your desired carafe/cup half with ice cubes and place it below the filter basket.
5. Select the beverage size (F).

6. Press the “Over Ice” button.
7. Select the Bold brew mode to start the brewing cycle.

8. The selected brew mode and the On/Off button (H) are illuminated continuously during the brewing process.
9. The unit will beep when the brew is complete and the selected brew mode and “Over Ice” turn off.
10. Place the lever (E) in position “Drip Stop”.

NOTE: Be sure the cup size fits to the selected beverage size. Never fill ice cubes in the water reservoir. We recommend using the carafe or a thermo-resistant glass.

EN Pause during brewing process

1. Move the lever (E) to “Drip Stop” position.

2. The brewing process will be paused and the selected brewing mode is flashing.
3. The lever should be moved back to the “Coffee” position within maximum 2 minutes.

4. The brewing process will be continued.

NOTE: If the lever is not moved back to “Coffee” position, the brewing process is terminated with an acoustic signal. If you pause the brewing process the GOLD/SCA brew mode requirements might not be met.

FR Pause during brewing process

1. Move the lever (E) to “Drip Stop” position.

2. The brewing process will be paused and the selected brewing mode is flashing.
3. The lever should be moved back to the “Coffee” position within maximum 2 minutes.

4. The brewing process will be continued.

NOTE: If the lever is not moved back to “Coffee” position, the brewing process is terminated with an acoustic signal. If you pause the brewing process the GOLD/SCA brew mode requirements might not be met.

ES Pause during brewing process

1. Move the lever (E) to “Drip Stop” position.

2. The brewing process will be paused and the selected brewing mode is flashing.
3. The lever should be moved back to the “Coffee” position within maximum 2 minutes.

4. The brewing process will be continued.

NOTE: If the lever is not moved back to “Coffee” position, the brewing process is terminated with an acoustic signal. If you pause the brewing process the GOLD/SCA brew mode requirements might not be met.

EN Dispensing hot water*

1. Fill water in the water reservoir.
2. Place the carafe on the keep warm plate or a cup on the cup holder.
3. Press the On/Off button.
4. Place the lever (E) in position “Hot Water”. The buttons “Water” and “Temp” are illuminated. The default temperature is shown in the display.

FR Dispensing hot water*

1. Fill water in the water reservoir.
2. Place the carafe on the keep warm plate or a cup on the cup holder.
3. Press the On/Off button.
4. Place the lever (E) in position “Hot Water”. The buttons “Water” and “Temp” are illuminated. The default temperature is shown in the display.

ES Dispensing hot water*

1. Fill water in the water reservoir.
2. Place the carafe on the keep warm plate or a cup on the cup holder.
3. Press the On/Off button.
4. Place the lever (E) in position “Hot Water”. The buttons “Water” and “Temp” are illuminated. The default temperature is shown in the display.

* certain models only


* certain models only

* certain models only

5. Press “Temp” to select the temperature. You can choose one of the 6 pre-set temperatures.

5. Press “Temp” to select the temperature. You can choose one of the 6 pre-set temperatures.


5. Press “Temp” to select the temperature. You can choose one of the 6 pre-set temperatures.

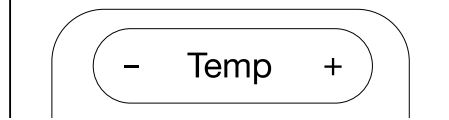

6. Select the beverage size (F).

6. Select the beverage size (F).


6. Select the beverage size (F).

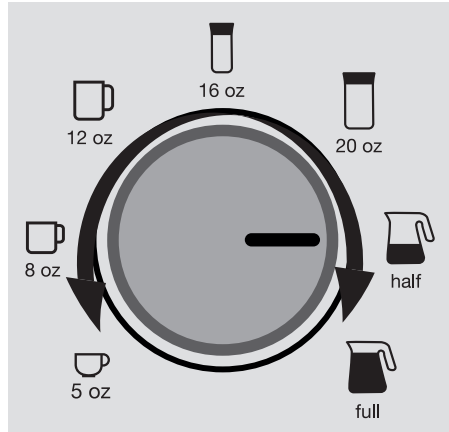

7. Press “Water” to start the dispensing process. The button “Water” and the On/Off button are illuminated.

7. Press “Water” to start the dispensing process. The button “Water” and the On/Off button are illuminated.

7. Press “Water” to start the dispensing process. The button “Water” and the On/Off button are illuminated.

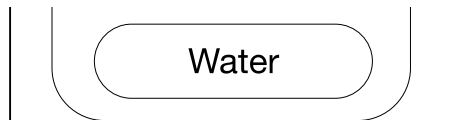

9. If dispensing is completed the process is terminated with an acoustic signal.


9. If dispensing is completed the process is terminated with an acoustic signal.

9. If dispensing is completed the process is terminated with an acoustic signal.

10. Place the lever (E) in position “Drip Stop”.

10. Place the lever (E) in position “Drip Stop”.

10. Place the lever (E) in position “Drip Stop”.

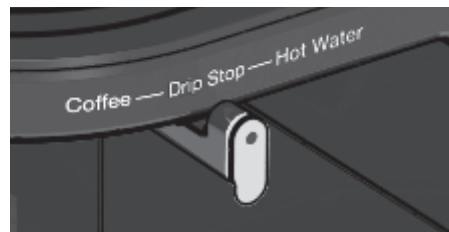

EN Descaling


For the best performance from your Braun coffee maker, descale the unit when the LED CLEAN starts flashing. This indicates it is time to descale your coffee maker.

EN Descaling

For the best performance from your Braun coffee maker, descale the unit when the LED CLEAN starts flashing. This indicates it is time to descale your coffee maker.

EN Descaling

For the best performance from your Braun coffee maker, descale the unit when the LED CLEAN starts flashing. This indicates it is time to descale your coffee maker.

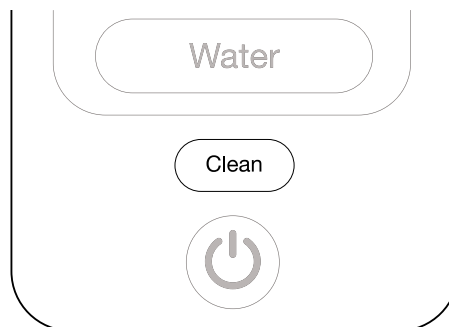

Frequency will depend upon the hardness of your tap water and how often you use the coffee maker.

Frequency will depend upon the hardness of your tap water and how often you use the coffee maker.

Frequency will depend upon the hardness of your tap water and how often you use the coffee maker.

We recommend using the Braun Descaling Solution (can be purchased in stores, through the Braun website, or by calling Customer Service).

1. CLEAN is flashing.
2. Fill the descaling solution (follow packaging instruction on the descaling agent) in the water reservoir.
3. Remove the gold tone permanent filter (Q) and the charcoal filter(B).
4. Place the empty carafe in its position on the keep warm plate (H).
5. Place the lever in position "Coffee".

6. Press the On/Off button (K).
7. Press CLEAN to start the descaling program.

CLEAN turns permanently on and the countdown timer starting from "25" appears in the display.

Once the descaling process has started, it is not possible to stop the program until finished.

8. When the water reservoir is empty the countdown timer in the display shows "7" and CLEAN starts flashing.

 
9. Empty the carafe.
10. Refill the water reservoir with a full carafe (not exceeding 10 cups) of fresh water, place the empty carafe on the keep warm plate and press again CLEAN to start the rinsing cycle.
11. When the descaling program has been completed, the On/Off button and CLEAN turn off.
12. Empty the carafe and rinse it thoroughly with water.

We recommend using the Braun Descaling Solution (can be purchased in stores, through the Braun website, or by calling Customer Service).

1. CLEAN is flashing.
2. Fill the descaling solution (follow packaging instruction on the descaling agent) in the water reservoir.
3. Remove the gold tone permanent filter (Q) and the charcoal filter(B).
4. Place the empty carafe in its position on the keep warm plate (H).
5. Place the lever in position "Coffee".



6. Press the On/Off button (K).
7. Press CLEAN to start the descaling program.



CLEAN turns permanently on and the countdown timer starting from "25" appears in the display.



Once the descaling process has started, it is not possible to stop the program until finished.

8. When the water reservoir is empty the countdown timer in the display shows "7" and CLEAN starts flashing.



9. Empty the carafe.
10. Refill the water reservoir with a full carafe (not exceeding 10 cups) of fresh water, place the empty carafe on the keep warm plate and press again CLEAN to start the rinsing cycle.
11. When the descaling program has been completed, the On/Off button and CLEAN turn off.
12. Empty the carafe and rinse it thoroughly with water.

We recommend using the Braun Descaling Solution (can be purchased in stores, through the Braun website, or by calling Customer Service).

1. CLEAN is flashing.
2. Fill the descaling solution (follow packaging instruction on the descaling agent) in the water reservoir.
3. Remove the gold tone permanent filter (Q) and the charcoal filter(B).
4. Place the empty carafe in its position on the keep warm plate (H).
5. Place the lever in position "Coffee".

6. Press the On/Off button (K).
7. Press CLEAN to start the descaling program.

CLEAN turns permanently on and the countdown timer starting from "25" appears in the display.

Once the descaling process has started, it is not possible to stop the program until finished.

8. When the water reservoir is empty the countdown timer in the display shows "7" and CLEAN starts flashing.

9. Empty the carafe.
10. Refill the water reservoir with a full carafe (not exceeding 10 cups) of fresh water, place the empty carafe on the keep warm plate and press again CLEAN to start the rinsing cycle.
11. When the descaling program has been completed, the On/Off button and CLEAN turn off.
12. Empty the carafe and rinse it thoroughly with water.

EN Cleaning and Maintenance

- Always turn coffee maker off and remove the plug from the electrical outlet before cleaning.
- Lift up the reservoir cover. Remove the gold tone permanent filter and discard the ground coffee.
- Remove the carafe from the keep warm plate and discard any remaining coffee.
- The filter basket, gold tone permanent filter, carafe including lid and the water reservoir including lid can be washed in warm, soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher. Dry all parts after use.
- Do not use any scouring agents or harsh cleansers on any part of the coffee maker.

FR Cleaning and Maintenance

- Always turn coffee maker off and remove the plug from the electrical outlet before cleaning.
- Lift up the reservoir cover. Remove the gold tone permanent filter and discard the ground coffee.
- Remove the carafe from the keep warm plate and discard any remaining coffee.
- The filter basket, gold tone permanent filter, carafe including lid and the water reservoir including lid can be washed in warm, soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher. Dry all parts after use.
- Do not use any scouring agents or harsh cleansers on any part of the coffee maker.

ES Cleaning and Maintenance

- Always turn coffee maker off and remove the plug from the electrical outlet before cleaning.
- Lift up the reservoir cover. Remove the gold tone permanent filter and discard the ground coffee.
- Remove the carafe from the keep warm plate and discard any remaining coffee.
- The filter basket, gold tone permanent filter, carafe including lid and the water reservoir including lid can be washed in warm, soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher. Dry all parts after use.
- Do not use any scouring agents or harsh cleansers on any part of the coffee maker.



- Never immerse the unit in water or other liquids.
- To clean base, simply wipe with a clean, damp cloth and dry before storing.
- Do not put any water in the unit once the filter basket has been removed. Wipe the area under the filter basket with a damp cloth.
- Fingerprints and other blemishes on the housing can be wiped off with soap and water or a non-abrasive cleaning solution.
- Do not dry the inside of the water reservoir with a cloth, as lint may remain.

- Never immerse the unit in water or other liquids.
- To clean base, simply wipe with a clean, damp cloth and dry before storing.
- Do not put any water in the unit once the filter basket has been removed. Wipe the area under the filter basket with a damp cloth.
- Fingerprints and other blemishes on the housing can be wiped off with soap and water or a non-abrasive cleaning solution.
- Do not dry the inside of the water reservoir with a cloth, as lint may remain.

- Never immerse the unit in water or other liquids.
- To clean base, simply wipe with a clean, damp cloth and dry before storing.
- Do not put any water in the unit once the filter basket has been removed. Wipe the area under the filter basket with a damp cloth.
- Fingerprints and other blemishes on the housing can be wiped off with soap and water or a non-abrasive cleaning solution.
- Do not dry the inside of the water reservoir with a cloth, as lint may remain.

EN Troubleshooting guide

PROBLEM	CAUSE	SOLUTION
Display does not show a time	The appliance is unplugged	Plug unit in
Display flashes "2:00 AM"	<ul style="list-style-type: none"> Initial operation There was a power outage 	Set clock
It is not possible to set the AUTO ON time	<ul style="list-style-type: none"> Lever not positioned in the "Coffee" position Clock has not been set 	<ul style="list-style-type: none"> Position lever in position "Coffee" Set clock time
It is not possible to activate the AUTO ON time	<ul style="list-style-type: none"> AUTO ON time has not been set 	<ul style="list-style-type: none"> Set AUTO ON time
Coffee is not brewing	<ul style="list-style-type: none"> The appliance is unplugged There was a power outage Brew mode was not selected There is no water in the water reservoir The appliance is in stand-by mode AUTO-ON function is not activated Lever is positioned in "Drip Stop" position Water reservoir cover is not closed 	<ul style="list-style-type: none"> Plug unit in Wait for power to be restored Select brew mode to start Pour water into the water reservoir Switch on the appliance Activate AUTO-ON function Place lever in position "Coffee" Close the water reservoir cover
The coffee maker is only brewing water	There are no coffee grounds in the filter basket	Add the desired amount of coffee to the filter
The coffee maker is overflowing	The filter basket is not properly inserted	Insert the filter basket correctly
	Using too much coffee grounds	Remove filter from the filter basket If using a paper filter, replace with new one Restart the coffee brewing process with proper amount of coffee grounds (not exceeding 10 coffee measuring scoops or tablespoons)
	Using coffee that is too finely ground	Use only coffee that is ground for drip coffee makers
	Paper filter and gold tone permanent filter are used together	Use either paper or the gold tone permanent filter, never both at the same time
	The coffee flow through the lid is blocked	Remove the insert from the middle of the lid Rinse the lid properly under running water
	The filter basket spring popped out during cleaning	Reattach the spring to the filter basket
There are coffee grounds at the bottom of the carafe	The paper filter was not inserted correctly into the filter basket	Rinse filter basket, set filter into the filter basket and restart brewing
	<ul style="list-style-type: none"> Paper filter collapsed Coffee powder is too finely ground 	<ul style="list-style-type: none"> Remove filter, rinse filter basket and restart brewing with a new paper filter Use only coffee that is ground for drip coffee makers
Display shows "E01"	Water in the water reservoir is finished	Pour water into the water reservoir Press On/Off
Display shows "Lid"	Lid of the water reservoir is open	Close the lid

in other machine E01 is used for TCO. Can we use different code for water??