


INSTRUCTION SHEET

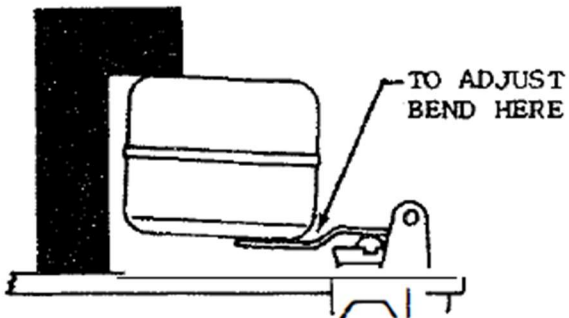

CAUTION: DO NOT EXERT
PRESSURE ON RESILIENT
NEEDLE VALVE

FLOAT LEVEL ADJUSTMENT

WITH BOWL COVER INVERTED, MEASURE FROM MACHINED SURFACE OF BOWL COVER (NO GASKET) TO TOP OF EACH FLOAT PONTOON. TO ADJUST BEND FLOAT LEVER CLOSE TO FLOAT BODY. NOTE: WHEN VIEWED FROM FREE END, THE FLOAT PONTOONS MUST BE CENTERED AND AT RIGHT ANGLES TO THE MACHINED SURFACE OF BOWL COVER AND MOVE FREELY ON THE FLOAT PIN.