


# **POWER and RELIABILITY**

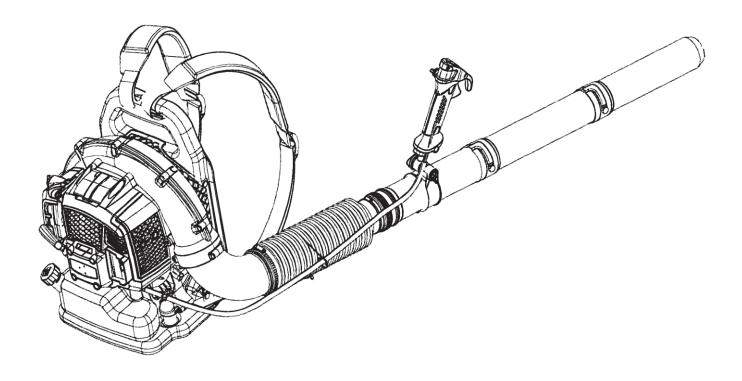

## **PARTS LIST**

### BACKPACK BLOWER MODEL: PBB2417





Please let us know what you think. To leave a review and see our full line of products, visit:

1-844-905-0882, info@proruntech.com Version: B - Issue Date: 2023/03/15

proruntech.com  $\star \star \star \star \star$ 

#### **SPARE PARTS / CHASSIS AND ENCLOSURE**

No.	Description	Qty	121 120 119 118 123 117 116 115 114
113	Speed Knob	1	
114	Handle Left Cover	1	
115	Washer	1	
116	Speed Lever	1	
117	Self-Tapping Screw ST4x10	1	A CONTRACTOR
118	Trigger	1	
119	Spring	1	
120	Handle Right Cover	1	
121	Self-Tapping Screw ST5x14	2	
122	Screw M5x40	1	
123	Self-Tapping Screw ST2.9x6.5	1	
124	Limit Plate	1	
125	Reed A	1	
126	Reed B	1	
нко	TTI E SEAT ASSEMBLY		
	TTLE SEAT ASSEMBLY umber: 20085834 Description	Qty	
art Nu	umber: 20085834	<b>Qty</b>	
art Nu No.	Umber: 20085834 Description		
art Nu <b>No.</b> 104	Umber: 20085834 Description Retaining Ring	1	
art Nu <b>No.</b> 104 105	Umber: 20085834 Description Retaining Ring Locking Knob	1	128 104 105
art Nu <u>No.</u> 104 105 128 HRO	Umber: 20085834 Description Retaining Ring Locking Knob	1	
art Nu <u>No.</u> 104 105 128 HRO	Umber: 20085834         Description         Retaining Ring         Locking Knob         Nut M5	1	
Art Nu 104 105 128 HRO <sup>-</sup> art Nu	Umber: 20085834          Description         Retaining Ring         Locking Knob         Nut M5		

#### **SPARE PARTS / CHASSIS AND ENCLOSURE**


STRAF Part Nu No. 99	PS Imber: 68815202 Description Straps	Qty 2	99
	MOUNT CLIPS Imber: 20060250 Description Straps / Belt Quick Release	Qty 2	98
BACK Part Nu 97	PACK Imber: 20071594 Description Back Cushion	Qty 1	97
Part Nu	TANK ASSEMBLY Imber: 20060140		
No.	Description	Qty	80
77	Filter Assembly	1	79 81
78 79	Fuel Hose Mount Hose Mount	1	78 82
80	Return Hose	1	83
81	Fuel Tank Cap	1	
82	Rubber Valve	1	
83	Rubber Valve Mount	1	85
84	Gasket	1	86
85	Anti Drop Plate	1	
86	Fuel Tank	1	

#### **SPARE PARTS / STARTING MECHANISM**

No.	Description	Qty	
1	Starter Handle	1	2
2	Pull Cord Sheath	1	10 5
3	Screw M5x20	4	
4	Starter Cover	1	
5	Starter Pull Cord	1	$+ \circ \textcircled{0} \textcircled{0} \textcircled{0} \textcircled{0} \textcircled{0} \textcircled{0} \textcircled{0} \textcircled{0}$
6	Starter Spring	1	
7	Starter Pulley	1	
8	Easy Spring	1	
9	Starter Pawl	1	
10	Washer 5	1	
11	Self-Tapping Screw ST5x4	1	
<b>No.</b> 1 5	Description Starter Handle Starter Pull Cord	Qty 1 1	5
1 5 GNITI	Starter Handle Starter Pull Cord ON ASSEMBLY	1	5
1 5 GNITI Part No	Starter Handle Starter Pull Cord ON ASSEMBLY umber: 68815203	1	5
1 5 GNITI Part No No.	Starter Handle Starter Pull Cord ON ASSEMBLY umber: 68815203 Description	1 1 Qty	
1 5 GNITI Part No Part No 22	Starter Handle Starter Pull Cord ON ASSEMBLY umber: 68815203 Description Igniter Coil Assembly	1 1 2 2 2 4 2 1	5
1 5 GNITI Part No 22 23	Starter Handle Starter Pull Cord ON ASSEMBLY umber: 68815203 Description Igniter Coil Assembly Cap Screw M4x20	1 1 2	22
1 5 GNITI Part No Part No 22	Starter Handle Starter Pull Cord ON ASSEMBLY umber: 68815203 Description Igniter Coil Assembly	1 1 2 2 2 4 2 1	
1 5 GNITI Part No. 22 23 24	Starter Handle Starter Pull Cord ON ASSEMBLY umber: 68815203 Description Igniter Coil Assembly Cap Screw M4x20	1 1 2	22
1 5 GNITI Part No. 22 23 24	Starter Handle         Starter Pull Cord         ON ASSEMBLY         umber: 68815203         Description         Igniter Coil Assembly         Cap Screw M4x20         Insulation Pad	1 1 2	22

## POWER and RELIABILITY


#### **SPARE PARTS / CARBURETOR**

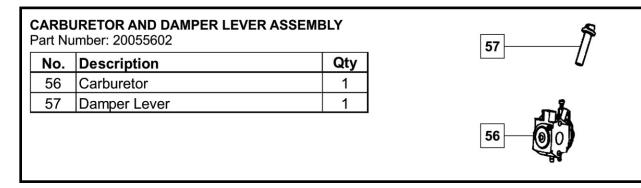

#### **SPARE PARTS / TUBING**

TUBE ELBOW         Part Number: 20071587         No.       Description         110       Elbow	Qty 1	
No.       Description         108       Flexible Tube	Qty 1	
TUBE REAR ASSEMBLY         Part Number: 20071591         No.       Description         102       Tube Rear         103       Support Tube	Qty 1 1	

#### **SPARE PARTS / TUBING**

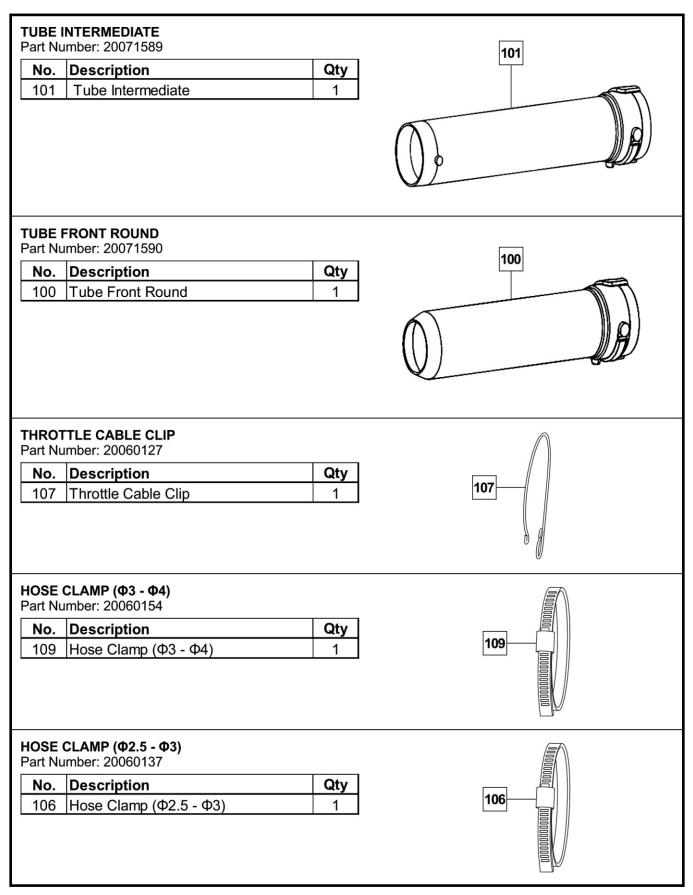


#### **SPARE PARTS / FILTERS AND ACCESSORIES**

AIR FI Part No No. 60	umber: 20060128	<b>Qty</b> 1	42
	LTER HOUSING TOP ASSEMBLY umber: 68815204 Description Air Filter Housing Knob	Qty 1 1	
	LTER HOUSING BASE umber: 20069044 Description Air Filter Base Housing	<b>Qty</b> 1	58

POWER and RELIABILITY

#### **ASSEMBLY PARTS LIST**

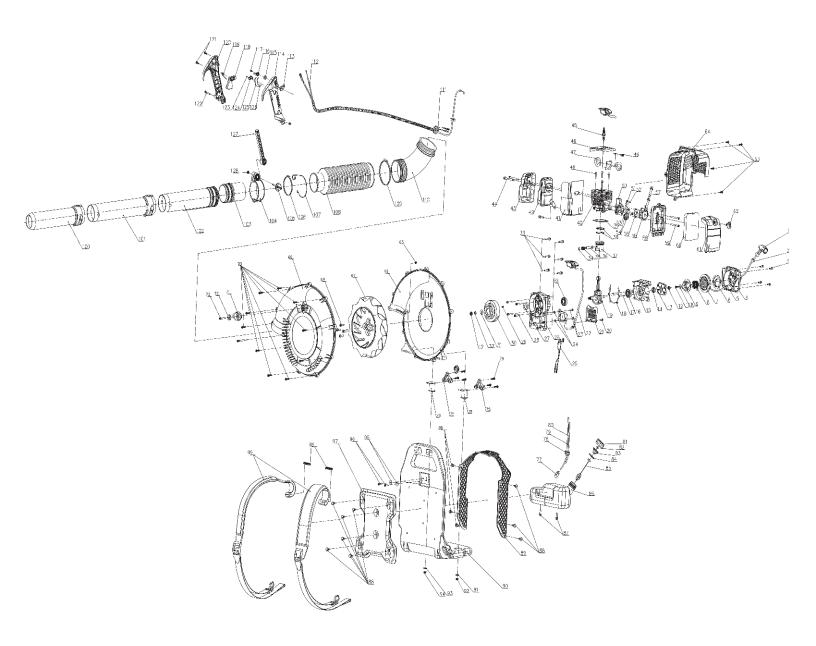

#### **ASSEMBLY PARTS LIST**

No.	Description	Qty
1	Starter Handle	1
2	Pull Cord Sheath	1
3	Screw M5x20	4
4	Starter Cover	1
5	Starter Pull Cord	1
6	Starter Spring	1
7	Starter Pulley	1
8	Easy Spring	1
9	Starter Pawl	1
10	Washer 5	1
11	Self-Tapping Screw ST5x4	1
12	Screw M8	1
13	Magneto Rotor	4
14	Oil Seal	1
15	Crankcase LH	1
16	Bearing	1
17	Pin	2
18	Gasket	1
19	Crank Shaft Connecting Rod Assy	1
20	Cap Screw M5x12	1
21	Igniter Cover Plate	1
22	Igniter Coil Assembly	1
23	Cap Screw M4x20	2
24	Insulation Pad	2
25	Switch Line	1
26	Crankcase RH	1
27	Oil Seal	1
28	Screw M5x35	4
29	Woodruff Key	1
30	Rotor / Fan	1
31	Washer A 5	1
32	Washer B 5	1
33	Nut	1
34	Clip / Piston Pin	2
35	Needle Bearing	1
36	Piston Pin	1
37	Piston	1
38	Piston Ring	2
39	Gasket	1

No.	Description	Qty
40	Cylinder	1
41	Muffler Gasket	1
42	Muffler	1
43	Muffler Cover	1
44	Screw M6x55	2
45	Spark Plug	1
46	Air Deflectors	1
47	Gasket	1
48	Screw M5x20	4
49	Round Rubber Plug	1
50	Insulator	1
51	Metal Plate A	1
52	Screw M4x6	1
53	Metal Plate B	1
54	Screw M5x28	2
55	Carburetor Gasket	1
56	Carburetor	1
57	Damper Lever	1
58	Air Filter Base Housing	1
59	Screw M5x52	2
60	Air Filter	1
61	Air Filter Housing	1
62	Knob	1
63	Self-Tapping Screw ST5x14	4
64	Top Cover	1
65	Nut M5	1
66	Rear Fan Cover	1
67	Fan	1
68	Screw M6x25	4
69	Front Fan Cover	1
70	Self-Tapping Screw ST5x25	10
71	Damping Plate	1
72	Washer 5	1
73	Screw M5x70	1
74	Self-Tapping Screw ST5x25	3
75	Anti-Falling Cover	2
76	Damping Rubber	2
77	Filter Assembly	1
78	Fuel Hose Mount	1

#### **ASSEMBLY PARTS LIST**

No.	Description	Qty	No.	Description	Qty
79	Fuel Hose	1	104	Retaining Ring	1
80	Return Hose	1	105	Locking Knob	1
81	Fuel Tank Cap	1	106	Hose Clamp (Φ3 - Φ4)	1
82	Rubber Valve	1	107	Throttle Cable Clip	1
83	Rubber Valve Mount	1	108	Flexible Tube	1
84	Gasket	1	109	Hose Clamp (Φ3 - Φ4)	1
85	Anti Drop Plate	1	110	Elbow	1
86	Fuel Tank	1	111	Switch Line	1
87	Screw M6x25	2	112	Thottle Line	1
88	Clasp	12	113	Speed Knob	1
89	Protective Frame	1	114	Handle Left Cover	1
90	Back Frame	1	115	Washer	2
91	Washer	2	116	Speed Lever	1
92	Nut M6	2	117	Self-Tapping Screw ST4x10	1
93	Washer	2	118	Trigger	1
94	Screw M5x20	2	119	Spring	1
95	Washer	2	120	Handle Right Cover	1
96	Screw M5x20	2	121	Self-Tapping Screw ST5x14	2
97	Back Cushion	1	122	Screw M5x40	1
98	Straps / Belt Quick Release	2	123	Self-Tapping Screw ST2.9x6.5	1
99	Straps	2	124	Limit Plate	1
100	Tube Front Round	1	125	Reed A	1
101	Tube Intermediate	1	126	Reed B	1
102	Tube Rear	1	127	Handle Seat	1
103	Support Tube	1	128	Nut M5	1

PRORUN regularly improves our products, and you may find slight differences between your machine and descriptions contained within this parts list. Modifications can be made to the machine without notice and without the obligation to update the operator's manuals, provided that the essential safety and functional characteristic remain unaltered. Contact PRORUN Customer Service with any questions and current specifications.