




GAS///

PARTS LIST

HANDHELD BLOWER

MODEL: PBB2884

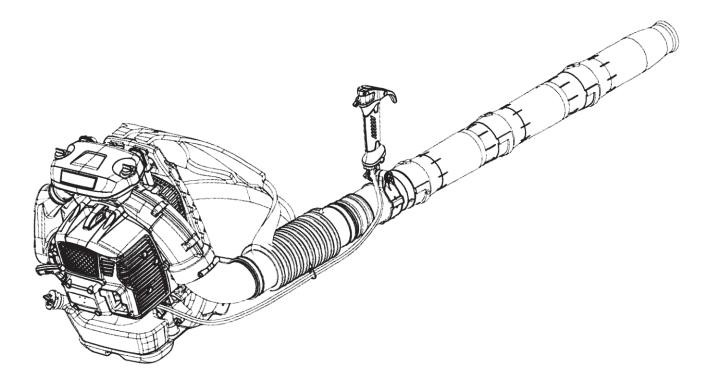







Version: B - Issue Date: 2023/03/15




SPARE PARTS / CHASSIS AND ENCLOSURE

AIR FILTER BOTTOM HOUSING ASSEMBLY

Part Number: 68837603


No.	Description	Qty
68	Air Filter Lower Cover	1
69	Victaulic Ф80-Ф100	1

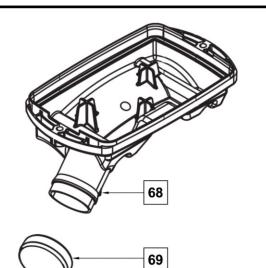

AIR FILTER TOP HOUSING ASSEMBLY


Part Number: 68837601

No.	Description	Qty
65	Air Box Cover	1
73	Air Filter Side Cover	2
63	Self-Tapping Screw ST5x25	2

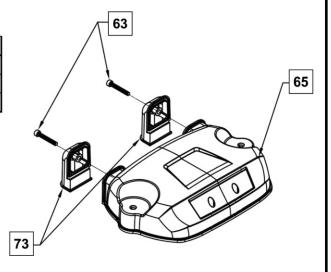

DRAFT PIPE ASSEMBLY

No.	Description	Qty
70	Draft Pipe	1
71	Victaulic Φ44-Φ64	1

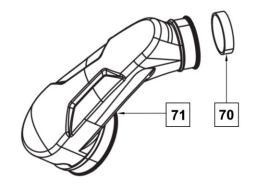




SPARE PARTS / CHASSIS AND ENCLOSURE

THROTTLE HANDLE ASSEMBLY

Part Number: 20085772


No.	Description	Qty
7	Speed Knob	1
8	Left Cover	1
9	Washer	1
10	Cruise Control Lever	1
11	Self-Tapping Screw ST4×16	1
12	Leaf A	1
13	Leaf B	1
14	Limit Plate	1
15	Self-Tapping Screw ST3.5×6	1
16	Throttle Push Rod	1
17	Trigger Spring	1
18	Right Cover	1
19	Self-Tapping Screw ST5.0×14	2
20	Screw M5x40	1
21	Off Line	1
22	Throttle Cable	1
23	Nut M5	1
24	Handle Seat Fixing Ring	1
25	Handle Seat	1
26	Connecting Shackle	1
27	Locking Knob	1
28	Nut M5	1

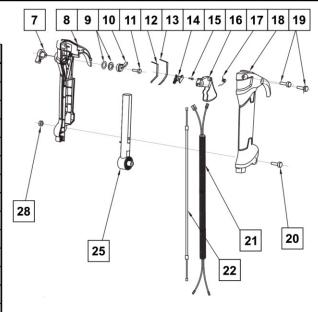

THROTTLE SEAT ASSEMBLY


Part Number: 68837604

No.	Description	Qty
23	Nut M5	1
24	Handle Seat Fixing Ring	1
26	Connecting Shackle	1
27	Locking Knob	1

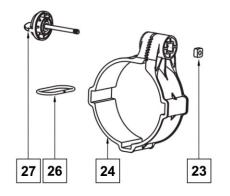

LOCKING KNOB

No.	Description	Qty
64	Locking Knob	1

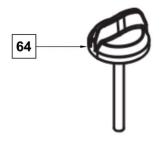




SPARE PARTS / CHASSIS AND ENCLOSURE

FUEL TANK

Part Number: 20060176


No.	Description	Qty
29	Fuel Tank	1

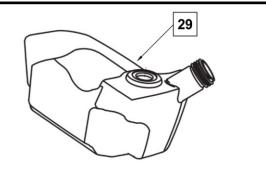

FUEL TANK CAP ASSEMBLY


Part Number: 20072561

No.	Description	Qty
37	Fall Prevention Board	1
38	Seal Washer	1
39	Tank Cap	1

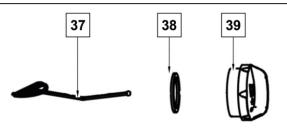

BACKING AND PLASTIC SCREWS

No.	Description	Qty
49	Backing	1
40	Expansion Screw	7

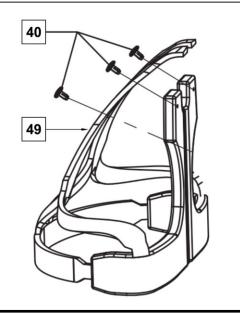




SPARE PARTS / STARTING MECHANISM

STARTER ASSEMBLY


Part Nu	Part Number: 20085753		
No.	Description	Qty	
1	Screw M5x25	7	
2	Starter Housing	1	
3	Pull Cord Sheath	1	
4	Starter Pull Cord	1	
5	Starter Handle	1	
6	Coil Spring	1	
7	Coil Spring Cover	1	
8	Self-Tapping Screw ST3.5x6	2	
9	Starter Pulley	1	
10	Coil Spring	1	
11	Spring Plate	1	
12	Self-Tapping Screw ST4.2x9.5	5	
13	Starting Ratchet	1	
14	Plate Washer 5.5x20x1	1	
15	Sparing	1	
16	Ratchet Gland	1	
17	Anti-Wear Gasket	1	
18	Starter Screw	1	

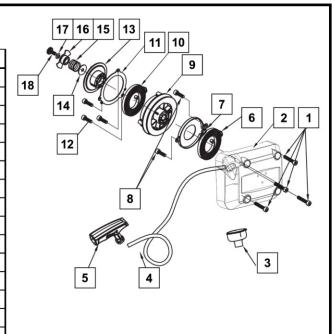

START HANDLE AND ROPE ASSEMBLY


Part Number: 68856002

No.	Description	Qty
5	Starter Handle	1
4	Starter Pull Cord	1

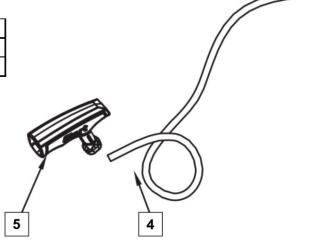

SPARK PLUG

No.	Description	Qty
58	Spark Plug	1

 


SPARE PARTS / CARBURETOR

IGNITION AND SPARK PLUG CAP ASSEMBLY

Part Number: 68837607


No.	Description	Qty
28	Igniter	1
27	Screw M4x14	2

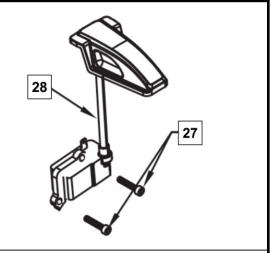

CARBURETOR

Part Number: 20055609

No.	Description	Qty
40	Carburetor	1

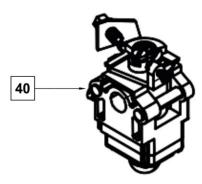


SPARE PARTS / TUBING

TUBE ELBOW ASSEMBLY


Part Number: 68837606

No.	Description	Qty
87	Elbow	1
88	O-Rings 100x3.1	1

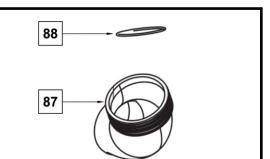

TUBE FLEXIBLE

No.	Description	Qty
3	Flexible Tube	1

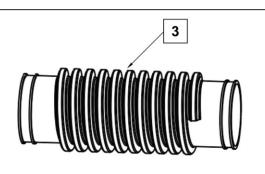




SPARE PARTS / TUBING

TUBE INTERMEDIATE

Part Number: 20071610


No.	Description	Qty
5	Intermediate Tube	2

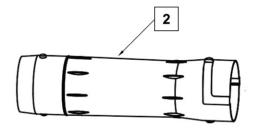

TUBE REAR

Part Number: 20071612


No.	Description	Qty
4	Rear Tube	1

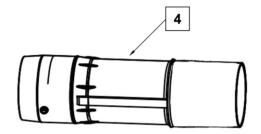

TUBE FRONT

Part Number: 20071611


No.	Description	Qty
6	Front Tube	1

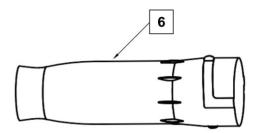

СLАМР Ф3 - Ф5


Part Number: 20060254

No.	Description	Qty
1	СІатр Ф100-Ф120	1

 

THROTTLE CABLE CLIP

No.	Description	Qty
2	Throttle Cable Clip	1

 


SPARE PARTS / FILTER AND ACCESSORIES

FUEL TANK FILTER ASSEMBLY

Part Number: 20085776


No.	Description	Qty
30	Filter Fuel	1
31	Snap Ring Φ7.5	1
32	Balancer	1
33	Fuel Tube A Φ2.5x5	1
34	Oil Return Pipe	1
35	Fuel Tube B Φ2.5x5	1
36	Retainer / Fuel Tube	1

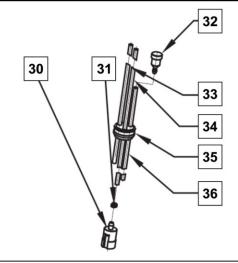

AIR FILTER / PAPER ELEMENT


Part Number: 20060147


N	No.	Description	Qty
	67	Air Filter / Paper Element	1

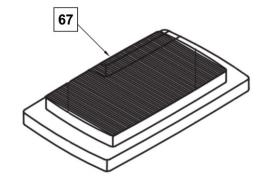

AIR FILTER / FOAM

No.	Description	Qty
72	Air Filter / Foam	1

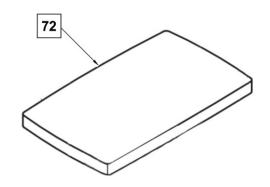


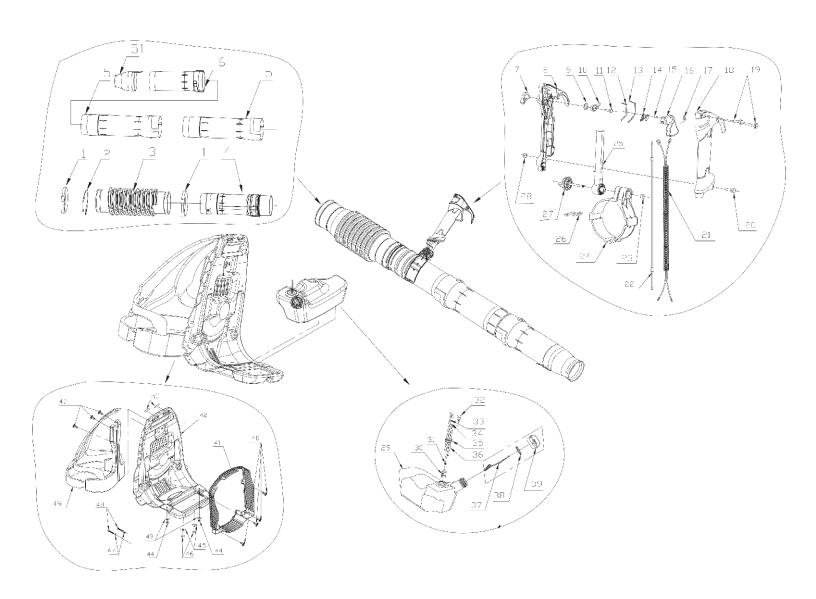



No.	Description	Qty
1	СІатр Ф100-Ф120	2
2	Throttle Cable Clip	1
3	Flexible Tube	1
4	Rear Tube	1
5	Intermediate Tube	2
6	Front Tube	1
7	Speed Knob	1
8	Left Cover	1
9	Washer	1
10	Cruise Control Lever	1
11	Self-Tapping Screw ST4×16	1
12	Leaf A	1
13	Leaf B	1
14	Limit Plate	1
15	Self-Tapping Screw ST3.5×6	1
16	Throttle Push Rod	1
17	Trigger Spring	1
18	Right Cover	1
19	Self-Tapping Screw ST5.0×14	2
20	Screw M5x40	1
21	Off Line	1
22	Throttle Cable	1
23	Nut M5	1
24	Handle Seat Fixing Ring	1
25	Handle Seat	1
26	Connecting Shackle	1

No.	Description	Qty
27	Locking Knob	1
28	Nut M5	1
29	Fuel Tank	1
30	Filter Fuel	1
31	Snap Ring Φ7.5	1
32	Balancer	1
33	Fuel Tube A Φ2.5x5	1
34	Oil Return Pipe	1
35	Fuel Tube B Φ2.5x5	1
36	Retainer / Fuel Tube	1
37	Fall Prevention Board	1
38	Seal Washer	1
39	Tank Cap	1
40	Expansion Screw	7
41	Protective Frame	1
42	Backpack	1
43	Washer Φ6	2
44	Nut M6	2
45	Washer Ф5×Ф15×1	2
46	Screw M5x12	2
47	Plate Washer Ф5.5× Ф18×1.5	2
48	Screw M5x20	2
49	Backing	1
50	Back Cushion Hanging Buckle	2
51	Nozzle	1

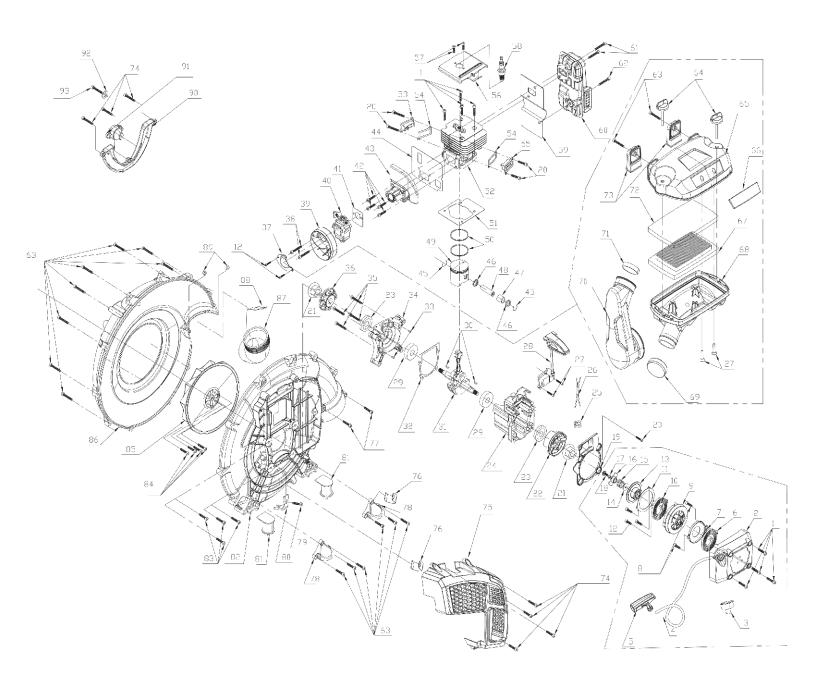



No.	Description	Qty
1	Screw M5x20	7
2	Starter Housing Frame	1
3	Starter Housing	1
4	Pull Cord Sheath	1
5	Starter Pull Cord	1
6	Starter Handle	1
7	Coil Spring	1
8	Coil Spring Cover	1
9	Starter Pulley	1
10	Starter Torsional Spring	1
11	Starter Ratchet	1
12	Starter Dial Claw	2
13	Plate Washer	1
14	Circlip	1
15	Air Deflector	1
16	Self-Tapping Screw ST4x10	8
17	Muffler Cover	1
18	Rubber Pad	1
19	Flange Nut M8	1
20	Magneto Rotor	1
21	Oil-Seal Φ12xΦ22x7	2
22	Screw M5x35	4
23	Crankcase LH	1
24	Gasket \ Crankcase	1
25	Ball Bearing 6201	1
26	Crank Shaft	1
27	Key 3x5x13	1
28	Bearing Φ8xΦ11x10	1
29	Circlip \ Piston Ring	2
30	Piston Pin	1
31	Piston	1
32	Piston Ring	2
33	Gasket \ Cylinder	1
34	Ріп Ф3х9	2
35	Crankcase RH	1

No.	Description	Qty
36	Screw M4x20	2
37	Igniter	1
38	Spark Plug Cover	1
39	Heat Insulation Pad	2
40	Screw M5×60	2
41	Lock Washer Φ5	2
42	Plate Washer Φ5	2
43	Muffler Insulation Cover	1
44	Muffler	1
45	Muffler Gasket	1
46	Spark Plug	1
47	Cylinder	1
48	Inlet Pipe Gasket	1
49	Admitting Pipe	1
50	Screw M5x25	5
51	Carburetor Gasket	1
52	Carburetor	1
53	Air Door Knob	1
54	Air Filter Housing Base	1
55	Screw M5x45	2
56	Air Filter	1
57	Air Filter Cover	1
58	Air Filter Knob	1
59	Self-Tapping Screw ST5x19	9
60	Self-Tapping Screw ST5x16	10
61	Handle Bottom Cover Left	1
62	Bottom Handle	1
63	Handle Bottom Cover Right	1
64	Trigger Support	1
65	Trigger	1
66	Top Handle Cover Left	1
67	Top Handle Left	1
68	Top Handle Right	1
69	Driving Lever	1
70	Reed	1



No.	Description	Qty
71	Throttle Push Rod	1
72	Trigger	1
73	Air Tube	1
74	Balancer	1
75	Oil Return Pipe	1
76	Fuel Tube Retainer	1
77	Fuel Tube	1
78	Snap Rings	1
79	Filter Fuel	1
80	Fall Prevention Board	1
81	O-Ring	1
82	Fuel Tank Cover	1
83	Fixed Block	4
84	Damping Spring	4
85	Off Line	1
86	Flame Out Switch 1	1
87	Waterproof Cap	1
88	Volute Left	1

No.	Description	Qty
89	Top Handle Cover Right	1
90	Button Spring	1
91	Fixed Link	1
92	Strip Seal	1
93	Plate Washer	2
94	Worm Wheel	1
95	Left Handed Nut M8	1
96	Micro Switch 2	1
97	Pin	2
98	Volute Right	1
99	Self-Tapping Screw ST5×14	1
100	Torsional Spring	1
101	Worm Wheel Cover	1
102	Worm Wheel Cover Border	1
103	Tube Serpentine	1
104	Safety Grid	1
105	Tube Front Round	1