


POWER and RELIABILITY™



PARTS LIST

EARTH AUGER

MODEL: PEA261

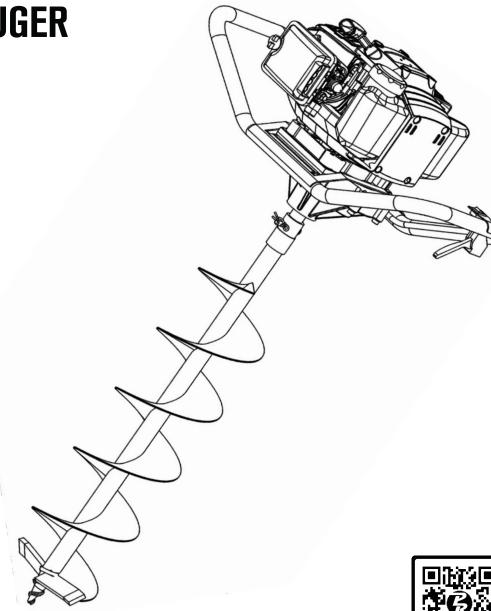





Please let us know what you think. To leave a review and see our full line of products, visit: proruntech.com $\star\star\star\star\star$


Version: B - Issue Date: 2023/03/15

SPARE PARTS / CHASSIS AND ENCLOSURE

FUEL TANK

Part Number: 20077541


No.	Description	Qty
84	Fuel Tank	1

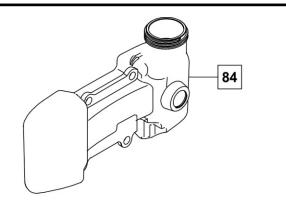

FUEL TANK HOUSING ASSEMBLY

Part Number: 68826101


No.	Description	Qty
86	Fuel Tank Housing	1
85	Insulation Pad	4
87	Screw M5x30	4

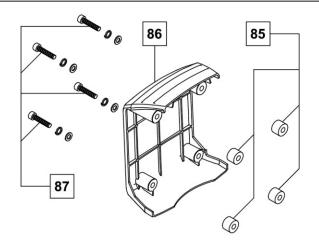

FUEL TANK CAP ASSEMBLY

Part Number: 20084934


No.	Description	Qty
81	Fuel Tank Cap	1
82	Rubber Gasket	1
83	Anti-Falling Plate	1

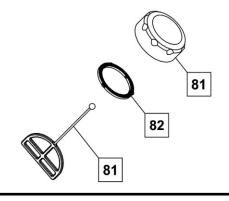

SPARE PARTS / STARTING MECHANISM

SPARK PLUG

No.	Description	Qty
30	Spark Plug	1

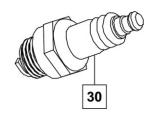


SPARE PARTS / STARTING MECHANISM

STARTER ASSEMBLY

Part Number: 20085969


No.	Description	Qty
1	Screw M5x25	4
2	Starter Housing Top	1
3	Pull Cord Sheath	1
4	Starter Pull Cord	1
5	Starter Handle	1
7	Coil Spring	1
8	Starter Pulley	1
9	Starter Spring	1
10	Ratchet Wheel	1
11	Self-Tapping Screw ST4.8x19	1
12	Plate Washer 5x16x1	1

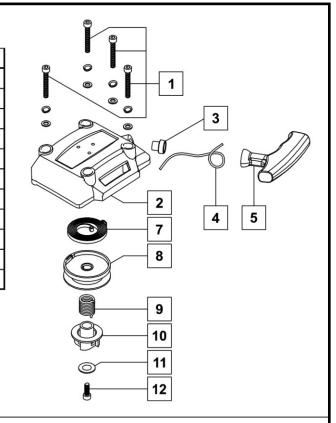

STARTER GRIP AND ROPE ASSEMBLY


Part Number: 68826103

No.	Description	Qty
4	Starter Pull Cord	1
5	Starter Handle	1

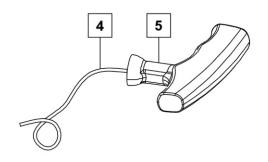

IGNITION ASSEMBLY

No.	Description	Qty
39	Igniter	1
38	Ignition Screw M5x25	2

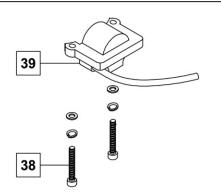




SPARE PARTS / CARBURETOR

CARBURETOR ASSEMBLY

Part Number: 68826104


No.	Description	Qty
69	Carburetor	1
68	Gasket / Carburetor	1

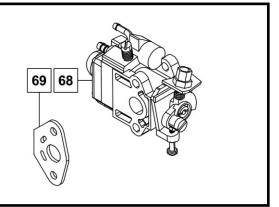

SPARE PARTS / FILTER AND ACCESSORIES

EARTH AUGER BIT ASSEMBLY

No.	Description	Qty
99	Auger Bit	1
97	Lock Pin	1
98	Pin Shaft	1

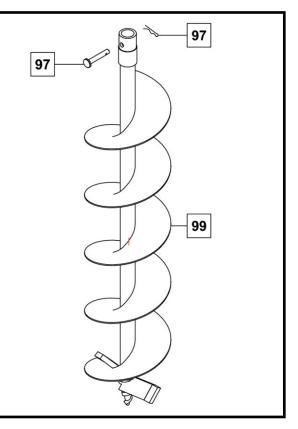




SPARE PARTS / FILTER AND ACCESSORIES

AIR FILTER

Part Number: 20059455


No.	Description	Qty
78	Air Filter	1

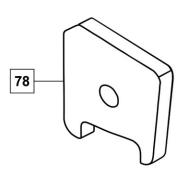

AIR FILTER HOUSING TOP ASSEMBLY

Part Number: 68826105


No.	Description	Qty
79	Air Filter Housing Top	1
80	Air Filter Housing Knob	1

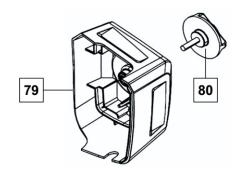

AIR FILTER HOUSING BASE


Part Number: 68826106

No.	Description	Qty
72	Air Filter Housing Base	1
77	Screw M5x50	2

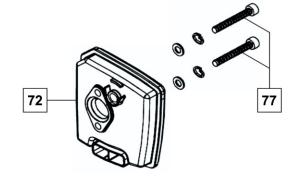


FILTER FUEL ASSEMBLY

No.	Description	Qty
88	Balancer	1
89	Air Tube	1
90	Fuel Tube	1
91	Return Tube	1
92	Fuel Tube Retainer	1
93	Snap Ring	1
94	Fuel Filter	1

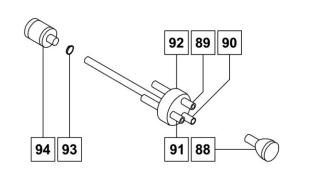

ASSEMBLY PARTS LIST

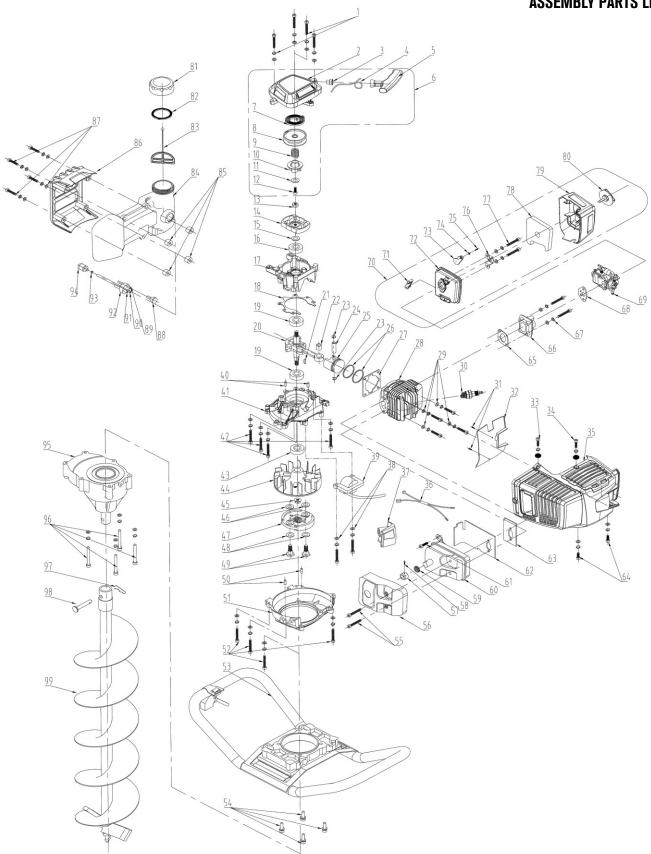



ASSEMBLY PARTS LIST

No.	Description	Qty
1	Screw M5x25	4
2	Starter Housing Top	1
3	Pull Cord Sheath	1
4	Starter Pull Cord	1
5	Starter Handle	1
6	Starter Assembly	1
7	Coil Spring	1
8	Starter Pulley	1
9	Starter Spring	1
10	Ratchet Wheel	1
11	Self-Tapping Screw ST4.8x19	1
12	Plate Washer 5x16x1	1
13	Nut M8	1
14	Start Reel	1
15	Flat Washer 8	1
16	Oil-Seal 12x22x7	1
17	Crankcase RH	1
18	Gasket \ Crankcase	1
19	Ball Bearing 6202	2
20	Crank Shaft Assembly	1
21	Key 3x5x13	1
22	Bearing Ф10x13x16	1
23	Circlip \ Piston Ring	2
24	Piston Pin	1
25	Piston	1
26	Piston Ring	2
27	Gasket \ Cylinder	1
28	Cylinder	1
29	Screw M5x20 \ Cylinder	4
30	Spark Plug	1
31	Self-Tapping Screw ST4x10	2
32	Air Guide Hood	1
33	Self-Tapping Screw ST4.8x16	1
34	Screw 5x16	1
35	Top Housing	1
36	Wire	1
37	Spark Plug Cover	1
38	Ignition Screw M5x25	2
39	Igniter	1

No.	Description	Qty
40	Pin Φ5×10	2
41	Crankcase LH	1
42	Screw M5x30	4
43	Oil-Seal 15x30x7	1
44	Magneto Rotor	1
45	Flange Nut M8	1
46	Plate Washer 8x16x1.5	2
47	Clutch Assembly	1
48	Washer 10	2
49	Bolt \ Clutch	2
50	Pin Φ5×10	2
51	Fan Cover	1
52	Screw M5x25	4
53	Handle Assembly	1
54	Screw M6x18	4
55	Muffler Screw M6x55	2
56	Muffler Cover	1
57	Fixing Sleeve	1
58	Self-Tapping Screw ST4x5	1
59	Spark Capture Nut	1
60	Muffler	1
61	Muffler Screw M5x12	1
62	Gasket Muffler	1
63	Gasket Muffler	1
64	Screw M5x16	2
65	Gasket	1
66	Admitting Pipe	1
67	Screw M5x25	2
68	Gasket / Carburetor	1
69	Carburetor	1
70	Air Box Assembly	1
71	Choke Handle	1
72	Air Filter Housing Base	1
73	Choke Handle	1
74	Flat Washer 4	1
75	Self-Tapping Screw ST2.9x6.5	1
76	Oil Baffle	1
77	Screw M5x50	2
78	Air Filter	1



ASSEMBLY PARTS LIST

No.	Description	Qty
79	Air Filter Housing Top	1
80	Air Filter Housing Knob	1
81	Fuel Tank Cap	1
82	Rubber Gasket	1
83	Anti-Falling Plate	1
84	Fuel Tank	1
85	Insulation Pad	4
86	Fuel Tank Base Housing	1
87	Screw M5x30	4
88	Balancer	1
89	Air Tube	1

No.	Description	Qty
90	Fuel Tube	1
91	Return Tube	1
92	Fuel Tube Retainer	1
93	Snap Ring	1
94	Fuel Filter	1
95	Gearbox Assembly	1
96	Screw M6x55	4
97	Lock Pin	1
98	Pin Shaft	1
99	Auger Bit	1

PRORUN regularly improves our products, and you may find slight differences between your machine and descriptions contained within this parts list. Modifications can be made to the machine without notice and without the obligation to update the operator's manuals, provided that the essential safety and functional characteristic remain unaltered. Contact PRORUN Customer Service with any questions and current specifications.