PRODUCT INFORMATION:

Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- This product is designed as a temporary sun canopy. Do not leave up for extended periods.
- Do not use in any potentially windy or rainy weather. Wind and rain can damage your canopy and
 may also result in injury to you or others. Therefore, do not rely on canopy for protection in heavy
 or prolonged rain storms.
- · Always stake or weigh down your canopy.
- Use caution when handling the canopy's frame. Avoid pinching hands or fingers as frame opens or closes.
- · Do not use canopy in a lightning storm.
- · Do not leave your canopy unattended.
- Do not build fires under canopy.

PRODUCT CARE & MAINTENANCE:

For long lasting durability and the best possible protection for your canopy, follow these care & maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the canopy top and frame dry completely before closing or storing to avoid mildew.
- The canopy frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before attaching top.
- Slightly tighten bolts if frame becomes loose. Be careful not to over tighten bolts.

2 YEAR LIMITED WARRANTY

Z-Shade Co. Ltd., manufacturer of the product, warrants to the original purchaser who provides a dated sales receipt from an Authorized Dealer, each part of the Z-Shade product to be free from defects in material or workmanship for a period of two (2) years after the date of original purchase. The frame is covered under a limited two (2) year warranty and guarantees the frame to be free from defects in material or workmanship. This warranty applies only for normal and expected uses, as determined by the manufacturer.

Z-Shade Co. Ltd. obligation and liability under this warranty is limited to the replacement of the product or its parts, after a review and examination of a submitted warranty claim. Do not dispose of the shelter or any part of a shelter while claim is under review. Warranty Claim Form can be downloaded from our website: www.zshadeusa.com

Please do not send any product to Z-Shade without prior written authorization.

REPLACEMENT PARTS: Parts can be ordered from our website: *www.zshadeusa.com* If you need additional assistance regarding replacement parts, call us toll-free **855-497-4233**

CONDITIONS: This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

©2020 Z-Shade Co. Ltd. All Rights Reserved.

SLPBER 7620

USER MANUAL





Instant Canopy 14^{ft.} x 10^{ft.}

(4.3m x 3.05m)



Z-Shade Co. Ltd. (855) 4 Z-SHADE (855) 497-4233

www.zshadeusa.com




PACKAGE INCLUDES

- Instant Canopy Frame
- Roll Away Bag
- Two-Tone Polyester Top
- · 4-Piece Stake Kit



INITIAL SET UP

Please read each step before you attempt to set up. Save these instructions for future reference.

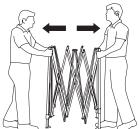


With partner, grasp 2 outer legs, slightly lift off the ground, and step backwards stopping at full arms' length.




Unfold the two-tone polyester top and place it over the open frame.

SET UP


With partner on opposite side of canopy, place your Z-Shade frame in the center of area to be shaded. Grasp outer legs, lift off the ground, and step backwards - stopping at full arms' length.

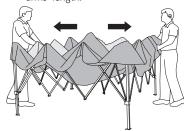

 Grasp the top and bottom of the truss on opposite sides. Slightly lift canopy up and PUSH hands together while stepping backwards until canopy is fully opened.



 To engage slider at each corner, first lift the fabric off of the slider. Then, with one hand hold the top of the leg while PUSHING UP the push button slider with other hand until slider engages. Repeat on opposite legs.






WARNING: This product can expose you to chemicals including Tris(1,3-dichloro-2 propyl) phosphate, Tris(2-chloroethyl) phosphate and Diisononyl phthalate, which are known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov



WARNING: This product can expose you to chemicals including Di(2-ethylhexyl) phthalate, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

 
- - a) Insert extension rods in the top of the legs.
 - **b)** Secure corner fabrics to the leg by pressing the 2 locking strips together.
 - c) Then, pull the fabric out over the end of the extension rods and secure using the sewn pockets. Repeat on all 4 corners.







 Now, with partner, lift outer legs up and slide out the inner legs until the push button locks into outer legs. Repeat on remaining leas.




Height Adjustment: Press push button

lock to release and adjust legs to desired height. Repeat on remaining leas.




 TAKE DOWN



- With partner, slightly lift up outer legs and press <u>push button</u> to unlock and telescope inner legs into outer legs. Repeat on remaining leas.
- Now, with the canopy in lowered position, remove extension rods.
 - 1) Pull the fabric back out from the sewn pockets to gain access to extension rods.
 - 2) Carefully, slide extension rods out from the top of the legs. Repeat on all 4 corners.

Release sliders at each corner by first lifting fabric away from slider. Then, depress push button to release sliders and unlock from truss NOTE: It is much easier to release slider when the canopy weight has been removed from the slider.

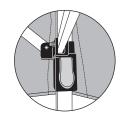

With partner on opposite side, grasp top and bottom area of trusses. Slightly lift canopy up and PULL hands apart while stepping towards your partner until canopy is 3/4 closed. With each partner grasping 2 outer legs, push frame together to fully close it.

Be careful not to pinch fingers!

Store canopy in roll away bag.



WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84. THE FABRIC MAY BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE TENT FABRIC MAY RENDER THE FLAME-RESISTANT PROPERTIES INEFFECTIVE.