

Haunted Hill Farm™

Thank you for choosing Haunted Hill Farm!

Valuable feedback like yours helps us make our products even better and helps other potential customers on their shopping journey!

If you're fully satisfied, we would love for you to leave us a review where you purchased the product.



If you have any questions, concerns or suggestions, please contact us directly. Our team is here to help!



boo@HauntedHillFarm.com (Anytime)



888-840-4559 (9AM to 5PM Eastern Time, M-F)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.

See the full Haunted Hill Farm collection and get online support for assembly, troubleshooting, care and maintenance at:

www.HauntedHillFarm.com

Please follow the step by step guide and enjoy your Brimstone Dragon!

HHBRMDRAGON-1FLSA



The model number of your item is printed on the side of your carton.

Always use this number to identify your item.

Thank you for your purchase of this quality Halloween decor. With proper use and care, your Halloween decor will provide you with years of enjoyment. Please follow the instructions on how to assemble and disassemble your item. If you should have any problems with your item, or you have any questions, DO NOT return it to the place of purchase. Please call our toll-free number: **1-888-840-4559** and a customer service representative will assist you. Enjoy your Holiday!

PARTS LIST

- A. Base x1
- B. Right Lower Support Pole x1
- C. Left Lower Support Pole x1
- D. Feet x2
- E. Right Leg x1
- F. Left Leg x1
- G. Upper Support Poles x2
- H. Black fabric x1
- I. Torso Frame x1
- J. Chest x1
- K. Neck x1
- L. Head x1
- M. Motor Guard x1
- N. Right Wing Brace x1
- O. Left Wing Brace x1
- P. Right Wing x1
- Q. Left Wing x1
- R. Gauze x1
- S. Fog Hose x1
- T. Moisture Trap Tank x1
- U. Fog Machine Adapter x1
- V. Adapter x1



Adapter Spec
Input: 100 - 240V AC 50/60Hz
Output: 5.9V 2A

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT. CONTACT CUSTOMER SERVICE AT BOO@HAUNTEDHILLFARM.COM, OR BY PHONE FROM 9:00AM TO 5:00PM EST AT 1-888-840-4559.

CARE AND STORAGE INSTRUCTIONS

When the product not in use, store in its original packing after it is completely dry.

Keep away from heat.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. Recommended for ages 14 and up.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.
4. This item contains Polyvinyl Chloride (PVC).
5. Colors, style and contents may vary slightly from those shown on the package

ASSEMBLY INSTRUCTIONS

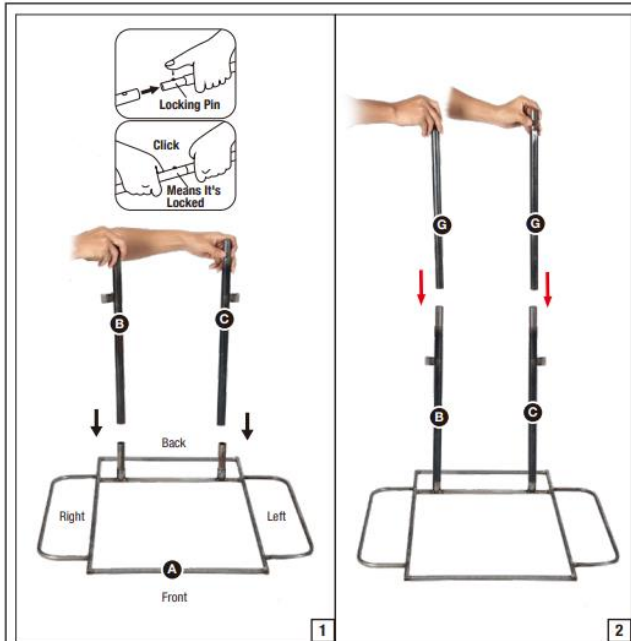


STEP 1

Note: Right and left are relative to the character.

Attach the (B) Right Lower Support pole to the right side of the (A) Base by using the quick connect push button and pre-drilled hole as shown. Then attach the (C) Left Lower Support Pole to the left side of the (A) Base by using the quick connect push button and pre-drilled hole as shown.

Attach the (G) Upper Support Poles to the (B) Right Lower Support Pole and (C) Left Lower Support Pole using the quick connect push button and pre-drilled hole.

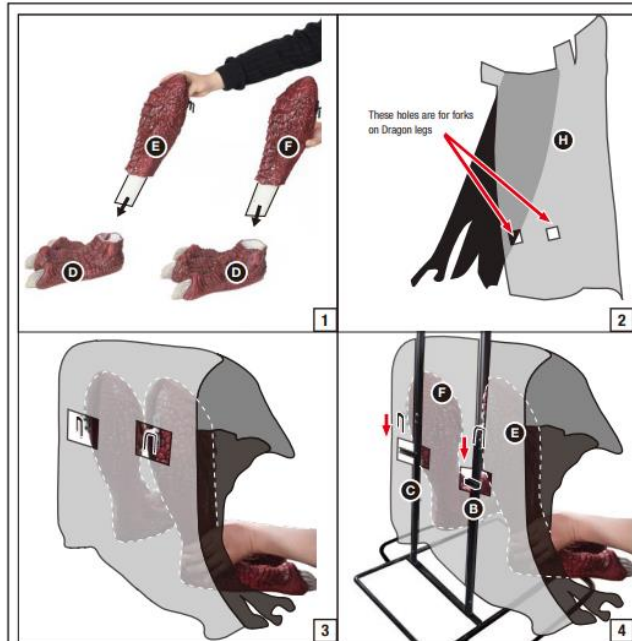


STEP 2

First connect Legs (E) and (F) to both Feet (D) as shown Fig 1

Next, locate the 2 holes toward the bottom of the (H) Black Fabric as shown Fig 2. Place the fabric, with the gauze side toward the Dragon's legs, so that the metal forks poke through the holes of the (H) Fabric as shown Fig 3.


Attach Dragon Legs to the (C) and (B) Support Poles by sliding the fork on the Legs into the metal housing on each pole as shown Fig 4. The gauze side of the (H) Black Fabric should face forward. Leave the excess fabric falling forward over the Dragon's feet, until Step 5.

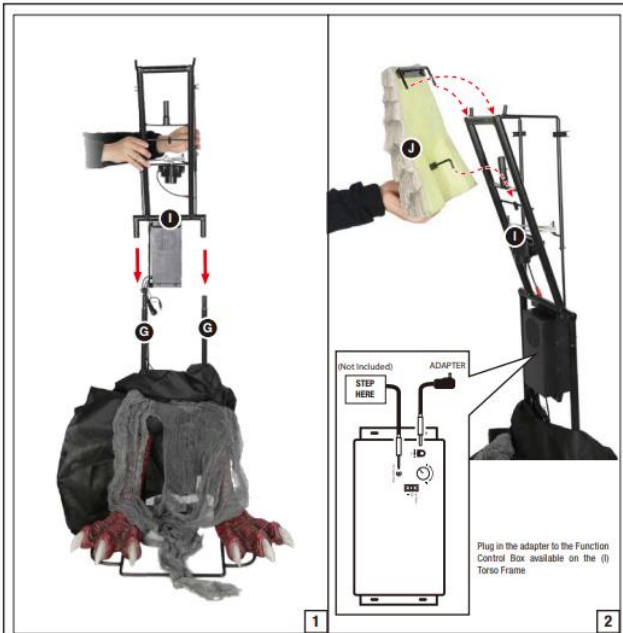

STEP 3

Connect the (I) Torso Frame to the available (G) Upper Support Poles using the quick connect push buttons and pre-drilled holes.

Slide the pegs available on the (J) Chest into the housings available on the (I) Torso Frame.

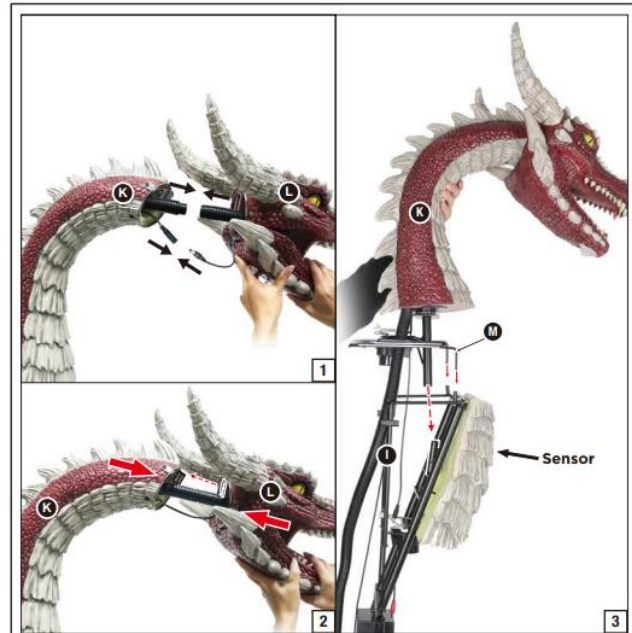

STEP 4

First, connect the cable and hose available from the (L) Head to the corresponding cable and hose on the (K) Neck. Then set the housing in the (L) Head onto the hook on the (K) Neck.

Insert the (M) Motor Guard into the housings available on the (I) Torso Frame. Then connect the (K) Neck to the (I) Torso Frame by using the quick connect push button and pre-drilled hole as shown.



STEP 5

Connect all cables to their corresponding cable as shown Fig 1. While standing in front of the Dragon, pull up the (H) Black Fabric, and begin to attach it to the Dragon's (J) Chest by using the available hook & loop closures as shown Fig 2.




STEP 6

Pull the (H) Black Fabric further up the dragon until it fits nicely over the plastic form behind the (K) Neck. Secure the first hook & loop closure around the (M) Motor Guard as shown in Figure 1.

Then wrap the (H) Black Fabric remaining from the right side of the dragon to the left side. Secure the hook & loop closures above the (M) Motor Guard as shown in Figure 2.

Then secure all closures at the left side of the (H) Black Fabric as shown in Figure 3.

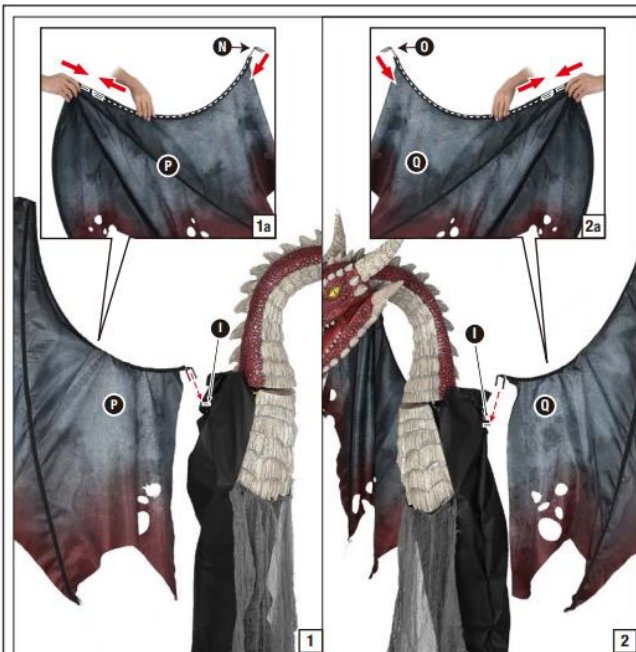

STEP 7

Locate (P) Right Wing, be sure the correct side of fabric will be facing forward. Slide the small end of the (N) Right Wing Brace through small opening at the shoulder point on the Right Wing as shown in Fig 1a. Slide the rod through till it meets the rod already inside the wing, snap metal rods together, so the fabric hangs straight down. (Wing should not be twisted or folded. If it is, disconnect rods from each other, re-align, and snap together so wing hangs straight.)

Now, at the Dragon's right shoulder, locate metal housing (metal bracket with holes) where the (N) Right Wing Brace attaches. Pass the forked end of the Right side Wing Brace through the access hole in the (H) Black Fabric, and then into the metal housing at the right shoulder. Be sure both prongs pass through both top and bottom holes on the shoulder housing.


Perform the same steps for the (Q) Left Wing and (O) Left Wing Brace, as shown in Fig 2 and 2a.



STEP 8

Arrange the (R) Gauze over the Dragon as shown.

NOTE: Keep gauze away from motor, electrical wires and all moving parts. Don't allow gauze to block the Sensor on the front of the Dragon's Chest.

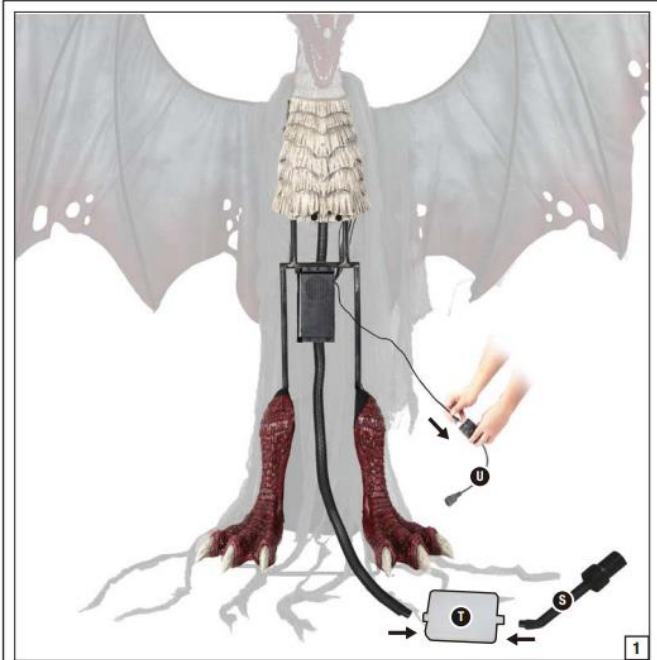

STEP 9

If you wish to use the fog machine with your Brimstone Dragon, connect the hose available from the (K) Neck to the (T) Moisture Trap Tank. Then attach the (S) Fog Hose to the (T) Moisture Trap Tank.

Connect the cable available from the Function Control Box into the (U) Fog Machine Adapter.

Your Brimstone Dragon is now complete. Plug in and turn on to let the fun begin!

Optional Fog Machine Connection Instructions

HOW TO CONNECT FOG HOSE TO MACHINE

If the connection on the hose is slightly too small to fit the nozzle on your machine, try removing the preinserted inner adaptor ring. Grip the outside of the connector firmly in one hand, while with the other, press and twist counter-clockwise from the inside. Once loosened, the inner ring should slide out easily, and the hose should now fit onto the nozzle.


FOG MACHINE ADAPTER INSTRUCTION:

- Use the (U) Fog Machine Adapter only with SVI 400 Watt Fog Machine(sold separately).
- Connect the 3-prong plug of the (U) Fog Machine Adapter into the jack at the back of the Fog Machine.
- Connect the power cord of the Fog Machine into a power outlet.
- Turn the power switch of the Fog Machine to the "ON" position.
- After the Fog Machine warms up (approx. 5 minutes), the light on the (U) Fog Machine Adapter will turn on.
- Press the "ON" switch. The fog machine will be ready to produce fog.
- Press the "OFF" switch, the fog machine will produce fog only when motorcycle lift up.
- Be sure to follow all safety precautions included with the Fog Machine during operation.

OPERATING INSTRUCTION

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the Torso Frame, as desired.


2. Settings:

Sensor	This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
<input type="radio"/>	This switch mode either turns off the item or allows the item to be activated only if triggered by using a Step Here Pad (Not included). The item will operate for one audio cycle with each Try Me activation. Refer to Assembly Instructions Step 3 for further details.
I (ON)	This switch mode will continuously operate the lights, sound, and animation of the item.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

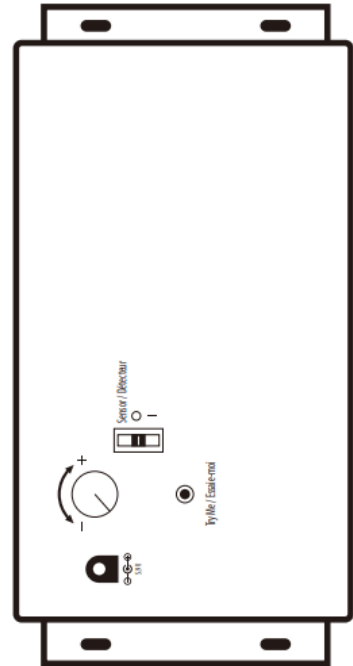

SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS DANGER-TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK CAREFULLY FOLLOW THESE INSTRUCTIONS

The important safety instructions shall be provided with a power unit and include those items in the following list that are applicable. The statement "READ AND FOLLOW ALL SAFETY INSTRUCTIONS" shall be prominently displayed and precede the list, and the statement "SAVE THESE INSTRUCTIONS" shall be prominently displayed and follow the list. The word "WARNING" shall be entirely in upper case letters.

When using electrical products, basic precautions should always be practiced including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

Read and follow all instructions that are on the product or provided with the product.

For a cord-connected or direct plug-in power unit, do not use an extension cord.

Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.

Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.

For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

IMPORTANT SAFETY INSTRUCTIONS



Warnings

- This product is for decoration only and is not a toy. Small parts and choking hazard. Use caution with children under the age of 14.
- Do not position the decoration near candles, sources of heat, or in direct sunlight.
- The decoration cannot be connected to the power supply directly.
- Decoration should be on a level, stable surface to prevent it from falling over
- This product is fragile and should be assembled with care.
- Surface washable only.
- Please follow the steps and requirements specified in the instruction to ensure safety and reliability during the installation.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.

Storage tips: We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.

1-Year Limited Warranty

“Limited” Warranty Program

For a period of one (1) year after purchase, Haunted Hill Farm (“Manufacturer”) will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser’s sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold “as is” or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items may be charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer’s option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HAUNTED HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

**Boo@HauntedHillFarm.com
1-888-840-4559**