 


Repair and Maintenance

- 1) There are electronic components inside the product. Do not use it in the water or the wet environment. Use dry cloth for cleaning.
- 2) Rotating parts should be checked regularly, to see whether they are jammed by any sundries and to keep their normal lubricating state.

Dimensions of entire car

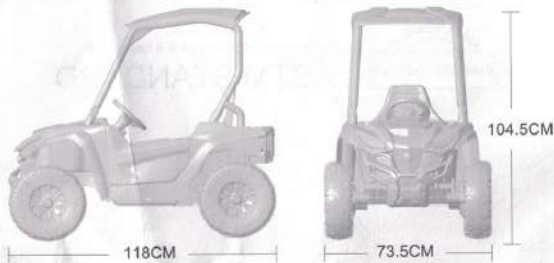





















 

Contents

- Product Specifications and Parameters
- Components List
- Assembly Diagram
- Installation and replacement of remote control batteries
- Function and Operation
- Battery and Charger Operating Guide
- Simple Fault Removal Guidance
- Warning

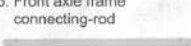I. Product Specifications and Parameters


1. This product is suitable for the children of 3-6 years old, and shall be used under adult supervision
2. Product dimensions: 118×73.5×104.5cm
3. Product maximum load weight: 30 kg
4. Product speed: three forward levels (load weight: 30kg), first gear: 3.3km/h, second gear: 4.3km/h, third gear: 5.3km/h
5. Product drive motor: DC 6V (dual drive)
6. Product charger: input AC 100-240V (50/60Hz), output DC 15V / 800 mA
7. Product rechargeable battery: DC 12V/7AH
8. Remote control and foot switch: 2.4GHz one-to-one remote control
9. Remote control DC power supply: 2×1.5V AAA batteries (not included in this product)
10. Product operating ambient temperature: 0-40°C
11. Basic frequency: 2.4-2.4835GHz
12. Transmission power: less than 10dBm

II. Components List

1. Car Body 	11. Seat 	20. Front panel 
2. Steering Wheel 	12. Seat backrest 	21. Steering wheel screw (5×33PM) 
3. Hand shank 	13. Front rod of left and right guardrail 	22. Steering wheel locknut (5MM) 
4. Anti collision guardrail 	14. Rear rod of left and right guardrail 	23. J-shaped stick 
5. Wheel 4PCS 	15. Upper rod of left and right guardrail 	24. Steering gearbox screw (3×10PWAB) (D=10) 2PCS 
6. Ring 4PCS 	16. Hood 	25. Front axle frame connecting-rod 
7. Cotter Pin 4PCS 	17. Guardrail screws 5×30PM 8PCS 	26. Fixed guardrail screws 4×18TAB(D=8.5) 6PCS 
8. Housing of wheel core 4PCS 	18. Guardrail locknut (5MM) 8PCS 	27. Seat backrest screw (4×15TAB) (D=7.5) 2PCS 
9. Gear sleeve in the rear-wheel gearbox 2PCS 	19. Hood screws 3.5×18TAB(D=8) 8PCS 	28. Front panel screw (3.5×12BAB) 2PCS 
10. Rear wheel axle 		29. Crash barrier screws 4×15BAB 2PCS 
		30. Charger 
		31. Remote control 


III. Assembly Diagram

 1. Installation of front axle frame connecting-rod and wheel

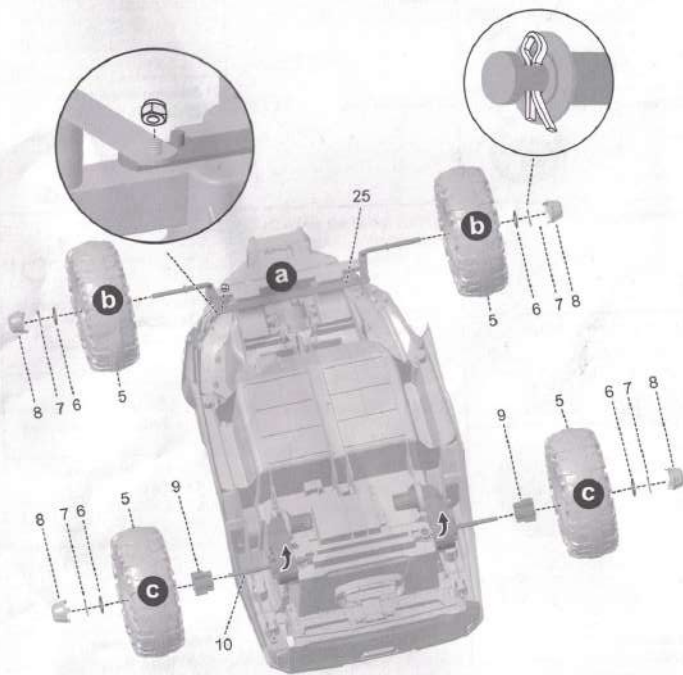


- a** Remove the locknuts on the connecting rod, fix the connecting rod for front axle iron stand (part 25) on oscillating rod to the designated position, and then tighten the locknuts. (Adjust the tightness according to the swing flexibility)
- b** Mount the carriage wheel (part 5) and ring (part 6) onto the front axle in sequence. Insert the cotter pin (part 7) into the front axle and force apart with pliers, and finally wheel boss cover (part 8).
- c** Insert the rear axle shaft (part 10) into the designated position on the carriage and mount the gear sleeve of rear wheel gearbox (part 9), wheel (part 5), ring (part 6) onto the rear axle in sequence. Insert the cotter pin (part 7) into the rear axle and force apart with pliers, and finally wheel boss cover (part 8).

 2. Mount the crash barrier

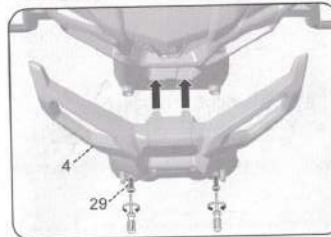


Install the crash barrier (Part 4) into the designated position on the car body and fasten it, and fix with the guardrail screws (part 29).

 4. Installation of steering wheel and hand shank

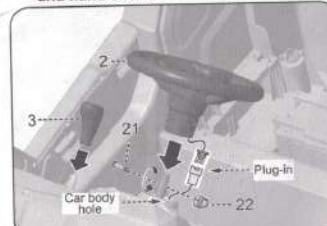


Plug the wire plug of the steering wheel into the wire plug from the car body hole correspondingly, and then put the connected plugs into the car body hole. Install the steering wheel (part 2) on the J-shaped iron hook, and tighten with the steering wheel screw (part 21) and the steering wheel anti-loose nut (part 22); then insert the handle (part 3) into the designated position and press down firmly to make it reliably connected.

 6. Installation of power supply

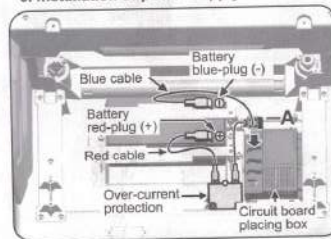


Insert plug (A) into the circuit board to its bottom.

 3. Installation of J-shaped stick

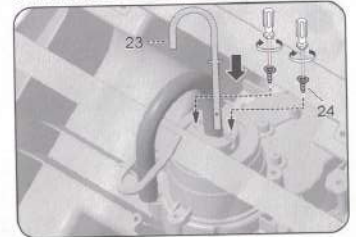


Insert the J-shaped iron hook (part 23) into the front gearbox, and then tighten it by using the steering gearbox screw (part 24).

 5. Install the front panel

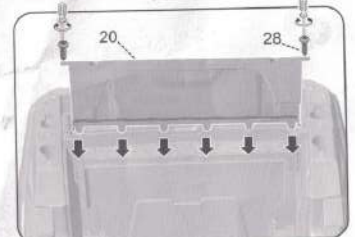


Install the front panel (Part 20) into the designated position and and tighten it with the front panel screw (part 28).

 7. Mount seat

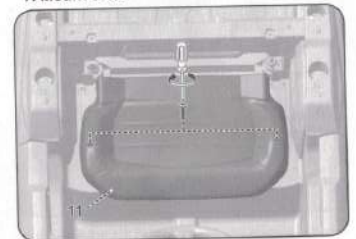


Mount the seat (part 11) on the designated position and fasten with attached screws.

 
8. Mount seat backrest

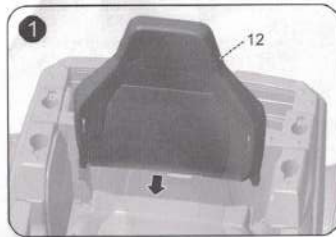

 
Put the seat backrest (part 12) into the assigned location of the car body as shown in the figure below, and tighten it with the seat backrest screw (part 27).

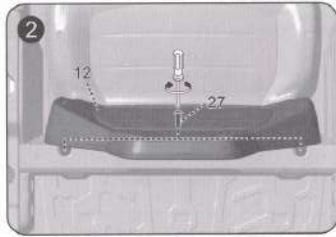

 
9. Install guardrail and hood

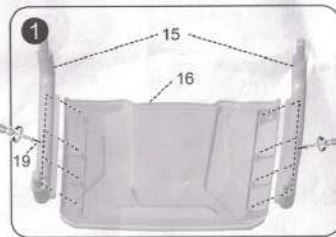

 
Mount the upper rod of left and right guardrail (part 15) onto the hood (part 16), and tighten with hood screws (part 19).

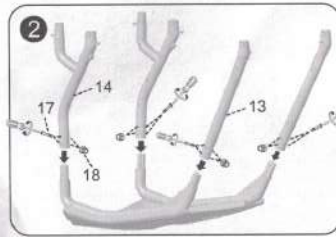

 Insert the front rod (part 13) and rear rod (part 14) of left and right guardrail into the hood, and tighten with guardrail screws (part 17) and guardrail locknuts (part 18).

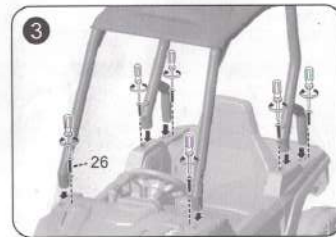


 Insert the hood into the bottom of the left and right guardrail and tighten with fixing screws (part 26).

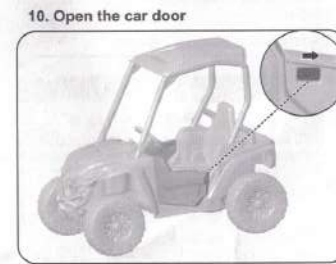

Push forward the switch inside the door board, and pull out the door to open.

 IV. Installation and replacement of remote control batteries

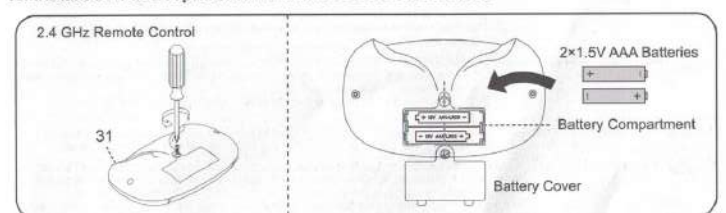


Unscrew the battery cover screws of the remote control (part 31), open the battery cover, find the positive and negative poles, put 2 AAA batteries into the battery compartment, then close the battery cover and fix it with screws.

V. Function and Operation

1. Main functions:

- 1) There are remote controllable and pedal switch buttons.
- 2) Rear drive: Power motor gearbox for powerful front/rear power.
- 3) Forward/backward function: The right side of the dashboard is provided with the three forward gears for speed regulation, neutral gear and reverse gear (each gear has LED lamp display function.)
- 4) Foot switch function: Press the foot switch button, when the handle is in forward or backward position, step down the foot switch to move the car forward or backward, and release the foot switch to stop the car.
- 5) Charging protection function: All functions needing to be powered by the battery will fail when the battery is being charged.
- 6) Forward/backward brake function: It has relay brake function whether it is moving forward or moving backward or parking.
- 7) The seat has the front and rear adjusting function.
- 8) Take out the handle at the bottom of the rear for easy pulling.

 2. Functions on the central control board:


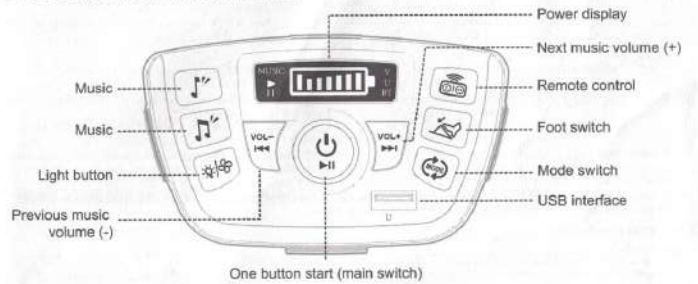


- 1) One-button start button: ① Press this button to turn on the main power switch. The system will be in standby state, and the horn will emit the engine sound. The one-key start key will turn red and the foot mode key green. The power will be displayed on the screen. After the engine sound ends, an English prompt will play from the "music player". After the prompt ends, the music button will turn green. ② After pressing this button for 2 seconds, the main power will be cut off and the system will be shut down.
- 2) Music button: Under MUSIC play mode, press this button to play a song, and the green light of this button is on; press this button again to play the next song; there are 2 music buttons, each button will play 3 songs repeatedly.

- 3) **VOL-** Previous/Volume - Button: ① In MUSIC USB BT mode; Press this key, the key will turn green and switch to the previous music. Press and hold the key for 2 seconds, the key will turn green, and the volume will decrease.
② The total volume is divided into 30 levels. When power is on, the default volume is at 25 levels.
- 4) **VOL+** Next music/ Volume+ button: ① In MUSIC USB BT mode; Press this key, the key will turn green and switch to the next music. Press and hold the key for 2 seconds, the key will turn green, and the volume will increase.
② The total volume is divided into 30 levels. When power is on, the default volume is at 25 levels.
- 5) **Light** button: The default mode is OFF. Press it to turn on the car light and the green lamp of this button will be on. Press it again to turn off the light and the green lamp of this button will be off.
- 6) **Foot switch** button: ① It is by default in the foot switch mode, and the green light of this button will be on; then turn on the gear, and step on the foot switch to start and loose the foot switch to slow down the car; press the remote control button to stop the car forcefully. (The car can't be started by foot switch when it is stopped by the remote controller!)
② Safety protection function: When stepping on foot switch to start the car or switching from the remote control mode to the foot switch mode, you must first loosen the foot switch and then step on it to start.
- 7) **Remote control** button: Press this button, the system will switch to remote control mode, and the green light will be on; then use the remote control to start the car. (At this time, the car can't be started by only stepping on the accelerator pedal!)
- 8) **Mode switch**: ① It is by default the built-in music play mode, and there is "music player" English prompt sound, and the display "MUSIC" will be always on;
② Press this button and switch to USB mode, and there is "USB mode" English prompt, and "U" on display will flash (flash when USB is not connected, and it will be always on when it is connected to USB);
③ Press this button again and switch to BT Bluetooth mode, and there is "bluetooth mode" English prompt, "BT" on display will flash (flash when Bluetooth is not connected, and it will be always on when Bluetooth is connected);
④ Press this button again and switch back to the built-in music playback mode.
(It will be as such **Press** → USB mode **Press** → BT mode **Press** → Music mode Loop)
- 9) **Display function**: ① Battery status (7 lights: 4 green lights; 2 yellow lights; 1 red light). If the lights are all on, it indicates that the battery is fully charged. When the voltage decreases, the lights will gradually turn out. If only the red light on, it indicates low power and the battery needs to be charged. If the red light flashes, it indicates low voltage protection and on the point of shutdown!
② On both sides of the display screen, there are function icons with "MUSIC, U, BT, V, ►, ◄" in correspondence with specific modes or status.
- 10) **Bluetooth playback function**: ① In Bluetooth mode, after connecting Bluetooth, the "BT" on display will be always on, and then the audio file in the Bluetooth device can be played.
② When Bluetooth is disconnected, there is a "dinging" prompt tone, and "BT" on display will flash.
③ Name of Bluetooth: CHILOKBO
- 11) **USB playback function**: In USB mode, after connecting USB, the "U" on the display will be always on, and then the audio file in USB can be played.
- 12) **Steering wheel button**: ① The middle is the horn sound button, which will be sounded in any audio playback mode; press and hold this button, the horn will sound continuously.
② The functions of left and right keys are equivalent to the PREVIOUS/VOLUME keys and the NEXT/VOLUME keys on the main control board.
- 13) When the voltage is at 8.0V, the red light of the power display flashes, and there is a low-power prompt sound (once every 5 seconds), if the car is not shutdown or charged, after many times of prompts, the main control board will automatically power off and the car will automatically stop!
- 14) **Charging and power-off function**: When charging the car, the central control board will automatically power off. All functions will be turned off, and the car cannot be started!

3. Normal operation:

  - 1) **Foot switch mode**
A. Press the main power switch button; B. Press the foot pedal button;
C. Select the forward/reverse direction; D. Select the speed gear; E. Step on the pedal to start
- 2) **Remote control code-matching operation**
A. Turn off the main power switch.
B. Press and hold the two buttons "▲" and "▼" next to "S" button at the same time. When the red indicator lamp flashes, turn on the power switch, the lamp will stop flashing and the code matching is completed.
- 3) **Button instructions**
"S" speed regulating button: Press once to switch to next speed level. One lamp on: low speed; two lamps on: intermediate speed; three lamps on: high speed.
"▲" forward, "▼" backward, "◀" Turn left, "▶" Turn right; "P" is braking button. Press the button once to stop the car and all the red indicator lamp will be flashing, and press it again to recover.

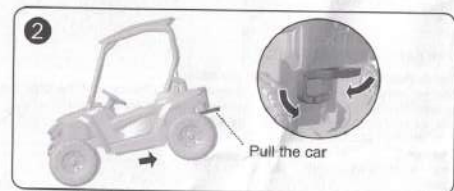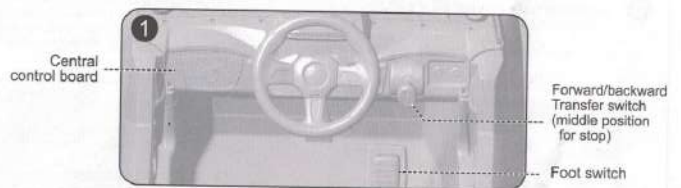



Take out the handle at the bottom of the rear for easy pulling.

Seat with the front and rear adjusting function



  Seat adjustment: remove the screw and insert it into another screw hole to remount the seat.

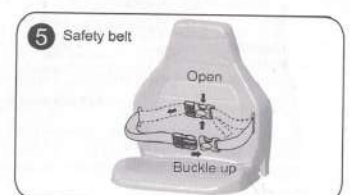

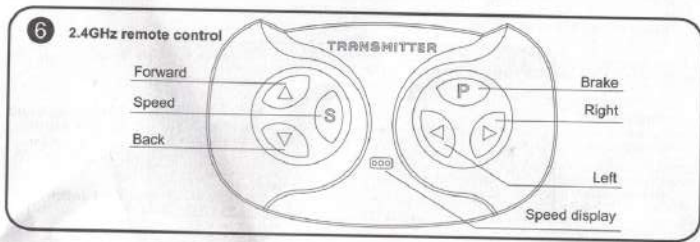

VI. Battery and Charger Operating Guide

1. The charging socket is located at the lower part of the car seat.
2. The battery and charger which are provided or recommended by factory can be used only.
3. Please do not play with the charger and battery because they are not toys.
4. The battery charging operation is carried out only by adults but not children.
5. The battery shall be fully charged before first use, not exceed 15 hours.
6. The lukewarm phenomenon of the charger and battery will occur during charging.




Power Supply	Chargeable type	
Battery specifications	DC 12V/7AH	
Over-current protection	7A	
Charging Source	Input AC 100V-240V 50Hz/60Hz	Output DC 15V/800mA
Battery Charging Time	6-8 hours	Utility time: 1-2 hours

VII. Simple Fault Removal Guidance

Defective conditions	Key points of inspection
1. The car cannot be started	1) Check whether the battery has sufficient power and whether it is charged for 6-8 hours each time.
	2) Check the power switch, all plugs of the dash receiver under the seat, and the battery terminal line are properly inserted.
	3) Check whether the circuit of the over-current protector is automatically disconnected (when the car is overloaded and blocked, the circuit of the over-current protector will be disconnected to protect the car and dash receiver.)
	4) Check whether the car has been stored for a long time and its battery is not charged on time.
	5) If the remote control cannot start the car, please check whether the remote control code-matching function is normally operated.
	6) Check whether the remote control battery power is low.
2. Music sound is distorted or silent	Check whether the battery power is enough, and charge or replace the battery if not.

Operation of overcurrent protector

 - 1) The overcurrent protector is installed under the seat. You can see it by twisting the seat screw off (as shown in the figure) and taking the seat away.
- 2) When the car is overloaded, the overcurrent protector automatically disconnects the circuit (for protecting the circuit); when the circuit fault is removed, the overcurrent protector automatically connects the circuit.
- 3) When the battery has power and the car can not run, please check whether the circuit of the car has an open circuit or short circuit.

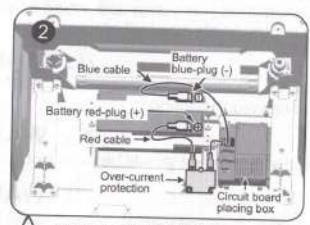

WARNING
Fire danger! The over-current protection is only limited to 7A.

VIII. WARNING

- 1. Battery warning:**
- 1) If the product is not used for a long time, please fully charge the battery and then turn off the power switch for storing the car. The battery shall be recharged once every other month, otherwise the battery service life will be shortened or the battery cannot be charged again.
 - 2) Pay attention to the positive and negative poles of the battery during installation (the reverse connection or short circuit of the positive and negative poles of the battery is not allowed to occur).

- Battery warning:**
- 1) This product needs to be provided with two DC 1.5V AAA batteries (not included in this product).
 - 2) Pay attention to the positive and negative poles of the battery during installation (the reverse connection or short circuit of the positive and negative poles of the battery is not allowed to occur).
 - 3) Rechargeable batteries charging operation can be carried out only by adults.
 - 4) Non-rechargeable batteries cannot be charged.
 - 5) The rechargeable batteries can be charged only after being taken out from the remote control battery compartment.
 - 6) Please do not mix different types of batteries or used batteries and new batteries.
 - 7) If this product has not been used for a long time, the batteries shall be taken out from the remote control battery compartment.
 - 8) Exhausted batteries are to be removed from the toy.

- 2. Product warning:**
- 1) There may be potential sharp edges, sharp points or small parts before the assembly of this product, and therefore this product shall be assembled by the adult.
 - 2) To avoid suffocation, keep the plastic bag away from children. Dispose of all bags immediately.
 - 3) The children shall correctly use the car under the adult guidance and supervision, otherwise they may make themselves or the others injured.
 - 4) The car is suitable for being driven on the flat ground and strictly prohibited to be driven in such dangerous places as street, road, sleep slope and beside swimming pool, otherwise the traffic and drowning accidents may occur.
 - 5) Please put on shoes and protection equipment before use, such as fastening the safety belt and putting on the helmet, gloves, knee pads, etc.
 - 6) Improper use of the product may cause falling off of some small parts, so it is not suitable for children under 3 years old.
 - 7) Regularly check whether its batteries, charger, wire, plug, shell and other parts are damaged; if the damage occurs, please cease to use the car until it has been repaired.
 - 8) This product is only allowed to be used by a child; the maximum load is 30kg, and therefore the overload is not allowed.
 - 9) Keep away from fire.
 - 10) The product instructions shall be kept as they contain important information.

3. WARNING:

 **WARNING**

To reduce the risk of injury, adult supervision is required.
It is strictly prohibited to use this toy car in roads and near traffic tools,
steep slopes, swimming pools or places with water.
Please wear shoes. This toy car can be used by two person.
Keep away from kids before assembled by adult, as there are potentially
sharp edges, points, or small parts.

 **WARNING**

Do not mix alkaline battery, standard (carbon-zinc) battery or rechargeable
(nickel-cadmium) battery.

 **WARNING**

Protective equipment should be worn. Not to be used in traffic.

 **WARNING**

This product is unsuitable for children under 3 years due to its maximum speed.

 **WARNING**

This toy produces flashes that may trigger epilepsy in sensitised individuals.

 **WARNING**

The remote control is not a toy. It is for the adult use only, and should not be used by
a child. A close adult supervision is always required. Reception range may change
significantly with weather, battery, and other environmental conditions.

 **WARNING**

For the purposes of recharging the battery, only use the detachable supply unit provided
with this toy. Charger used with the toy should be regularly examined for damage to the
cord, plug, enclosure and other parts, and in the event of such damage, it must not be
used until the damage has been repaired.

MADE IN CHINA

K07-SMS-183-004

004-01