 


# BRUSHLESS LEAF BLOWER

Model No.:U20BR00-0A220

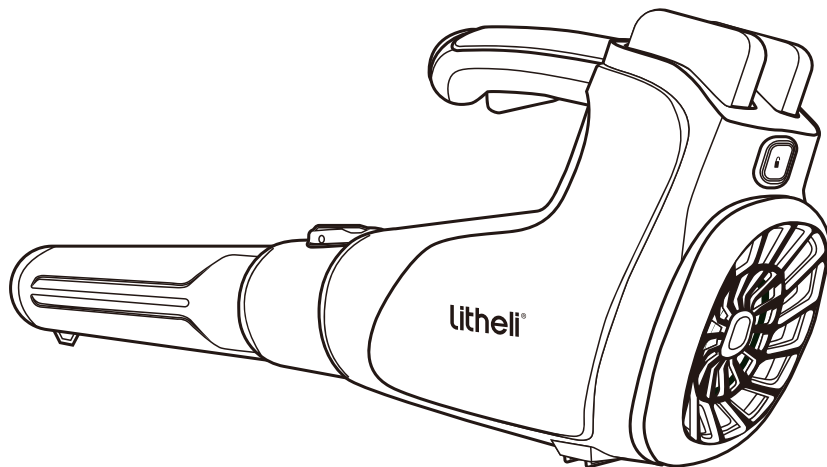

**WARNING:**

To reduce the risk of injury, the user must read and understand the user manual before using this product. Save this manual for future reference.

# TABLE OF CONTENTS

Important Safety Instructions .....	02
Safety Symbols .....	09
Know Your Tool .....	12
Charging Your Battery .....	13
Assembly and Adjustment .....	16
Operation .....	19
Maintenance .....	21
Storage .....	22
Troubleshooting .....	24
Warranty .....	24

# READ ALL INSTRUCTIONS!



**WARNING: Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the state of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:**

- Lead from lead-based paints,
- Crystalline silica from bricks and cement and other masonry products, and
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well-ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

## Important Safety Instructions



**WARNING:**  
Only use the accessories that are provided with this product or the accessories approved by Litheli. Use other accessories might increase the risk of injury. Follow the instructions in this manual to properly use the accessories.



**WARNING:**  
This product can expose you to chemicals including lead and Di(2-ethylhexyl) phthalate (DEHP) which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



**WARNING:**  
Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

The appliance is only to be used with the power supply unit provided with the appliance.

## **FOR ALL APPLIANCES**

- 1.** Avoid Dangerous Environment - Don't use appliances in damp or wet locations.
- 2.** Don't Use In Rain.
- 3.** Keep Children Away - All visitors should be kept at a distance from work area.
- 4.** Dress Properly - Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of rubber gloves and substantial footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
- 5.** Use Safety Glasses - Always use face or dust mask if operation is dusty.
- 6.** Use Right Appliance - Do not use appliance for any job except that for which it is intended.
- 7.** Don't Force Appliance - It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.
- 8.** Don't Overreach - Keep proper footing and balance at all times.
- 9.** Stay Alert. Do not operate appliance when you are tired.
- 10.** Store Idle Appliances Indoors - When not in use, appliances should be stored indoors in dry, and high or locked-up place - out of reach of children.
- 11.** Maintain Appliance With Care - Keep cutting edge sharp and clean for best performance and to reduce the risk of injury. Follow instructions for lubricating and changing accessories. Keep handles dry, clean, and free from oil and grease.
- 12.** Check Damaged Parts - Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in this manual.

## **FOR ALL BATTERY-OPERATED GARDENING APPLIANCES**

- 1. For all battery-operated gardening appliances:**
  - 1) Do not charge appliance in rain, or in wet locations.
  - 2) Do not use battery-operated appliance in rain.



**⚠ WARNING:**

**Always remove or disconnect battery pack before adjusting, cleaning, servicing or transporting the lawn trimmer.**

**2. For all battery-operated products employing a detachable or separable battery:**

- 1) Use only the following type and size battery(ies): (D01103600)
- 2) Do not dispose of the battery(ies) in fire. The cell may explode. Check with local codes for possible special disposal instructions.
- 3) Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- 4) Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.

**3. Avoid unintentional starting**—Do not insert the battery with your finger on the switch. Be sure the switch is off when inserting the battery.

## **ADDITIONAL SAFETY WARNINGS**

### **IMPORTANT SAFETY INSTRUCTIONS**

When using an electrical appliance, basic precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

### **GENERAL POWER TOOL SAFETY WARNINGS**

**⚠ WARNING:**

**Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.**

**Save all warnings and instructions for future reference.**

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

#### **1. WORK AREA SAFETY**

- a. Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.

- c. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

## 2.ELECTRICAL SAFETY

- a. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f. **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

## 3.PERSONAL SAFETY

- a. **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment inattention while operating power tools may result in serious personal injury.
- b. **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. **Prevent unintentional starting. Ensure the trigger is in the off- position before connecting to the power source, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- d. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- e. Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
- g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h. Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

#### **4. POWER TOOL USE AND CARE**

- a. Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b. Do not use the power tool if it cannot be turned on/off by the switch.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e. Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f. Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- h. Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

## 5. BATTERY TOOL USE AND CARE (BATTERY TOOLS)

- a. Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b. Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- e. Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- f. Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.
- g. Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

## 6. SERVICE

- a. Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- b. Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

## GARDEN BLOWER AND GARDEN VACUUM SAFETY WARNINGS

- 1. Do not use the machine in bad weather conditions, especially when there is a risk of lightning.** This decreases the risk of being struck by lightning.
- 2. Thoroughly inspect the area for wildlife where the machine is to be used.** Wildlife may be injured by the machine during operation.
- 3. Wear eye protection and ear protection.** Adequate protective equipment will reduce the risk of personal injury.

- 4. While operating the machine always wear non-slip and protective footwear. Do not operate the machine when barefoot or wearing open sandals.** This reduces the risk of injury to the feet.
- 5. While operating the machine always wear long trousers.** Exposed skin increases the risk of injury from debris.
- 6. Do not wear loose fitting clothing or articles such as scarves, strings, chains, ties, etc., that could get drawn into the air inlets. Tie back or cover long hair to make sure it does not get drawn into the air inlets.** If any of these items are drawn into the air inlets, it can increase the risk of personal injury.
- 7. Do not touch the fan while still in motion. Turn off and disable the machine, then wait until the fan stops before removing any part that may give access to the fan.** This reduces the risk of injury from moving parts.
- 8. When clearing jammed material or servicing the machine, make sure the switch is off and the battery pack is removed.** Unexpected starting of the machine while clearing jammed material or servicing may result in serious personal injury.

## **SAFETY WARNINGS FOR BATTERY PACK**

- 1.** Do not modify or attempt to repair the battery pack. Do not dismantle, open or shred battery pack.
- 2.** Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 265°F (130°C) may cause explosion.
- 3.** Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or fire.
- 4.** Do not subject battery pack to mechanical shock.
- 5.** Observe the plus (+) and minus (-) marks on the battery back and equipment and ensure correct use.
- 6.** Keep battery pack out of the reach of children.
- 7.** Always purchase the battery pack recommended by the device manufacturer for the equipment.
- 8.** Keep battery pack clean and dry.
- 9.** Wipe the battery pack terminals with a clean dry cloth if they become dirty.




10. Battery pack need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
11. Do not leave battery pack on prolonged charge when not in use.
12. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
13. Battery pack gives its best performance when it is operated at normal room temperature (20°C–35°C).
14. Use only the battery pack in the application for which it was intended. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
15. Remove the battery pack from the equipment when not in use.
16. Dispose of properly.
17. Do not handle the charger, including charger plug, or charger terminals with wet hands.
18. Do not charge the battery pack outdoors, in rain, or in wet locations.
19. Recharge only with the charger supplied. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
20. Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
21. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

**Save these instructions. Refer to them frequently and use them to instruct others who may use this tool. If you lend this tool to someone else, also lend these instructions to them to prevent misuse of the product and possible injury.**



# Safety Symbols











The purpose of safety symbols is to attract your attention to possible danger. The safety symbols and the explanations with them deserve your careful attention and understanding. The symbol warnings do not, by themselves, eliminate any danger. The instruction and warnings they give are no substitutes for proper accident prevention measures.

The following signal words and meanings are intended to explain the levels of risk associated with this product.

<b>SYMBOL</b>	<b>SIGNAL</b>	<b>MEANING</b>
	<b>DANGER</b>	Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
	<b>WARNING</b>	Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
	<b>CAUTION</b>	Indicates a hazardous situation, which, if not avoided, may result in death or serious injury.
	<b>NOTICE</b>	(Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g. messages relating to property damage).

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

 
 
<b>Symbol</b>	<b>Description</b>	<b>Symbol</b>	<b>Description</b>
	To reduce the risk of injury, user must read instruction manual.		Do not use in the rain or leave outdoors while it is raining.

	<p>SAFETY ALERT - indicate a precaution, a warning or a danger.</p>		<p>Wear hearing protection.</p>
	<p>Wear eye protection.</p>		<p>Wear hearing protection.</p>
	<p>Wear safety footwear</p>		<p>Keep bystanders away</p>
	<p>Do not burn the battery pack.</p>		
	<p>Batteries may enter water cycle if disposed of improperly, which can be hazardous to the ecosystem. Do not dispose of old batteries as unsorted municipal waste.</p>	 <p>Li-Ion</p> 	<p>Li-Ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.</p>




# Know Your Tool

1. Blower Tube
2. Tube Release Button
3. Variable Speed Dial
4. Max Speed Button
5. Handle
6. On/Off Switch
7. Motor Housing
8. Fan Housing
9. Battery Compartment
10. Battery Pack Release Button
11. Battery Power Indicator Light
12. Battery Power Button
13. Two Way Type-C Port
14. USB-A Port
15. Charging Cable

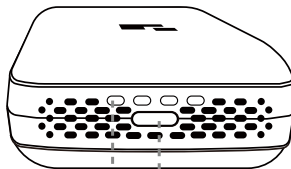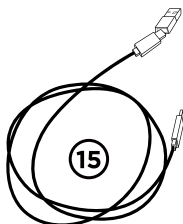


11 12

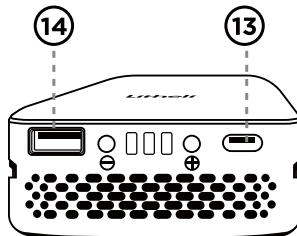 


14

 13

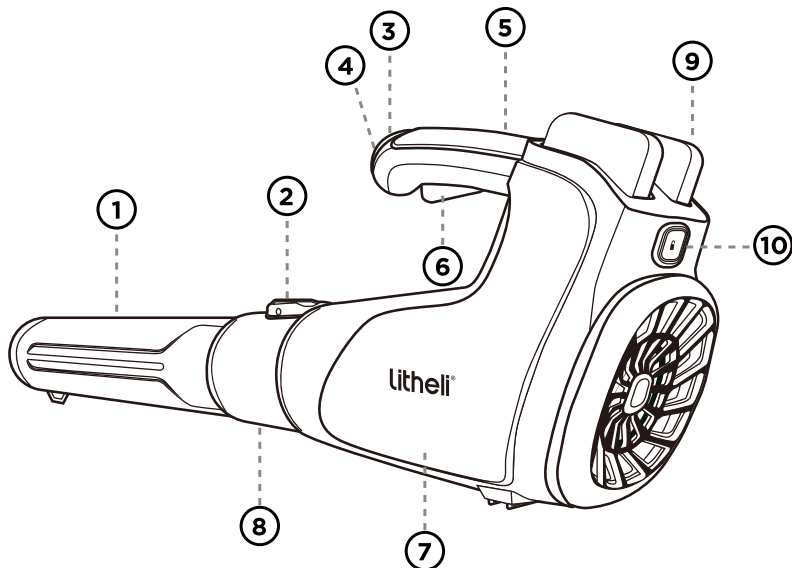

# Technical Data

<b>Model No.</b>	<b>U20BR00-0A220</b>
Voltage	20V  x2 MAX
Air Speed	112MPH (50m/s) ±10%Max
Air Volume	560CFM(970m <sup>3</sup> /h)±10%Max
Battery Pack	4000mAh Lithium-ion battery
Machine Weight (Battery Excluded)	5.96lbs<2.7kg

\* Charger is not supplied with this product. You should prepare a 45W charger to work with the supplied charging cable for charging.

## ACCESSORIES

<b>Model No.</b>	<b>U20BR00-0A220</b>
Battery Pack	2
Charging Cable	2

## Charging Your Battery

### Litheli BATTERY (U-BATTERY PLUS)

#### NOTICE:

- Use only Litheli U-BATTERY PLUS for this appliance.
- This Litheli U-BATTERY PLUS is not resistant to water or dust. Please always keep this battery dry and clean when in use and storage. Do not allow water or moisture enter this battery.

- Benefiting from the innovative battery replacement design, the battery can be exchanged easily.

- Short charging time, and minimal heating while charging.

- The same lithium-ion electrochemistry which is for new energy vehicles.

- Can work as power bank and charge mobile phones and laptops.



## Charging Your Battery

### **⚠ WARNING:**

**Do not use charger outdoors or expose it to wet or damp conditions. Water entering the charger will increase the risk of electric shock.**

### **⚠ WARNING:**

**Charge the battery in a dry and ventilated room, far away from combustibles and ignition sources.**

**NOTICE: Charger is not supplied with this appliance. You should prepare a 45w charger to work with the supplied charging cable for charging. Make sure the charger meets the requirement (Max. Charging Input) in Technical Data.**

**NOTICE: Lithium-ion batteries are shipped partially charged. Before using it the first time, fully charge the battery.**

## BATTERY POWER INDICATOR

The battery supplied with this appliance is equipped with 4 battery power indicator lights which indicate the charge remained in the battery. Press the battery power button to check the remaining power.

The power level will be shown as following when charging:

 
- a. When only one indicator shows flashing, the battery needs to be charged.
- b. During the charging process, the indicators will light up one by one according to the charging situation, the indicator corresponding to the part that is full is always on, and the indicator of the part that is not fully charged flashes.
- c. All 4 indicator lights light up when the battery is fully charged.

**NOTICE: If the battery power indicator lights 1&2 flash, it indicates an abnormal voltage or temperature situation.**

Power Level	LED1	LED2	LED3	LED4
0-25%	Flashing	Off	Off	Off
25-50%	On	Flashing	Flashing	Flashing
50-75%	On	On	Flashing	Flashing
75-99%	On	On	On	Flashing
Fully Charged	On	On	On	On
Error	Flashing	Flashing	Off	Off

## CHARGING PROCEDURE:

- a. Remove the 2 batteries from the appliance.
- b. Use the supplied charging cable, insert the Type-C male connector at one end into the 2-Way Type-C Port at the bottom of the battery.
- c. Connect the other end of the charging cable to the charger (not supplied), and connect the charger to the power supply for charging. The battery power indicator light will flash to indicate charging is in progress\*\*.
- d. When all the battery power indicator lights stay on, the batteries are fully charged. Remove the batteries from the charger and disconnect them from the charging cable.

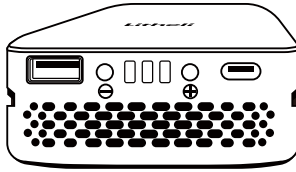

**\*\*NOTICE:**

- **The 2 batteries should both be fully charged before using with this appliance.**

**TIPS:**

- a. The battery is not fully charged when leaving the factory, so be sure to fully charge the battery before first use.
- b. Do not charge the battery at temperatures below 5°C or above 40°C.
- c. When the working time of this appliance becomes significantly shorter, or the charging time becomes longer, it is recommended to replace the battery for a new one.
- d. The battery features overcharge protection, over-discharge protection and short circuit protection.
- e. The battery features overheating protection, and the output voltage for charging/powering devices which is operated in conformity with the instructions in this Manual is within a safe range, ensuring the safety for users.
- f. To avoid accidents, do not disassemble or modify the machine or the battery.

## **Assembly and Adjustment**

**⚠ WARNING:**

**To prevent accidental starting that could cause serious personal injury, always remove the battery pack from the tool when assembling parts.**

**⚠ WARNING:**

**Do not attempt to modify this tool or create accessories not recommended for use with this tool. Any such alteration or modification is misuse and could result in a hazardous condition leading to serious injury.**

**⚠ WARNING:**

**Do not attempt to start the tool before it has been completely assembled.**


## UNPACKING

- This product requires assembly.
- Remove all the items from the carton. Make sure that all items listed in the parts list are included.
- Inspect the product carefully to make sure that no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.
- If any parts are damaged or missing, please return the tool to the place of purchase.

## ASSEMBLING AND DISASSEMBLING THE BLOWER TUBE

### - To assemble


Line up the blower tube and the machine body, align and slide the blower tube to the fan housing as shown in Fig. 1. Push the tube to the end. A “click” will be heard when the blower tube is locked in place.

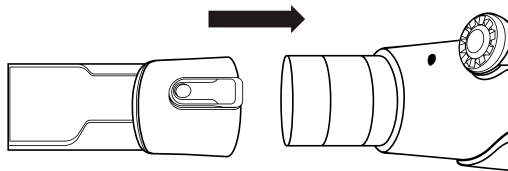 

**Fig. 1**

### - To disassemble

Press the tube release button and pull the blower tube out from the fan housing. (Fig. 2)

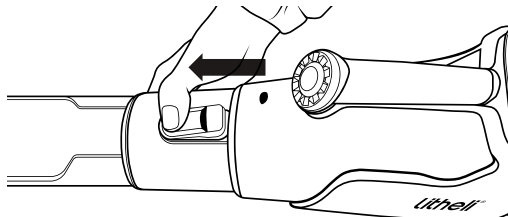 


**Fig. 2**

## INSTALLING OR REMOVING THE BATTERY PACK

### - To install:

Slide the battery pack into the port at the back of the handle. Push to the end with a sufficient force until the battery pack clicks to lock in place. (Fig. 3)


**NOTICE: The battery can only be installed in one way.**

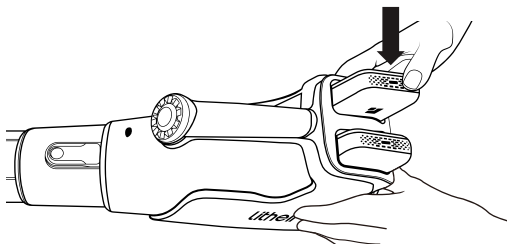 

**Fig. 3**

### - To remove:

Press the battery release button, and the 2 batteries will pop out from the compartment automatically. Hold the batteries and remove them from the machine. (Fig. 4)

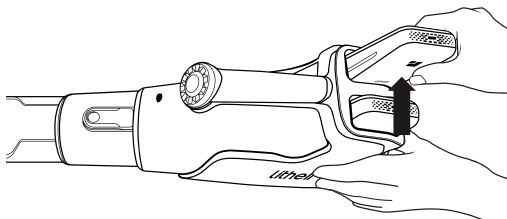 

**Fig. 4**

# Operation

## INTENDED USE

This blower is intended for residential use only. Use the blower outdoors to move yard debris as needed.

### **⚠ WARNING:**

**Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.**

### **⚠ WARNING:**

**Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.**


### **⚠ WARNING:**

**To avoid serious injury and property damage, inspect the area before using the blower. Remove all hard objects from work area. Do not blow debris in the direction of people, animals or property. Use both hands when operating blower.**

## STARTING/STOPPING THE BLOWER

### **- To turn on the blower:**

- a. Hold the blower with both hands, with the tube approximately 20cm above the ground.
- b. Press and hold the on/off switch, now the blower is switched on. (Fig. 5)

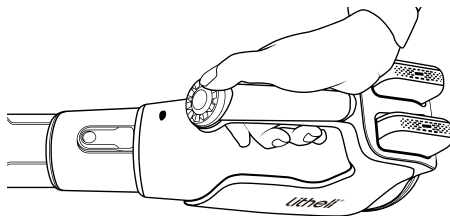 

**Fig. 5**

### **- To stop the blower:**

Release the on/off switch to stop the blower.



## ADJUSTING THE BLOWING SPEED

- a. Switch on the blower. Turn the variable speed control dial left or right to adjust the blower speed as necessary. (Fig. 6)
- b. Press the Max speed button and hold it to increase the air speed instantly to maximum as needed. Release the button when done. (Fig. 7)

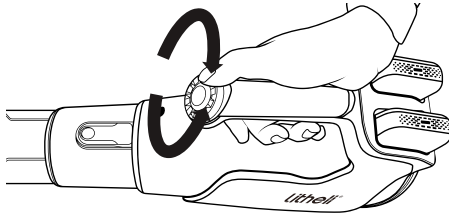 


Fig. 6

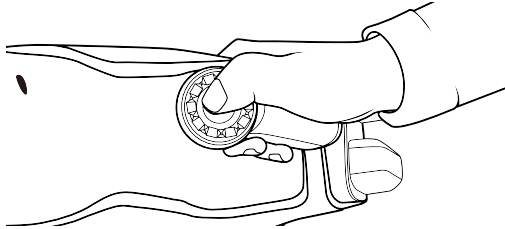 


Fig. 7

**NOTICE: The Max speed button can increase air flow significantly, and it can be used for clearing heavy or wet debris.**

## USING THE BLOWER (Fig. 8)

- Hold the blow tube approximately 20cm above the ground when operating the tool.
- Use a sweeping motion from side to side. Advance slowly keeping the accumulated debris/leaves in front of you.

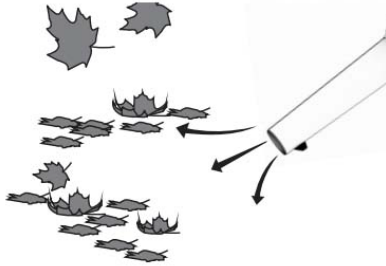 


Fig. 8

**⚠ CAUTION:**

- Do not blow hard objects such as nails, bolts, or rocks.
- Do not operate the blower near bystanders or pets.
- Use extra care when cleaning debris from stairs or other tight areas.
- Wear safety goggles or other suitable eye protection, long pants, and shoes.

## Maintenance

**⚠ WARNING:**

When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage. To ensure safety and reliability, all repairs should be performed by a qualified service technician.

**⚠ WARNING:**

To prevent serious personal injury, remove the battery pack from the tool before servicing, cleaning, changing add-on attachments or removing material from the unit.

**⚠ WARNING:**

For the user's safety, worn or damaged parts must be replaced. Replace with original replacement parts only.

**⚠ WARNING:**

To prevent serious injury from appliance failure, do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

## GENERAL MAINTENANCE TIPS

1. Do not attempt to repair the machine unless you have the proper tools and instructions for disassembly and repair of the machine.
2. Check bolts, screws and fasteners at frequent intervals for proper tightness to ensure that the machine is in safe working condition.
3. All parts of the blower are permanently lubricated. Your blower requires no additional lubrication.
4. BEFORE EACH USE, inspect the general condition of the appliance. Check for:
  - loose hardware,
  - misalignment or binding of moving parts,
  - cracked or broken parts,
  - damaged electrical wiring, and any other condition that may affect its safe operation.

## CLEANING

Regular cleaning and maintenance of your blower will ensure efficiency and prolong the life of the product.

- After each use, wipe external surfaces of the appliance with clean damp cloth and mild soap.
- Never wet or spray water on the machine.
- Do not use any detergents or solvents as these could cause irreparable damage to the blower. Chemicals can destroy the plastic parts.

## Storage

### Leaf Blower:

1. Examine the cordless leaf blower thoroughly for worn, loose or damaged parts. Should you need to repair or replace a part, contact Litheli Customer Service for assistance.
2. Remove the battery. Allow the motor to cool and clean the blower before storing.
3. Store the cordless leaf blower indoors in a locked, dry, well-ventilated place out of the reach of children to prevent unauthorized use or damage.

**Battery:**

1. Do not expose your battery to water, rain or allow them to get wet. This could permanently damage the battery. Do not use oil or solvents to clean or lubricate your battery as the plastic casing can become brittle and crack, causing a serious risk of injury.
2. Store the battery at room temperature away from moisture. Do not store in damp locations where corrosion of terminals may occur. As with other battery types, permanent capacity loss can result if the pack is stored for long periods of time at high temperatures (over 120°F/49°C).
3. For longer service life of battery, recharge the battery every month when not in use.

**For Battery-powered Tools**

The ambient temperature range for the use and storage of tool and battery is 0°C-45°C (32°F-113°F).

The recommended ambient temperature range for the charging system during charging is 10°C-40°C (50°F-104°F). While charging, the battery and charger should be placed in a cool, dry indoor place with good ventilation.

# Troubleshooting

## WARNING:

Switch off the machine and remove the battery packs prior to any troubleshooting.

Problem	Possible causes	Remedy
Motor does not start.	Battery is not installed well.	Check the battery is fully inserted.
	Battery is depleted.	Charge the battery.
	Battery is too cold.	Remove battery from the machine. Place battery on charger and allow to charge for 10 minutes. Remove from charger and install in the machine for use.
	On/off switch is defective.	Contact the service center for replacing.

## Warranty

### Litheli WARRANTY POLICY FOR U20 PRODUCT

- For Litheli U20 product (battery excluded) used for personal and household purposes, 3-year limited standard warranty + 2-year limited extended warranty available upon product registration;
- For Litheli U20 batteries used for personal and household purposes, 3-year limited warranty;

**NOTICE: Litheli offers a Warranty Extension Service for U20 product (battery excluded). Litheli U20 product (battery excluded) Warranty Extension is available only upon product registration. Register your U20 product on Litheli OFFICIAL website to activate a 2-year limited extended warranty.**

Please contact Litheli customer service at [service@litheli.com](mailto:service@litheli.com) any time you have questions or warranty claims.

## **LIMITED WARRANTY SERVICE**

FOR FIVE (2-year limited extended warranty included) YEARS from the date of original retail purchase, this Litheli product (battery not included) is warranted against defects in material or workmanship. Defective product will receive free repair or will be exchanged.

FOR THREE YEARS from the date of original retail purchase, the Litheli battery is warranted against defects in material or workmanship. Defective product will receive free repair or be exchanged.

- 1.** This warranty only covers Litheli products and batteries used for residential purposes.
- 2.** This warranty does not cover the consumables such as, but not limited to, charging cable, plastic blades.
- 3.** This warranty does not cover the damage resulting from modification, alteration or unauthorized repair.
- 4.** This warranty only covers defects arising under normal usage and does not cover any malfunction, failure or defect resulting from misuse, abuse (including overloading of the product beyond capacity and immersion in water or other liquid), accidents, neglect or lack of proper installation, and improper maintenance or storage.
- 5.** This warranty does not cover normal deterioration of the exterior finish including but not limited to scratches, dents, paint chips, or to any corrosion or discoloring by heat, abrasive and chemical cleaners.
- 6.** This warranty applies only to the original purchaser from an authorized Litheli shop and may not be transferred.
- 7.** This warranty does not require Litheli to repair or replace a Litheli lithium-ion battery/ies if the battery/ies present/s shortened runtime/work-hour, reduced capacity, and/or weakened performance due to normal chemical age.

## **PRODUCT REGISTRATION**

Please register your Litheli product on **Litheli OFFICIAL website.**  
For better warranty services, we recommend that you register the product within 30 days from the date of the original retail purchase.

## **WARRANTY CLAIM**

For warranty claims, please contact Litheli customer service. You will need to submit a registration document or proof of purchase in the form of a valid receipt that displays date and place of purchase. Replacement products do not come with a new warranty. The warranty of the products will continue from the date of the original purchase.

# **litheli tool**

**TOOLS FOR THE FUTURE**



**+1 (800) 323-8991**



**[www.Litheli.com](http://www.Litheli.com)**



**[service@litheli.com](mailto:service@litheli.com)**