# INSTRUCTION MANUAL

AIR18-F





- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure, crush and cut.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

#### TOOLS REQUIRED









PHILLIPS SCREWDRIVER

DRILL (RECOMMENDED)

 
2PERSON ASSEMBLY

APPROXIMATELY 15MIN. ASSEMBLY

#### HARDWARE







## PARTS /





















01

Expand the bottom half of Part A.


Screw two brake casters Part B to the left of hutch legs from bottom by P1x4 screws with P3x4 screw gasket.(notice the casters position is 15mm from edge). Screw two casters without brake Part C to the right of hutch legs from bottom by P1x4 screws with P3x4 screw gasket.(notice:the casters position is 15mm from edge).

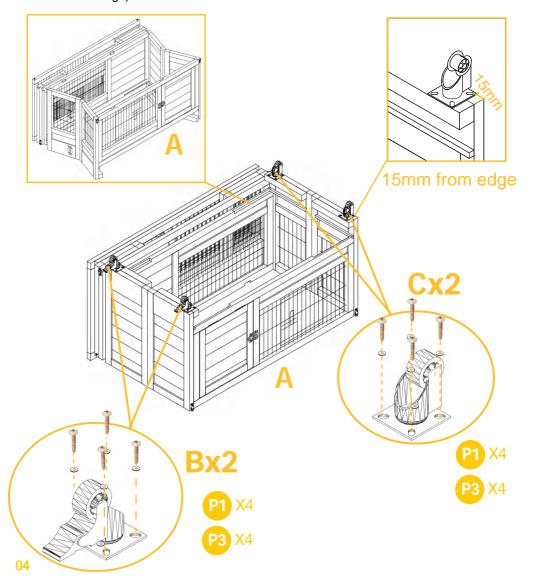

Screw the metal ramp support Part D to the back panel by P2x2 screws according to the predrill holes.

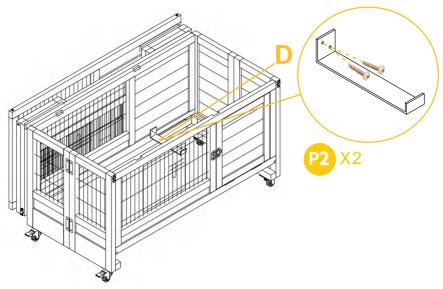

Put down tray supporting bars 2pcs of Part I into the slot.

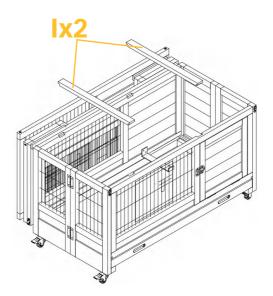


04

Screw the ramp Part E to the supporting bars by P2x2.




Flip the top half up and then expand it.


Attach the upper & down front panel by one buckles each side.

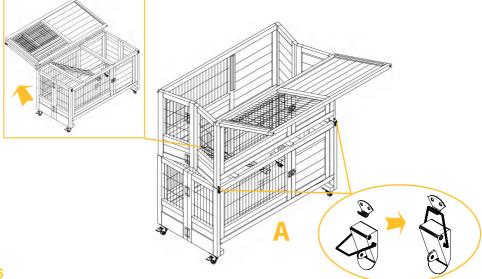

Put in the divider Part F as show on picture.

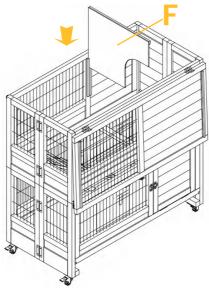


Close the roof by one buckles each side.

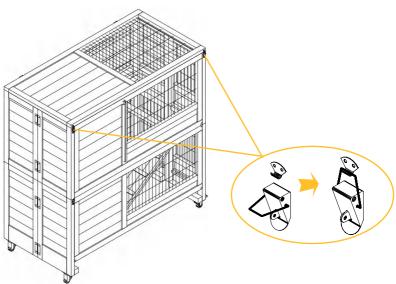



Slide in the bottom tray Part G and middle tray Part H.

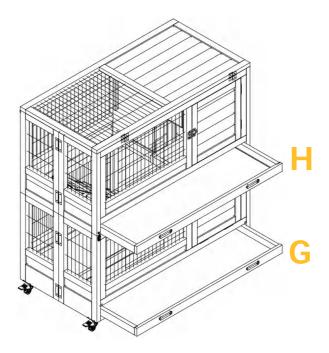

<sup>08</sup> Finish



#### WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury,property damage or loss,whether direct,indirect,or incidental,resulting from the incorrect attachment,improper use,inadequate miantenance,or neglect of this product.