

1. Unthread sprayer head,
2. Fill tank with desired liquid or chemical
3. Re-thread sprayer head
4. Begin Pumping pump handle on top of sprayer head
5. Push red trigger to begin spraying.
6. Adjust spray with brass valve on end.
7. Vent pressure on side of tank with relief valve when finished and storing.