

# 11.5X8.2CM

## Safety Instructions

### Wall Outlet Electric Wax Warmer

PLEASE READ ALL INSTRUCTIONS BEFORE USING.

#### OPERATING INSTRUCTIONS:

DO NOT ATTACH BULB WHEN PLUGGED IN.

1. Screw the 15-Watt C7 light bulb to the socket on the electrical plug.
2. Attach decorative body to electrical base.
3. Plug into standard 120V AC electrical outlet.
4. Place one scented wax cube into the top dish of warmer. DO NOT OVERFILL LID.
5. Turn switch to ON.
6. To disconnect, turn switch to OFF, allow wax to cool, and then unplug from the wall outlet.

#### USER MAINTENANCE:

DO NOT ATTEMPT TO MOVE WARMER WHILE WAX IN THE LID IS HOT.

1. Turn switch to OFF, allow wax to cool to a solid, then unplug from the wall outlet
2. Once unplugged and cool, remove the decorative body from the plug.
3. Remove the solid wax from the dish.
4. Clean with a paper towel or dry cloth.
5. Dispose of any used wax in a dry, lined garbage can or other suitable container.
6. When changing fragrance type, wash lid area in a warm soapy water and dry with a soft paper towel to remove traces of prior scent

#### IMPORTANT SAFETY INSTRUCTIONS:

**WARNING:** When using electric products, basic precautions should always be followed including the following

- Keep out of reach of children or pets.
- Do not use as night-light.
- Do not leave on overnight.
- Intended for indoor use only.
- Do not add water to wax.
- Do not operate warmer after it has been damaged in any manner.
- Do not place on or near gas or electric burner, or in a heated oven.
- Use only a standard 15W Type C7, 120V candelabra base light bulb in the warmer. Use of higher wattage bulb may cause risk of electrical short or fire.
- Do not use warmer in a manner other than the use that is intended.
- Do not leave warmer unattended while in operation.
- Do not put fingers or hands into the product or hot wax or touch the heating surface when hot.

- This unit is not intended for wet or potentially wet locations such as showers, tubs, saunas, sinks, Jacuzzis, etc.
- Do not immerse in liquid or water.
- The warmer is only designed to heat wickless scented wax cubes. Do not use to heat food or drink.
- The warmer has a polarized plug (one blade is wider than the other), as a safety feature, this plug will fit into a polarized outlet only one way, if the plug does not fit fully in the outlet, or if it only fits upside down in the contact a qualified electrician, do not attempt to override this safety feature.
- To reduce the risk of injury, close supervision is necessary when a product is used near children.

**INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.**

**SAVE THESE INSTRUCTIONS**