

Safety Instructions

Tabletop Electric Wax Warmer

PLEASE READ ALL INSTRUCTIONS BEFORE USING .

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO

PERSONS.

OPERATING INSTRUCTIONS:

1. Securely attach supplied 25W Type G50 light bulb to the lamp holder in the warmer.
2. Place warmer on a level, solid surface only.
3. Plug into standard 120VAC electrical outlet.
4. Place one scented wax cube into warmer lid. DO NOT OVERFILL LID.
5. Turn switch to ON.
6. Before disconnecting, turn switch to OFF. Grip plug and pull from wall outlet. Never pull on cord.

MOVING AND STORAGE INSTRUCTIONS:

1. Do not attempt to move warmer while wax in the lid is hot.
2. Once warmer is cooled and unplugged, clean with a damp sponge or cloth.
3. After use, allow warmer to cool before storing.
4. Dispose of any used wax in a dry, lined garbage can or other suitable containers.

USER MAINTENANCE:

DO NOT ATTEMPT TO MOVE WARMER WHILE WAX IN THE LID IS HOT.

WARMER

1. Clean warmer with a damp cloth or sponge while warmer is cold and disconnected from the electrical outlet itself. Don't immerse or submerge warmer in water.
2. If light bulb burns out, turn switch off, unplug the warmer, then replace the bulb with a standard 25W Type G50, 120V globe –shaped candelabra base light bulb.

WARMER LID

1. Empty all excess wax, then wipe with a soft paper towel or dry cloth while the lid is still warm to remove residue.
2. When changing fragrance type in lid, wash lid in a warm soapy water and dry with a soft paper towel to remove traces of prior scent.

IMPORTANT SAFETY INSTRUCTIONS:

- Do not touch heating surface when hot.
- Do not operate warmer with a damaged cord or plug, after it has malfunctioned, or after it has been dropped or damaged in any manner.
- Do not let cord hang over the edge of table or counter or touch hot surfaces.
- Do not place on or near gas or electric burner, or in a heated oven.
- Use only a 25W Type G50, 120V globe-shaped candelabra base light bulb in warmer. Use of higher wattage bulb may cause risk of electrical short or fire.
- Hot wax may cause serious injury, do not touch or handle liquefied wax.

IMPORTANT SAFETY INSTRUCTIONS REGARDING FRAGRANCE WAX:

- Wax will melt when warmed.
- Wax may stain fabric and other surfaces.
- Avoid prolonged contact with skin.
- May cause irritation.
- Do not add water or any other fluid or material to wax.
- Keep out of reach of children and pets.
- Use as directed to avoid unnecessary damage.

WARNING: When using electric products, basic precautions should always be followed, including the following:

- Keep out of reach of children or pets.
- Do not use as night-light.
- Do not leave on overnight.
- Intended for indoor use only.
- Do not add water to wax.
- Do not operate warmer after it has been damaged in any manner.
- Do not place on or near gas or electric burner, or in a heated oven.
- Use only a standard 25W Type G50, 120V globe –shaped candelabra base light bulb in the warmer. Use of higher wattage bulb may cause risk of electrical short or fire.
- Do not use warmer in a manner other than the use that is intended.
- Do not leave warmer unattended while in operation.
- Do not put fingers or hands into the product or hot wax or touch the heating surface when hot.
- This unit is not intended for wet or potentially wet locations such as showers, tubs, saunas, sinks, Jacuzzis, etc.
- Do not immerse in liquid or water.
- The warmer is only designed to heat wickless scented wax cubes. Do not use to heat food or drink.
- To reduce the risk of electric shock, the warmer has apolarized plug (one blade is wider than the other), as a safety feature, this plug will fit into a polarized outlet only one way, if the plug does not fit fully in the outlet, or if it only fits upside down in the outlet, contact a qualified electrician, do not attempt to override this safety feature.
- To reduce the risk of injury, close supervision is necessary when a product is used near children.
- A short power-supply cord (or short detachable power-supply cord) is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Extension cord is not applicable to our products.

SAVE THESE INSTRUCTIONS