

OWNER'S MANUAL

PORTABLE CONVECTION BASEBOARD HEATER

27" | 1500 / 750W



MODEL 1VAHBB27

TECHNICAL DATA

Model: 1VAHBB27 Voltage: 120V~/60Hz Watts: 750/1500W

CONTENTS

Safety Guidelines	4-5
Safety Features	6
Product Diagram	7
Instructions for Use	7
Care and Maintenance	8
Troubleshooting	8

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location:_____

Date Purchased: _____

IMPORTANT NOTE:

Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

READ AND SAVE THESE INSTRUCTIONS

SAFETY WARNINGS, BEFORE USING HEATER MARNING! POTENTIAL FOR ELECTRICAL HAZARD IF NOT ADHERED TO!

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
- 2. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
- 3. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
- 4. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
- 5. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- 6. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
- 7. DO NOT touch the control panel or plug with a wet hand.
- 8. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- 9. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

- (Continued)
- 10. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
- 11. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
- 12. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- 13. To avoid fire or shock hazard, plug the unit directly into a 120V AC electrical outlet.
- 14. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
- 15. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
- 16. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
- 17. Always use on a dry, level surface. Use on floor only.
- 18. DO NOT use outdoors.
- 19. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
- 20. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.

SAFETY FEATURES

TIP-OVER SAFETY FEATURE

This heater is equipped with a tip-over safety feature. Once the heater is tipped over, an internal switch will automatically shut the heater off. Once the heater is restored an upright position, the heater will reset. To continue operation, turn on the heater using the supplied remote control or the control panel on the heater.

OVERHEAT SAFETY FEATURE

This heater is equipped with an overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheating and possible fire, the heater will automatically shut off. The thermal overload protector is built in to prevent overheating. When an "overheat" temperature is reached, the heater will automatically shut off. The operation can resume only when the user resets the unit.

- To reset the unit, unplug the heater, ensure the power is turned off, and wait 15 to 20 minutes for the unit to cool down.
- Follow OPERATING INSTRUCTIONS to return the heater to operating mode



THIS APPLIANCE HAS A POLARIZED PLUG


(one blade is wider than the other). To reduce the risk of electric shock, t his plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

PRODUCT DIAGRAM


IN THE BOX

- Convection Heater
- Instruction Booklet

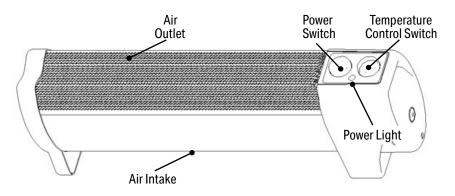

INSTRUCTIONS FOR USE

- 1. Plug the machine directly into a wall outlet.
- 2. Turn the thermostat knob clockwise to the position "MAX" (Figure 1).
- 3. Turn the switch clockwise to the position " I " (low heat) or
 - " **II** " (high heat) according to their needs. The power indicator light (Figure 2) is on when the switch turns to " **I** ".
- 4. The product is equipped with tip-over switch inside. When the product tips over abnormally during its use, it can cut off power automatically.

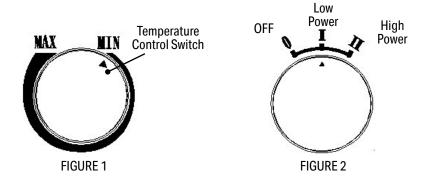

CARE AND MAINTENANCE

MAINTENANCE

- 1. Unplug the unit and let it cool completely.
- 2. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. CAUTION: DO NOT let liquid enter the heater.
- 3. DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- 4. DO NOT immerse the heater in water.
- 5. Wait until the unit is completely dry before use.

STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

TROUBLESHOOTING

If the heater will not operate, please check the following before seeking repair of service:

- 1. Check if the power cord is plugged into an electrical outlet, if not, plug in.
- 2. Check if electricity to the main fuse is working.



4560 W. 160th Street Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com www.visionairproducts.com

Printed in China | 0323_M029