Thank you for purchasing our product!

Issues with your order? Give us a chance to make things right.

Do not return this item back to the store. Contact our friendly customer service department with any problems, comments or concerns.

Replacements for missing or damaged parts are shipped within 1 business day.

Email: Support@AmGoodSupply.com

Please check out our other products


Stainless Steel Work Tables
Equipment Stands
Stainless Steel Shelves
Commercial & Utility Sinks
Bakery Racks
Hood Filters
Storage Shelving
Utility Carts
Dunnage Rack
Commercial Floor Strainers
Grease Traps


AmGood Supply is a leading manufacturer and distributor of stainless steel and metal products for commercial and residential applications.

Our customers include homeowners, restaurants, retail and manufacturing businesses, non-profits, as well as state, local, and federal government agencies.

WWW.AMGOODSUPPLY.COM


Open Base Worktable Assembly Instruction

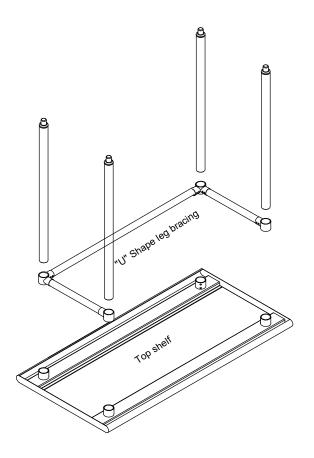


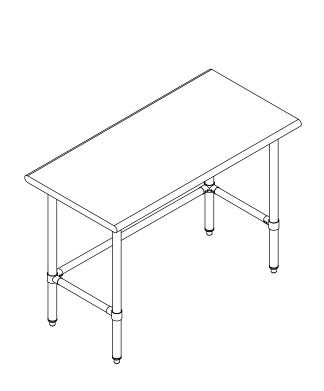

Main Parts					
No.	Pattern	Part name	Quantity		
1		Top shelf	1		
2		Leg	4		
3		Length brace	1		
4		Width brace	2		


Accessories					
No.	Pattern	Part name	Quantity		
		M8*1*10 Screw	17		
2		S4 Screw Wrench	1		
3	Ω	Two-way connector	2		
4	8	One-way connector	2		

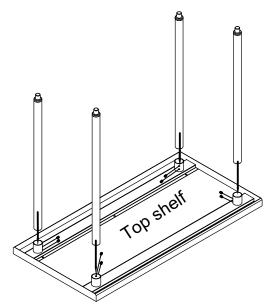


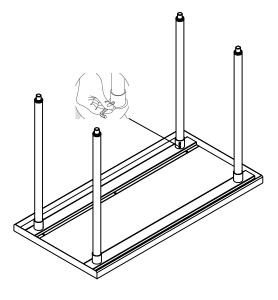

Turn the top shelf unside down onto the floor, place the carton top underneath for padding to aviod scratching, Insert four legs into the leg sockets, then partially fasten the allen screws

Insert the length brace into the two-way connector and secure it with screws. Then insert the width brace into the two way connector and secure it with screws. Finally the pass one-way connector to connect with the width brace and secure it with screws. The "U" shape leg bracing is acomplished

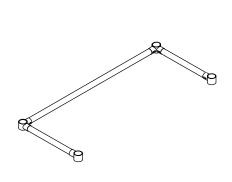

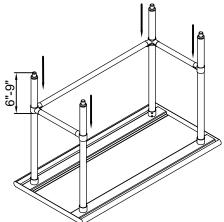

Slide the U-shape leg brace rod into the leg tube and tighten the screws after holding it at the same height. We recommend a height of 6-9 inches from the bullet foot



Turn over the assembled worktable, adjust the feet height to ensure proper leveling and stability, your worktable is now ready to use