



HEATED WRAP OPERATING INSTRUCTIONS

➤ **CONNECTING YOUR POWER BANK**

Locate the zippered pouch in the wrap and remove the power bank. Remove the power bank from its package. Plug the USB-A cable located inside the pouch into the power bank and place the power bank inside the pouch. Close the zipper pouch and press and hold the power button on the seat pad to power it on and to ensure it's connected.

➤ **MODE SELECTION**

Press and hold the power button to turn on. When on, the power button will be backlit. Each press of the power button will cycle through each mode; high, medium and low. Press and hold the power button to turn off.

➤ **CHARGING**

Remove the power bank from the zipper pouch. With the included USB charging cable connected to a power source, plug the other end into the power bank. The highest LED will flash blue to indicate that the product is charging. The blue LEDs will then light up to indicate your charge level. When fully charged, all four blue LEDs will light up.




➤ **BATTERY LEVEL**

The four blue LEDs on the power bank will indicate battery level. When fully depleted, the first LED will flash.

➤ **CARE INSTRUCTIONS**

Machine wash cold on delicate. Withstands 15 washes at 60 minutes each wash.

TEMPERATURE CHART

MODE	TEMPERATURE	RUN TIME
	55 °C / 131 °F	5H
	50 °C / 122 °F	6H
	45 °C / 113 °F	8H