27878 - K-18KTRB-4 Operating Instructions and Precautions 07212301

Charging: This product is rechargeable. Please charge fully before first use to ensure optimal performance. To do so, pull back the charging port cover located directly behind the power button. Connect the full-sized USB plug of the included charging cable to a USB power source such as a power cube, computer or car adapter and the USB-C plug into the charging port of the flashlight. A green flashing light or lights above the power switch indicates charging is in progress. Charging is complete when all 4 charging / battery life indicators are solid green. DO NOT USE THE FLASHLIGHT WHILE IT IS CHARGING!

LOCK OUT PROTECTION: This flashlight automatically locks after 2 minutes of non-use!

Double click the power button to unlock the flashlight. The light blinks twice to confirm it is unlocked. Click again to select your desired brightness mode. Double clicking the power button also manually locks the flashlight, preventing accidental activation. The light blinks twice to confirm it is locked.

Flashlight Operation: Repeatedly pressing the power button on the side of the flashlight cycles through high, medium and low brightness modes plus off.

Long pressing the power button while in any light mode including off activates the turbo brightness mode. The light automatically reverts to high brightness after 30 seconds.

Long pressing the power button for 10 seconds while locked activates the Kodiak® locator LED on the power switch. Helps locating the flashlight in the dark. The indicator shuts off once the flashlight is unlocked. **NOTE:** Using the locator LED reduces battery life.

To adjust the beam size, hold the body of the flashlight stationary while twisting the head clockwise or counterclockwise.

Charging a Smartphone: Pull back the charging port cover. **Using your own phone charging cable**, connect the full-sized USB plug into the flashlight's USB port. Connect the other end to your device.

Battery Replacement: Please contact the manufacturer for information on rechargeable battery replacement.

Caution: Due to high light output, certain areas of this flashlight may become hot while in use. Avoid touching the area where the "HOT" symbol is visible.

Caution: Lithium batteries can explode or cause burns if shorted, overheated, disassembled, recharged or exposed to fire or high temperature (above 212°). If the flashlight is turned on while in a container or in clothing, the flashlight can overheat, damage the flashlight and/or cause surrounding material to ignite.

27878 - K-18KTRB-4 Operating Instructions and Precautions 07212301

Warning! To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

This product is not a toy! Use this light only as it is intended. Inspect before every use. Do not use if parts are damaged, loose or missing.

Storage: Double click the power button to lock the flashlight. Remove the rechargeable battery from the flashlight if it will not be used for an extended period. To do so, unscrew the battery compartment cap at the bottom of the flashlight, remove the battery and screw the cap back on. To use the flashlight again, unscrew the battery compartment cap and insert the battery, positive (raised) end first. Screw the cap back on tightly. Double click the power button to unlock the flashlight.

Save these safety precautions!