

24730 - K-PLASMATSK-6/12 Operating Instructions and Precautions 04222201

Charging: This product is rechargeable. Please charge fully before first use to ensure optimal performance. Plug the full sized USB plug of the included charging cable into any USB power source such as a power cube, computer or car charger. Pull back the port cover and insert the micro USB plug into the charging port. A red light indicates charging is in progress. The light changes to green when charging is complete. Do not use the light while charging. Remove the cable and close the port cover.

Charging a Smartphone: Pull back the port cover. Using your own phone charging cable, connect the full sized USB plug into the flashlight's USB port. Connect the other end to your device. Remove cable and replace the port cover.

Side Mounted Light: Repeatedly pressing the power button cycles between white high and low brightness, red flashing and solid amber light modes plus off

Plasma Torch: Unscrew the glass breaker cap at the top of the light. Long press the plasma torch button located adjacent to the power switch. Press the activated plasma torch against your desired combustible material. **NOTE:** You MUST make contact with the combustible materials! You may need to block wind to successfully start a fire. Release the button and replace the glass breaker cap.

Glass Breaker: Grasp the shaft of the light firmly and strike the glass with the glass breaker tip located at the top of the light. **NOTE:** Glass is easier to break in the corner of a car window.

Multi Function Pocket Clip, Saw, Wrench, Bottle/Can Opener

NOTE: Leave the protective cover on when using as a pocket clip.

Assembly: To assemble the multifunction clip for use, unscrew the glass breaker cap at the top of the light and slide the clip off. Unscrew the bottom portion of the light below the words "Saw Install Placement" and the clip locking collar directly below it. Slide the clip into the grooves face down and replace the clip locking collar tightly. **IMPORTANT:** You must tighten the clip locking collar firmly before use! Remove the saw blade cover by pulling back on the release lever.

Saw: The saw blade is suitable for cutting branches or wood with a diameter of $\frac{3}{4}$ " or less. Carefully use the saw with a conventional back and forth motion.

Multi Wrench: The clip has cutouts for $\frac{25}{64}$ ", $\frac{5}{16}$ ", $\frac{17}{64}$ ", $\frac{17}{64}$ ", $\frac{3}{16}$ " and $\frac{5}{32}$ " sized nuts.

Bottle/Can Opener: To open a conventional metal can, position the hook of the cutter below the outer ridge of the can's rim and push the pointed cutter into the can lid against the other side of rim, making a hole. Repeat the process around the entire rim until you can lift the lid open.

24730 - K-PLASMATSK-6/12 Operating Instructions and Precautions 04222201

Disassembly: Unscrew the clip locking collar and remove the clip. Screw the clip collar and the bottom portion of the light back on tightly. Replace the clip on the top of the light and screw the glass breaker cap on tightly. Slide the clip cover back into place until you hear or feel a click.

Screwdrivers: Unscrew the bottom portion of the light directly below the words "Driver Bits". Select either the flat blade or Phillips driver bit. Replace the bottom of the light and insert the selected bit into the hole. Reverse the process to replace the bit inside the light.

Line Cutter: A recessed, non-removable blade is located in the lower portion of the light. The blade is suitable for cutting fishing line, twine and small diameter rope.

Bottle Opener: An integrated bottle opener is located in the lower portion of the light near the line cutter.

Magnet: A powerful magnet is located at the base of the light. You may attach the light magnetically in any orientation to most smooth, rust-free steel surfaces.

Caution! This product contains a non-replaceable rechargeable lithium battery. Attempting to open the product or replacing the rechargeable battery will result in permanent damage and void all warranties.

Warning! To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

This product is not a toy! Use this light only as it is intended. Inspect before every use. Do not use if parts are damaged, loose or missing.

Save these safety precautions!