

24211 Kodiak Kamper Operating Instructions & Precautions

Operation: Press the power button repeatedly to cycle between 4 brightness modes and off.

Battery Replacement: Unscrew the battery compartment cover located at the base of the lantern. Remove the batteries and replace them with 8 new AA alkaline batteries. With the green power button facing you, insert the top 2 batteries negative side first side by side, the next 2 positive side first side by side. Repeat for the next 4 batteries. Replace the battery compartment cover by lining up the 2 keyed tabs with the center holes next to the batteries and push down. Screw the battery cover back on clockwise until fully tight.

If the lantern will not be used for an extended period (more than 30 days) remove the batteries to prevent leakage.

Caution: Replace all batteries at the same time. Do not install batteries backwards, charge or put in fire. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) Batteries. This may cause batteries to leak or explode. Old or discharged batteries must be recycled or disposed of properly, according to local regulations.

Warning! To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

This product is not a toy! Use this light only as it is intended. Inspect before every use, do not use if parts are damaged, loose or missing.

Save these safety precautions.