

## 25188 - LA-1.3KHL-3/6 Operating Instructions & Precautions 06162101

**Charging:** This product is rechargeable. Please charge fully before first use to ensure optimal performance. Plug the full sized USB plug of the included charging cable into any USB power source such as a power cube, computer or car charger. Open the charging port cover at the bottom of the battery pack and insert the micro USB plug. The charging indicator on the back of the battery pack glows red while charging and changes to green when fully charged. Remove the charging cable and replace the charging port cover.

**Operation:** Repeatedly pressing the power button on the side of the light cycles between high, medium and low brightness modes plus off.

**Focus Beam:** To focus the light beam, pull the lens section out for a narrow beam or push it in for a wide beam. The lens tilts down up to 90 degrees in four clickable increments.

**Headband:** The included flexible headband adjusts on the top and sides to fit most head sizes. It may also be adjusted to fit over many types of head gear including hard hats, bike helmets and caps.

**Battery Replacement:** Release the locking tab on the top side of the battery compartment to open it. Remove the expired batteries and replace them with two 18650 lithium ion batteries, following the battery orientation diagram inside. Close the battery compartment until it snaps.

**Caution:** Replace all batteries at the same time. Do not install batteries backwards, charge or put in fire. This may cause batteries to leak or explode. Old or discharged batteries must be recycled or disposed of properly, according to local regulations.

**Warning!** To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

**This product is not a toy!** Use this light only as it is intended. Inspect before every use, do not use if parts are damaged, loose or missing.

Save these safety precautions.