

## 26819 - LA-RCH3KWRK-4 Operating Instructions & Precautions 04242301

**Charging:** This product is rechargeable. Please charge fully before first use to ensure optimal performance. Pull up the rubber port cover on the back of the light. Connect the full sized USB plug of the included charging cable to a USB power source such as a power cube, computer or car adapter and the USB-C plug into the charging port. A green four step charging indicator flashes. Charging is complete when all 4 lights turn solid green. **DO NOT USE THE WORK Light WHILE IT IS CHARGING!**

**Operation:** Repeatedly pressing the power button cycles between high, medium and low brightness settings, plus off.

The kickstand locks in 6 positions and may also be used as a carry handle. A hole on the kickstand facilitates hanging the light on a hook.

**Charging a Smartphone:** Pull up the rubber port cover. **Using your own phone charging cable,** connect the full sized USB plug into the flashlight's USB power bank port. Connect the other end to your device. **NOTE:** Charging a smartphone reduces the overall runtime of the work light. Replace the port cover when finished.

**Caution!** This product contains a non-replaceable rechargeable lithium battery. Attempting to open the product or replacing the rechargeable battery will result in permanent damage and void all warranties.

**Caution:** Lithium batteries can explode or cause burns if shorted, overheated, disassembled, recharged or exposed to fire or high temperature (above 212°). If the work light is turned on while in a container, the light can overheat, damage the light and/or cause surrounding material to ignite.

**Warning!** To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

**This product is not a toy!** Use this light only as it is intended. Inspect before every use. Do not use if parts are damaged, loose or missing.

Save these safety precautions!