## 24877 - LA-3500RCHLAN-4/8 Operating Instructions and Precautions 12092001

**Charging:** This product is rechargeable. Please charge fully before first use to ensure optimal performance.

Pull back on the rubber port cover located on the back of the lantern to access the charging ports. Plug the large USB plug of the included charging cable into any USB power source such as a power cube, computer or car charger. Plug the small end into the lantern's charging port. A flashing green light indicates charging is in progress and turns to solid green when charging is complete. Do not operate the lantern while charging. Remove the cable and replace the rubber port cover when charging is complete.

Operation: Pressing the power button repeatedly cycles between 5 brightness modes plus off.

**Charging a Smartphone:** Pull back on the rubber port cover located on the back of the lantern to access the charging ports. Using your own phone charging cable, connect the full sized USB plug into the lantern's USB port. Connect the other end to your device. Remove the cable and replace the rubber port cover when your device is charged.

**Caution!** This product contains a non-replaceable rechargeable lithium battery. Attempting to open the product or replacing the rechargeable battery will result in permanent damage and void all warranties.

**Warning!** To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

**This product is not a toy!** Use this light only as it is intended. Inspect before every use. Do not use if parts are damaged, loose or missing.

Save these safety precautions!