

24129 – LA-2000LAN-4/8 Operating Instructions and Precautions

Operation

5 Light Mode Operation: Repeatedly press the power button to cycle through 5 light modes and off.

Handle and Hanging Hook: To use the integrated hanging hook, flip the carry handle to the upright position. Push the hook up through the top of the handle. To carry the lantern, push the hook back down into the handle.

Battery Replacement: With the lantern oriented upside down, turn the black battery compartment cover counter clockwise several times and remove it.

Remove the expired batteries and replace them with 4 D alkaline batteries for best performance. Follow the illustration near each compartment for proper battery orientation. Two will face up and two will face down.

Replace the battery compartment cover by aligning the tab on the center post with the slot on the battery compartment. Push all the way in and turn the battery compartment cover clockwise several times until tight.

Caution: Replace all batteries at the same time. Do not install batteries backwards, charge or put in fire. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) Batteries. This may cause batteries to leak or explode. Old or discharged batteries must be recycled or disposed of properly, according to local regulations.

Warning! To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

This product is not a toy! Use this light only as it is intended. Inspect before every use, do not use if parts are damaged, loose or missing.

Save these safety precautions.