



Purchase Date: ___ / ___ / ___ Order/Customer Reference Number: _____

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>
If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

POLY-WICKER PLANTER

Review all information carefully before using this product. Save this manual for future reference.



GENERAL USE & CARE

LOCATION: For indoor and outdoor use. Only use on a flat, level surface.

Be mindful when placing outdoors, the liners do not have drainage holes; soil could quickly become waterlogged during heavy rain. Leaks and/or run-off from planters could cause damage to surfaces.

FILLING & WATERING: Lightweight potting soil is recommended for filling the liner. Take care when watering, the plastic liners do not have drainage holes. If using the planter outdoors, we recommend a location that will not receive too much rain, such as a covered porch or under an awning.

MOVING: Always lift the planter from the bottom when moving it, never drag or slide it as doing so can damage the planter and/or surfaces. Slowly and gently set the planter down to prevent breakage.

CLEANING:

POLY-WICKER: Brush, vacuum or use a garden hose to remove loose dirt and debris. If using a spray nozzle, use gentle or medium pressure settings; high-pressure sprayer settings could permanently damage the planter.

Mix 1/4 cup of soap or a mild detergent with 1 gallon of warm water. Using a soft-bristle brush, gently scrub to remove dirt and grime from the poly-wicker.

Thoroughly rinse, ensuring all soap residue has been removed. Allow the unit to air dry.

PLASTIC LINER: Mix 1 part distilled vinegar with 4 or 5 parts warm water. Use a soft cloth to wash the liner. Rinse thoroughly and dry.

EXPOSURE: Over time, sunlight and weather elements may degrade and change the color of this product. Manufacturer is not liable for damage caused by exposure to weather elements.

WINTER CARE & STORAGE: Store in a dry, indoor location. Cover to prevent dust build-up.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of the page.

Please have the item number and order information ready to expedite response time.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

