
20V Lithium Ion Cordless Fan Instructions

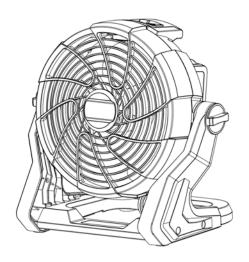

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE,
DO NOT USE THIS PRODUCT!

QUESTIONS? CONTACT CUSTOMER SERVICE.

Call Customer Service at 1-636-532-9888, Monday-Friday, 8 AM - 4 PM Central Time, or email: info@amerihomebrand.com. A copy of the sales receipt is required.

KEEP MANUAL, SALES RECEIPT & WARRANTY FOR FUTURE REFERENCE.



To register your product warranty, please visit buffalotools.com or scan the QR code.

PRODUCT SPECIFICATION

• 7" 18V Li-Ion Cordless Fan

Material: Plastic

· Charger Voltage: 100-240V/50-60Hz, 60W · Rated Voltage: 18V, 2.0Ah Li-Ion Battery,


• Motor Output: 11W

· Number of Speed Setting: 3 • Rated Speed: 1,200 / 1,500 / 1,700 • Rated Wind Volume: 180 / 240 / 270 CFM

TECHNICAL DATA

Power Source	8V Battery 12V Car cigarette plug 100-240Vac to 12V DC adaptor
Motor Voltage	12 volts dc
No-load speed	Hi: 1700 RPM Mi: 1500 RPM Low: 1200 RPM
Air volume	Hi: 270CFM Mi: 240CFM Low:180CFM
Wattage	11W

Fan diameter	185mm/with 3x fanblades
Runtime	Hi- 7hrs ,MI- Lo- 10 hrs @18V 4Ah Hi- 3.5hrs ,MI- Lo- 5 hrs @18V 2
Carry handle	with
12V dc input	Yes
Tilt adjustment	Yes, 0-360°
Weight	N.W.: 2.4 Kg (Bare tool) G.W.3.0kg

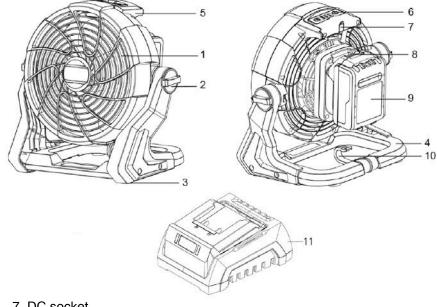

2. Tilt lock 3. Leg pad

1. Air exit hole

4. Support leg 5. Top handle

6. Control switch

 
7. DC socket

8. Battery lock

9. Battery pack

10. Hang hook

11. Charger



POWER LO MED HI

CARRYING HANDLE

HANG HOOK

The built-in hang hook telescope out of the back leg and can be used to suspend the fan.

ANCHOR HOLE

If using the anchor holes, use at least 2 screws, one on each side, secured into sturdy surface.

TILT LOCKER

Turn two tilt lockers anticlockwise to loosen the fan, then tilt as needed. Before use, turn lockers clockwise to lock. SUPPORT LEG

CONTROL SWITCH

Depress the power switch "(1)" and then select high speed, medium speed or low speed.