

SAFETY WARNINGS

Please read and follow all safety/fire precaution described in information provided.

Please follow all campsite fire & safety rules and regulations. Ensure all members of your party are aware of the procedure in case of an emergency.

Please keep your tent entrance clear at all times.

Never allow children to play near hot appliances.

Flame and heat sources should be kept away from the tent and furniture.

This tent is fire retardant (CPAI84) but burn if exposed to a naked flame, fire retardant fabric will only slow the time of ignition and reduce the flame effect.

Do not store gas cartridges or re-fill containers inside your tent.

Good ventilation and airflows is essential at all times to avoid suffocation.

The warranty of this tent does not cover damage from accidents, misuse, exposure to extreme weather, or color loss from prolonged exposure to UV/Sunlight

CARE GUIDE

Always ensure tent is clean and dry before packing away.

Use a camp cloth to clean away any dirty areas and allow to dry. Mildew can form if you pack away and store your tent damp.

To prolong the life of the tent store the components opened out where possible.

Store your tent in a dry, well ventilated place.

As part of general maintenance we recommend that you use a seam sealer to re-coat the inside of all seams as well as a re-proofing agent on the outer flysheet of the tent at regular intervals-after applying allow 48hrs before repacking.

Spare parts can be purchased to replace broken sections of poles.

A repair kit is included with your tent. This can be used to repair small tears in your tent.

Pittman can not be held responsible for any loss or damage to possessions caused by theft or bad weather conditions.

The Original
PITTMAN
O U T D O O R S



OWNER'S MANUAL

IT IS HIGHLY RECOMMEND THAT YOU READ AND FOLLOW THE INFORMATION CONTAINED IN THIS MANUAL BEFORE INITIAL SET UP.

WARNING

Keep all flame and heat sources away from the tent fabric.
The tent is made with flame-resistant fabric which meets CPAI-84 specifications. This does not make it fireproof.
The fabric will burn if left in contact with any flame source.
The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Fire Precaution

If using gas or other combustion appliances additional ventilation will be required

Always observe the safety instructions

Do not use candles, matches, or open flames of any kind in or near the tent

Do not cook inside the tent

Build campfires downwind and several meters away from the tent. Be sure to fully extinguish fires before leaving a campsite or before retiring for the night

Exercise extreme caution when using fuel-powered lanterns or heaters inside or around the tent. Use battery-operated lanterns whenever possible

Do not refuel lamps, heaters, or stoves inside the tent
Extinguish or turn off all lanterns before going to sleep

Do not smoke inside the tent

Do not store flammable liquids inside the tent

NEVER run the vehicle engine when the tent is attached

Do not install the tent when the temperature is below 0°C/32°F or when your vehicle is wet, it may cause damage

Allow adequate ventilation inside the tent at all times

Do not attempt to drive the vehicle with the tent attached
To prevent carbon monoxide from entering the vehicle and tent area, do not run the engine, do not cook inside the tent, and do not use a gas heater in the tent. Carbon monoxide is dangerous to your health.


• Engine must be off and exhaust must be fully cooled before

TAKE DOWN & PACKING THE TENT

Reverse the assembly steps to release the hook & fiberglass pole from the tent.


When taking down the tent, please follow the below steps

Warning: Keep body parts clear of pole joints during operation.

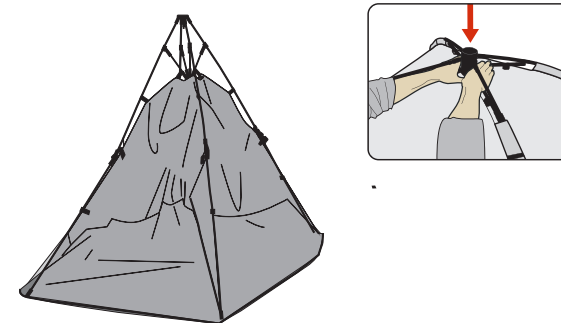

1. Separate central hub by pushing down on the lower hub poles. Gently lower down the entire tent.

Warning: Stand back when closing tent-hub pops up quickly

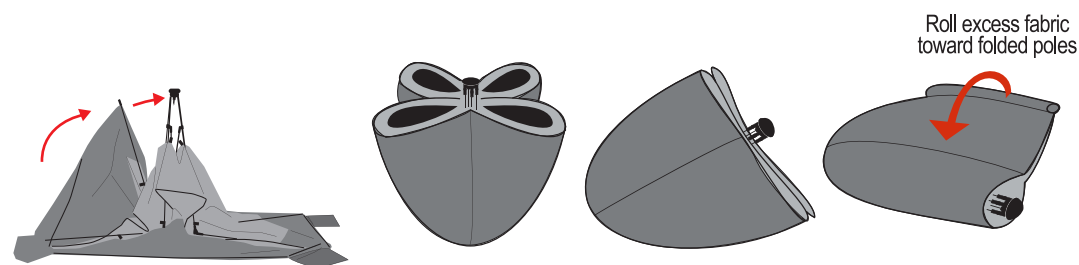

2. Holding central hub upright, fold poles up towards the hub. Allow loose fabric to flower out. Lay the folded tent in its side. All poles should be tight to the hub in order to prevent pole damage. Bring all excess fabric together and roll tightly towards center.

- All returns must have a Returned Goods Authorization number (RGA). Every package must be clearly marked with the RGA number. RGA numbers are good for 30 days from the date of issuance. Products returned without viewable RGA numbers will be refused. No returns on special order, clearance or discounted items. Returned products is subject to a 20% Re-Box/Restocking fee. Products must be properly packed to prevent shipping damage. All returned products must be shipped pre-paid. The cost of transporting the product to Pittman Outdoors for warranty service/ replacement is the responsibility of the purchaser.
- Send entire product to Pittman Products International with a letter stating:
 - The nature of the problem with the bed and the model number.
 - Your name, return shipping address and a daytime phone number.
- Send us a copy of the original sales receipt.
- This warranty is valid for the original retail purchaser from the date of the initial retail purchase and is not transferable.

The purchase date on the receipt must be within One Year of the date you ship the bed to us. Please ship the bed, letter and copy of receipt via courier (e.g. UPS, FedEx Ground) or Insured

Post to:
 Pittman Outdoors
 650 South Jefferson Street
 Unit D
 Placentia CA 92870

Pittman Outdoors is not responsible for returned shipments lost in transit. You are encouraged to use a shipment system that offers you a tracking number. Please allow 6 to 8 weeks for replacement. Customer is responsible for all return shipping costs.



STOP
VERY IMPORTANT!

Due to health and hygiene concerns, once box has been opened,

THIS PRODUCT SHOULD NOT BE RETURNED TO THE RETAILER.

If the terms of the Limited Warranty are met,

Contact Pittman Outdoors at 1(800) 981-2339


CAMPSITE SELECTION

- Select a smooth, level campsite clear of rocks, branches, and other hard or sharp objects
- Avoid areas with overhead power lines and tree limbs
- Park the vehicle in the chosen campsite
- Turn the engine off and engage the parking brake


Package Contents

Remove contents from the carry bag and ensure you have all components Listed Below:


Carry Bag

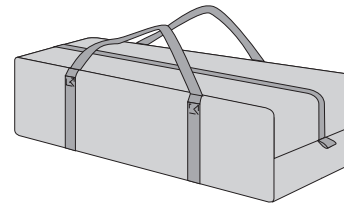


Inner Tent

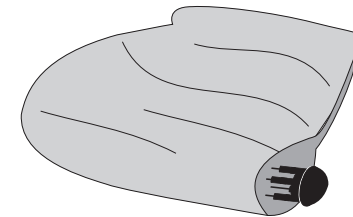


Fly Sheet

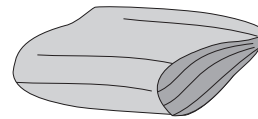


Pole Bag

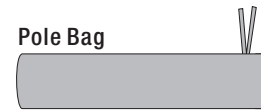


Peg Bag

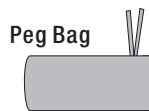

Gear Loft

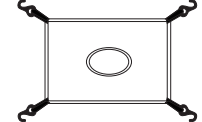

Stakes

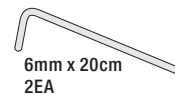

Guy Lines



Tent Tie



Fiberglass Pole

A) (red)



B) (blue) -the pole will placed inside of tent.



C) (grey)




D) (black)




TENT-ASSEMBLY

For an easier assembly, set the tent up on the ground.


1. Set up the inner tent, which has come with the Easy-up frame.

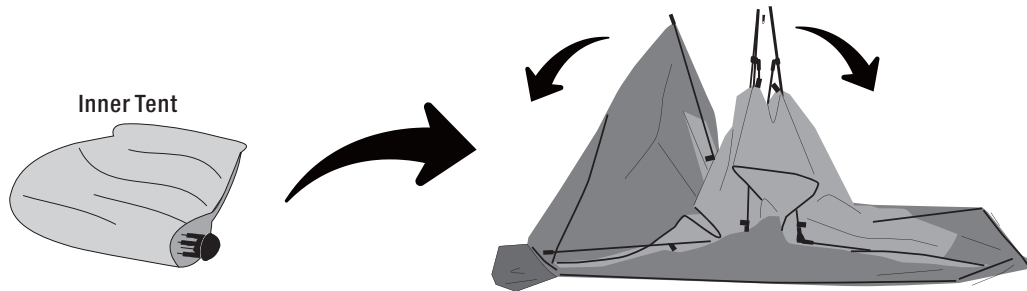

Unfold all poles.
Lay tent flat with central hub upright.
Make sure poles are fully extended.

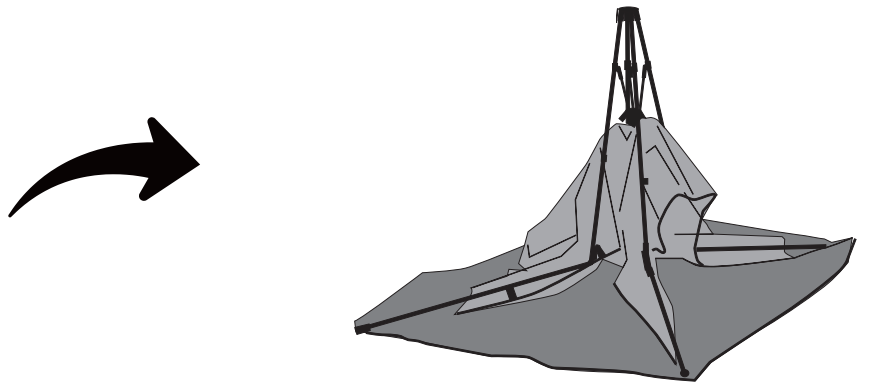


Standing behind tent, lift top of hub to head height.

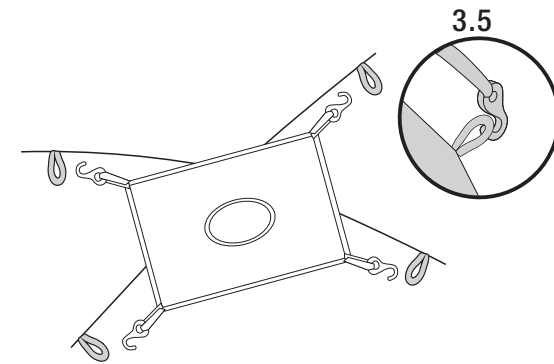


3.5 .To install the gear loft, place each corner hook of the gear loft into the loop located on the ceiling of the tent.

4. Locate the back of the flysheet that goes towards the cab of the truck. Secure the flysheet with the hook & loop onto the tent pole and strap clips to the tent (2 per side and 2 at the tailgate) and tighten if necessary.

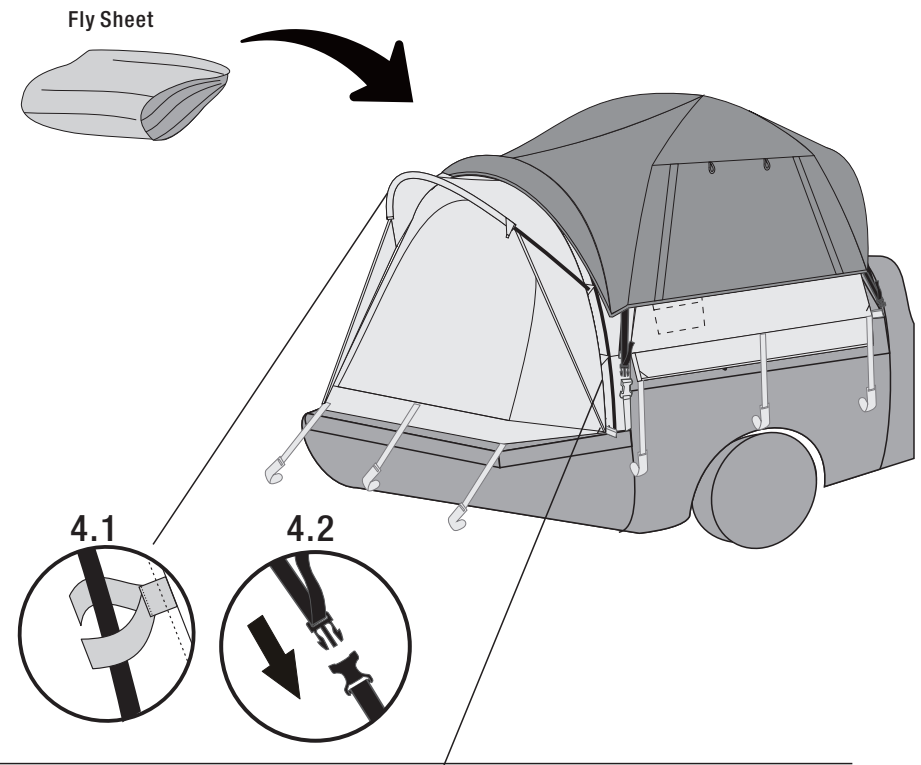

TENT-ASSEMBLY

3. Lift up the tent inside the bed of the truck the front door is at the tailgate. The Pole end of tent corner is stand up on the truck rails.

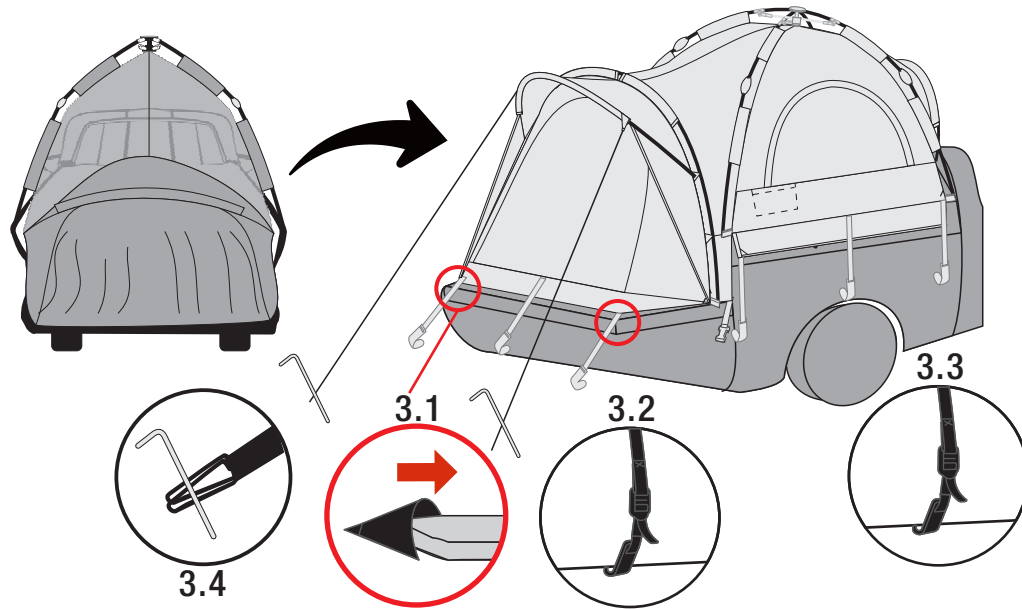


3.1. Wrap elastic corner pocket (the tent front bottom corner) onto the truck tailgate .


3.2. Locate the tent tailgate straps (3). Slide the 3 back straps between the truck box and the tailgate (you may need to lift the tailgate). Locate the front straps at the end of the tailgate and connect to the corresponding back strap under the tailgate.

3.3. Locate the tent side straps (3 per side) and loosely attach each to the truck's body.

3.4. Draw out the to guy lines on the front canopy
peg down the guy lines onto ground if needed.

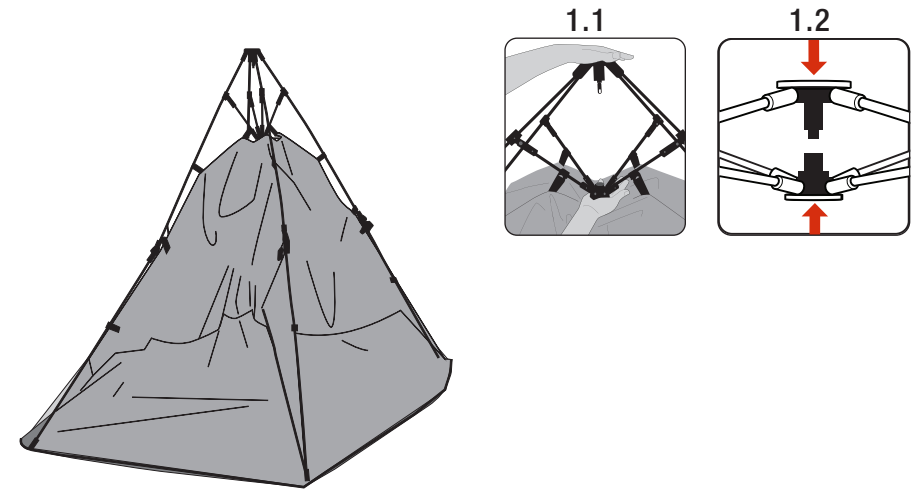

Firmly press upper and lower hubs together. As hubs get closer to connecting, the resistance will increase and the body of tent will bow out.

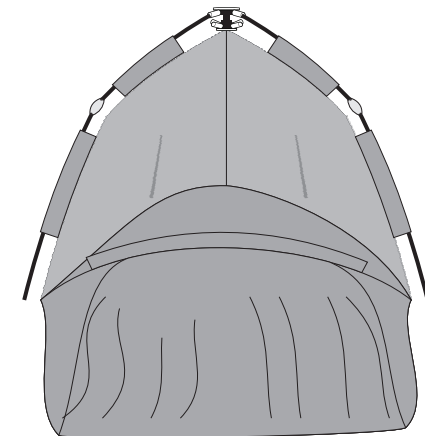

TENT-ASSEMBLY

2. Assemble the tent poles by unfolding each section.
Please note that poles are color coded as below .
Please insert the poles into corresponding sleeve end as shown in the photo.

Fiberglass Pole

A) (red)




B) (blue) -the pole will placed inside of tent.



C) (grey)




D) (black)

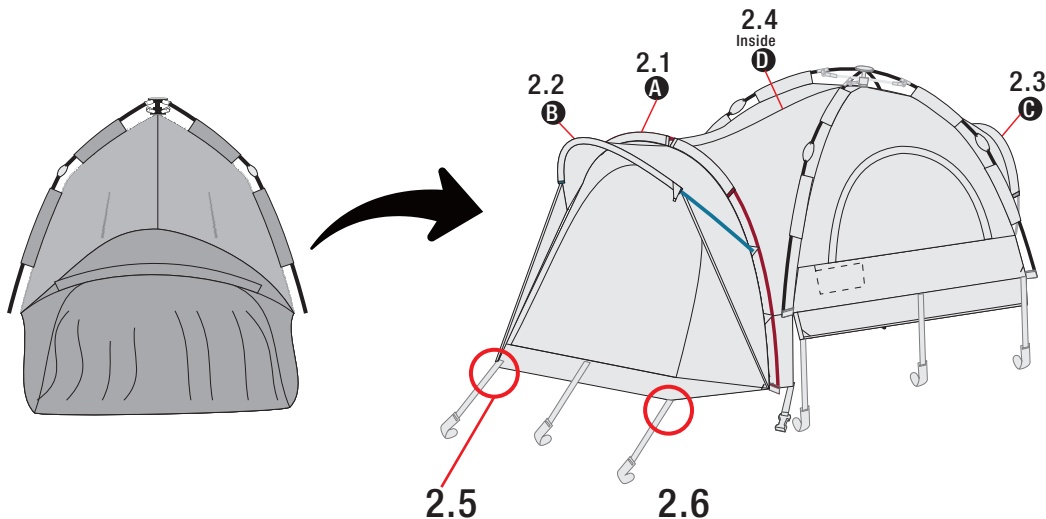

NOTE: The poles may get stuck in the sleeve. Do not force them – gently guide the pole through the fabric sleeve.


2.1-1

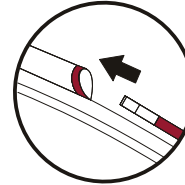

2.1-2




2.1-3

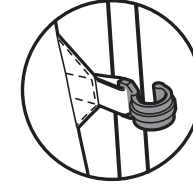


Insert the A-Red Pole into the sleeve which end in red colors.
Insert the 2 pole end into webbing pockets with red marks.
Put pole clips onto the pole.

2.2-1

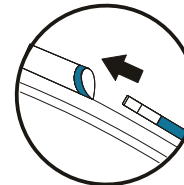


2.2-2

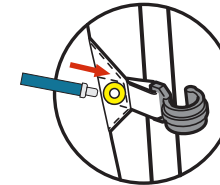


Insert the B-Blue Pole into the sleeve which end in blue colors.
Insert the 2 pole tip into grommets on the webbing

2.3-1

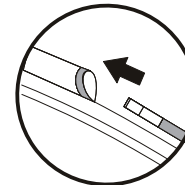


2.3-2

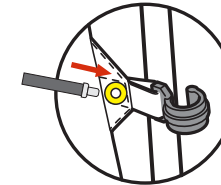


Insert the C-Grey Pole into the sleeve which end in Grey colors.
Insert the 2 pole tip into grommets on the webbing.

2.41

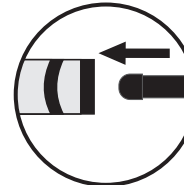

2.4-2

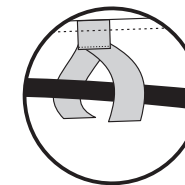

D-pole is inside of the tent. Open the tent door and
Insert the D-Black Pole into the webbing pocket with black trim.
The pockets inside tent located at the top of the door
& at the center of the tent(inside).
Use Hook&loop to secure the pole position at the roof of tent .