



2.4GHz, 802.11 b/g/n

LevelTM Sense PRO

USER MANUAL



www.Level-Sense.com

Contents

About Level Sense Pro	1.0
Device Specifications	1.1
Requirements	1.2
In the Box	1.3
Status LEDs	1.4
Wiring Panel	1.5
Installation	2.0
Installation Warning	2.1
Mounting to Pump Discharge Pipe ...	2.2
Mounting to the Wall	2.3
Installing Float Sensor	2.4
Installing Leak Sensor	2.5
Installing Level Sensor	2.6
Powering On	3.0
Level Sense Account Creation	4.0
Account Creation on	4.1
Tablet/Smartphone	
Account Creation on	4.2
Computer	
Connect to Wi-Fi	5.0
Connect with WPS	5.0 A
Connect with Hotspot	5.0 B
Claim Device	5.0 C
Configure Device Name	5.1
Update Frequency	5.2
Offline Threshold	5.3
Alarm Inputs	6.0
Per Input Type	6.1 – 6.4
Alarm Outputs	7.0
Per Output Type	7.1 – 7.3
Disabling Alarm from Device	7.4
Device and Alarm Testing	8.0
Per Device Testing	8.1 - 8.5
Maintenance	9.0
Password Reset	10.0
Battery Warning	11.0
Service Disclaimer	12.0
Warranty	13.0
Test Log	14.0
Troubleshooting	15.0
Support	16.0

1.0 About Level Sense Pro

Level Sense Pro is a Wi-Fi based residential environmental monitor designed specifically for the home owner who wants to keep a watchful eye on their property at all times. Level Sense Pro monitors five critical elements of the home as alarm inputs—sustained power loss, sump pit high water level, water leak(s), temperature and humidity levels.

Each of the five alarm inputs can be configured individually as alarm triggers based on their state or level. There are three alarm outputs of the Level Sense Pro; email/SMS (text message), audible siren and alarm relay contacts. Additional detail of the alarm outputs can be found in the alarm outputs section of the manual.

Please read the User Manual carefully before using the Level Sense Pro.

1.1 Device Specifications

Operating Temperature: 32-110 F° (0-45 C°)

Temperature Accuracy: $\pm 1^{\circ}\text{F}$ (0.5°C)

Operating Humidity: 0-95% RH, non-condensing

Humidity Accuracy: $\pm 3\%$

Wi-Fi Network: 2.4Ghz Only, 802.11b/g/n

Input Power: 12VDC 700mA

Battery: 3.7V Lithium Ion Polymer 1100mAH *Read Battery Warning

Siren: 100db

Duty: Indoor Only

Antenna: Internally integrated

Sensor Inputs: 2x Dry contact

Relay Contact: 1 Amp Max

Dimensions: 5x6x1.25"

Weight: 2lbs

Contains FCC ID: 2AC7Z-ESP8266EX

1.2 Requirements

120 VAC Power outlet


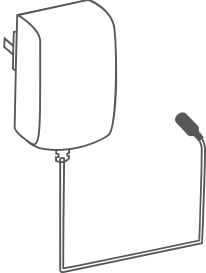
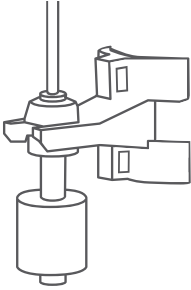
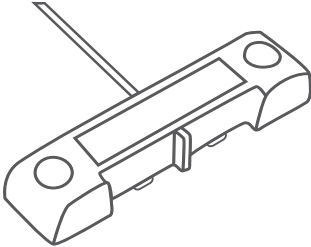
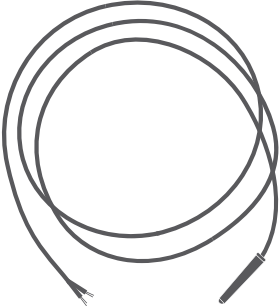
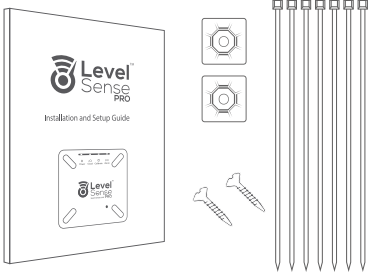
2.4 Ghz Wi-Fi internet within range of Level Sense

Wi-Fi device with web browsing

Screw Driver, flat head #3 or #4




1.3 In the Box

<p>1. Level Sense Pro</p>  <p>The Level Sense Pro device is a square, white, wall-mounted unit. It features a central logo with the text "Level Sense PRO" and the website "level-sense.com". Above the logo are four icons: a power button, a cloud, a gear for calibration, and a bell for an alarm. The device has four mounting slots, one on each side.</p>	<p>2. Power Supply</p>  <p>The power supply is a rectangular, white, wall-mounted unit. It has a power cord on the left side and a cable with a connector on the right side.</p>
<p>3. Float Switch & Bracket</p>  <p>The float switch and bracket assembly consists of a cylindrical float switch connected to a metal bracket. The bracket has two mounting slots and a central screw hole.</p>	<p>4. Leak Sensor</p>  <p>The leak sensor is a long, rectangular, white device with a thin probe extending from one end. It has two circular sensors on the top surface.</p>
<p>5. Level Sensor Wire (Optional Accessory)</p>  <p>The level sensor wire is a long, thin, black cable with a connector at one end and a probe at the other.</p>	<p>6. Accessories</p>  <p>The accessories include an "Installation and Setup Guide" manual, two screws, two screws with washers, and five long, thin screws.</p>

1.4 Status LEDs

The status LEDs on the Level Sense Pro provide a visual indication of the control state. The below table is a system status guide. If the four lights have a pattern not shown it is a claim code, and you should reference section 5.2.

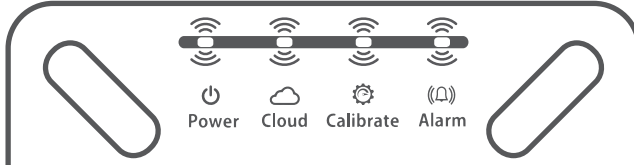


Color / LED	Power	Cloud	Calibrate	Alarm
Blue	Incoming AC Power Present	Connected to Wi-Fi	Calibrated/ No Alarm Present*	No Alarms Present
Yellow		Pulsing: Connecting to Wi-Fi Solid: WPS Mode	Learning Calibration	
Red	Incoming AC Power Absent	Loss of Wi-Fi, Wrong Credentials Entered	Water Depth Sensor over 100% **	Active Alarm(s)
White		Hotspot Mode		
Purple		Firmware Upgrade/ Server Maintenance		

*Once the depth sensor is calibrated, the Calibrate LED will change from YELLOW to BLUE. If the depth sensor reading does not exceed 100%, the Calibrate LED will remain BLUE.

**If the Depth Sensor reading goes above 100%, the Calibrate LED will change from BLUE to RED. Continue to section 2.4 for more information on this sensor

1.5 Wiring Panel

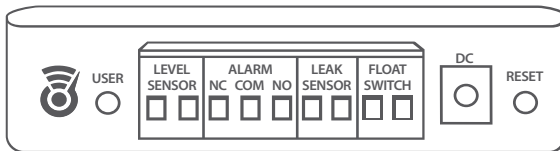

The sensors connect to the removable green terminal block at the bottom of the unit. Wiring of the Level and float switch do not have polarity. **Please note that the leak sensor does have polarity.** Please reference section 2.6 for more information.

To connect sensors, turn the terminal screw counterclockwise to open the wiring clamp. Insert wire into the clamp and turn terminal screw clockwise to close clamp on wire. Ensure the jaw closes on the conductor and not the insulation of the wire.

Tighten until wire is firmly secured.



2.0 Installation


Level Sense Pro is designed for indoor installation only. The ideal mounting location is in the utility room within a few feet of the sump pump pit. Consideration should be taken to keep within range of the homes Wi-Fi router. Wi-Fi range varies based on the router and environmental conditions. We recommend range testing before installation. If the device is out of range, consider a Wi-Fi range extender. The Level Sense Pro can be mounted in two different ways, choose from the following options.

2.1 Installation Warning

Working around water and electricity is inherently dangerous. Disconnect all electrical circuit breakers near the sump pump and installation area before beginning work. If you are unfamiliar or uncomfortable please contact a licensed electrician to perform the installation.

2.2 Mounting to Pump Discharge Pipe


For most customers, mounting to the discharge pipe of the sump pump, or other nearby PVC pipe, is the simplest installation location. First, install the two self-adhesive mounting squares to the back of the device as shown below. Then, feed a zip tie through the mounting square opening and around the pipe and zip tight. Repeat for the second mounting square. Install the device approximately 1-6 feet above the floor.

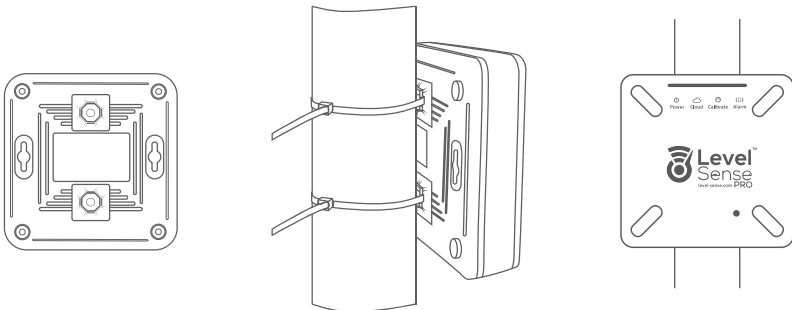

TIP: For larger diameter pipes, connect a second zip tie in series to extend the length of the zip tie.

2.3 Mounting to the Wall

The back side of the Level Sense Pro accepts two #6 screws. The screws are spaced at 3.375" and are mounted horizontally. Install the device approximately 3-6 feet above the floor.

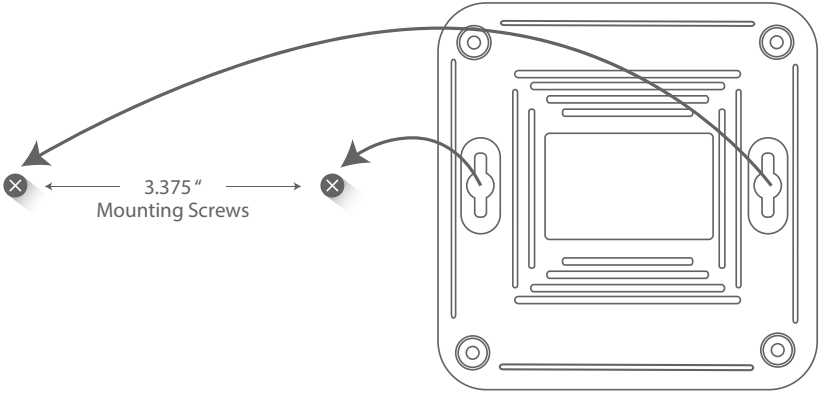

HAVE A QUESTION?

Send us an email: : CustomerService@SumpAlarm.Com or submit a request through our webpage: <http://www.level-sense.com/pages/support>



Contact support
CustomerService@SumpAlarm.Com
or Phone: 314-787-8059




2.4 Installing Level Sensor (Optional Accessory)

The Level sensor is used to help determine pump cycle frequency. This sensor is not required and only provides an approximation of water level following the calibration process. This is useful if you are unsure how often your pump runs. It is important to note that this sensor is not used to generate alarms. The Float Switch is used to trigger high level alarms.

The level sensor is installed vertically on the PVC discharge pipe of the sump pump. The sensor wire attaches to the PVC pipe with zip ties. Place the sealed end of the sensor wire as far down the pipe as possible. The closer the sealed end of the wire is to the bottom of the pipe, the more resolution of water level you will see.

Care must be taken to secure the sensor wire to the discharge pipe to avoid it being sucked into the pump. Don't allow the sensor wire to meet the power cable of the sump pump or metal piping as this can skew the reading. Do not modify the level sensor wire length.

The calibration process requires 5 pump cycles. If you find that the water level readings after calibration are not correct, or accurate, you can either use the "Grow/Shrink" functions in the view charts section of the website to fine tune the water level graph to match the sump levels, or you can re-calibrate the sensor by clicking the "Re-Initiate Depth Calibration" button.

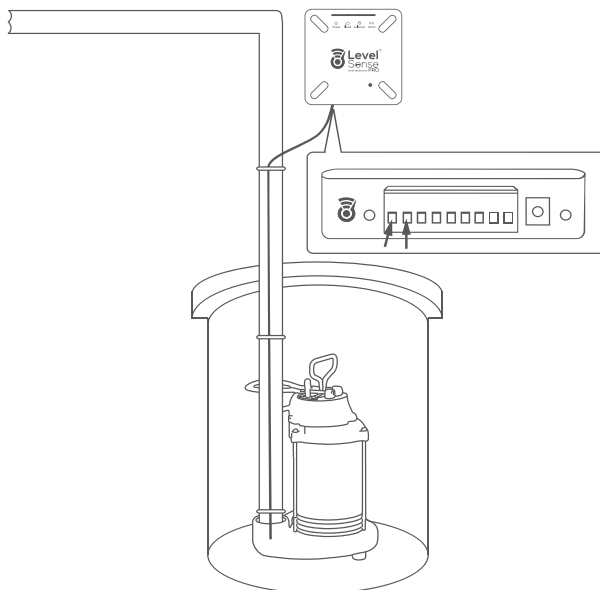


2.5 Installing Float Sensor

The float sensor mounts above the normal pump water line and detects when the water level has reached a point above normal operating range.

The float sensor installs on the sump pump discharge pipe. Using the provided plastic float bracket and two zip ties, securely mount the float to the discharge pipe. The sliding float portion of the sensor should face down. Mount the float approximately six (6) inches above the sump pump normal water line. This level can usually be found by looking at the side walls of the pit to visually see the high water mark roughly level with the top of the pump. The wires from the float sensor connect to the far right two terminals on the Level Sense Pro. The wires do not have polarity, and cannot be wired backwards. Do not increase wire length beyond the length provided.


*The depth sensor only works in clear water.

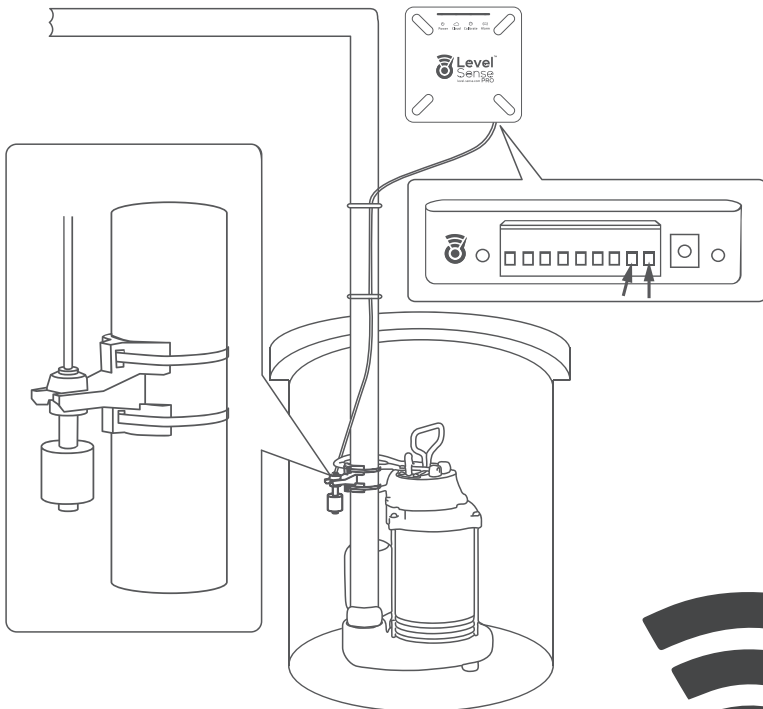

2.6 Installing Leak Sensor (Optional Accessory)


The leak sensor monitors for pooling water on a flat surface, this sensor does not need to be installed if this type of monitoring is not required.

The leak sensor can be mounted near the sump pit or other area where water would pool in the event of a leak. Typical locations are near a water heater or HVAC system which could leak during a malfunction. The sensor needs to be placed flat on the floor with the metal sensing elements down. The sensor must be submerged in a minimum pool of water 1/8" in depth before activating. **The leak sensor does have polarity. The red wire needs to go into the left leak sensor gate, and the black into the right leak sensor gate.** Do not increase wire length of the leak sensor beyond the length provided.

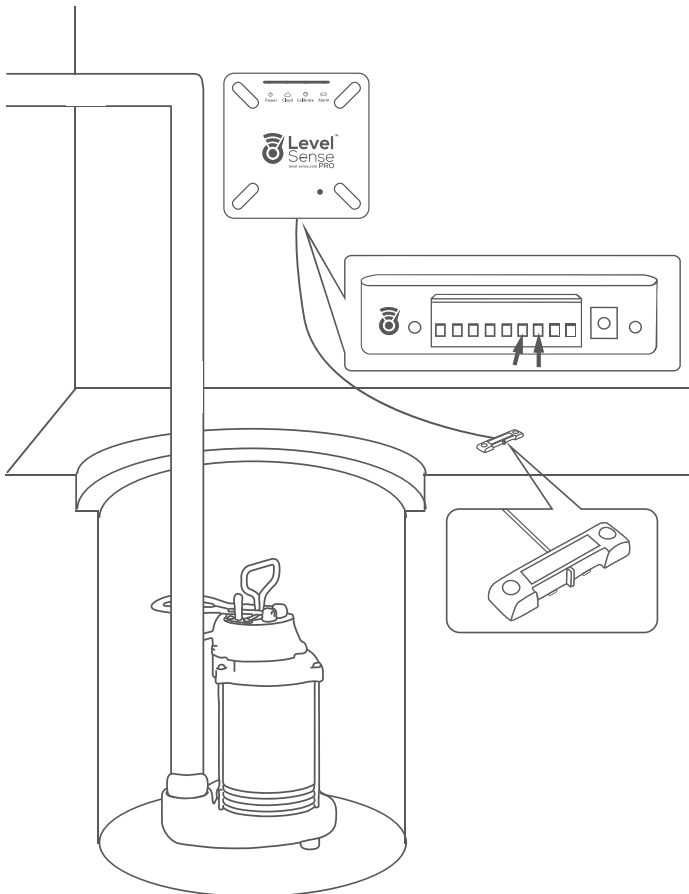

3.0 Powering On

After mounting the Level Sense Pro control unit and successful installation of sensors we can now power up the control unit. First, connect the DC jack of the power supply to the Level Sense Pro control. Second, connect the AC wall adapter to a standard 120VAC power outlet. Use only the supplied power adapter.

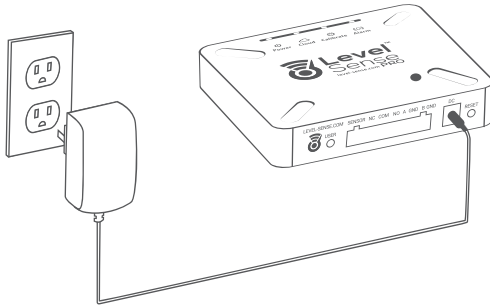

Upon power up, the cloud LED indicator will begin to pulse white.




4.0 Level Sense Account Creation:

The next step is to create your Level Sense account. This can be done with either a computer, or a smartphone/tablet. If you prefer video instructions over written, please scan the QR code.



4.1 Account Creation on a Tablet/ Smartphone




- On your smartphone proceed to either the iOS app store, or the Android Play store
- Type into the search bar "Level Sense", and download the application

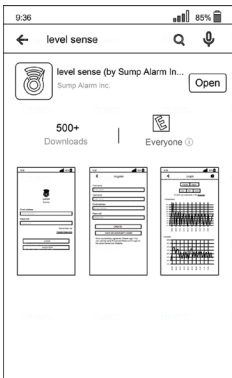

- Next click on the register button and enter in your personal information into the register page, and lastly click the create button. Congratulations, your Level Sense account has been created. The Username and Password that are used for your account are the same for both the mobile application and the website.

4.2 Account Creation on a Computer

- Begin by opening an internet browser like Google Chrome or Safari.
- In the address bar type in: Level-Sense.com
 - Click on the text labeled "Account"
- Next enter in your first name, last name, email address and password. Click the submit button and your Level Sense account has been successfully created.

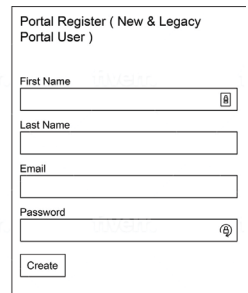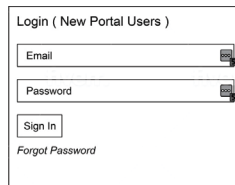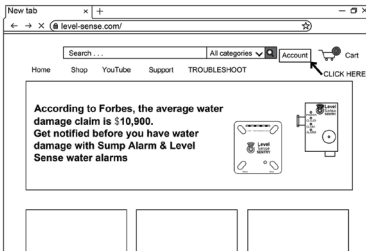

5.0 Connect to Wi-Fi

The Level Sense Pro is immediately ready to join your 2.4 Ghz Wi-Fi network after power up. When the Level Sense Pro has no configured Wi-Fi, the cloud LED will pulse white.

There are two methods of connecting to a home network depending on your Wi-Fi router. The preferred method is using a process called WPS or Wi-Fi Protected Setup. The second method turns the Level Sense Pro into a hotspot which you temporarily join with a smart device to configure Wi-Fi credentials.

There are a series of articles on more advanced troubleshooting for WiFi Connections on the Level Sense website at: <https://www.Level-Sense.Com/TroubleShooting>

Password requirements for your local 2.4GHz Wi-Fi network:
SSID (local network name) and password are case sensitive
The Wi-Fi password may be no more than 48 characters in length
The following characters are supported in the Wi-Fi password:
!"#\$%&'()*+,-./:;<=>?@[\\]^_`{|}~


THIS APPLIES TO CONNECTING WITH WPS OR CONNECTING WITH HOTSPOT!



5.0 A Connect with WPS



To connect to Wi-Fi with WPS, first check to see your Wi-Fi router has a button labeled “WPS.” (Generally denoted with the graphic above.) If your router does not, proceed to connecting with hotspot mode. Some routers require WPS to be enabled, or direct it to a particular channel (i.e. 2.4 GHz or 5 GHz). Temporarily move the Level Sense Pro control unit into close proximity of the Wi-Fi router. The Level Sense Pro will operate on battery backup to complete this step if allowed to charge for 30 minutes prior. Once the two devices are near each other, press the WPS button on your router first. Within 15 seconds, double click the USER button on the Level Sense Pro. The Cloud LED will turn from pulsing white to solid yellow. The WPS process can take up to three minutes. Upon successful connection, all four LEDs will illuminate and pulse. Please note the colors from left to right as they are used later in the claim process, section 5.2. You have successfully connected to your home Wi-Fi, please move on to Product Registration.

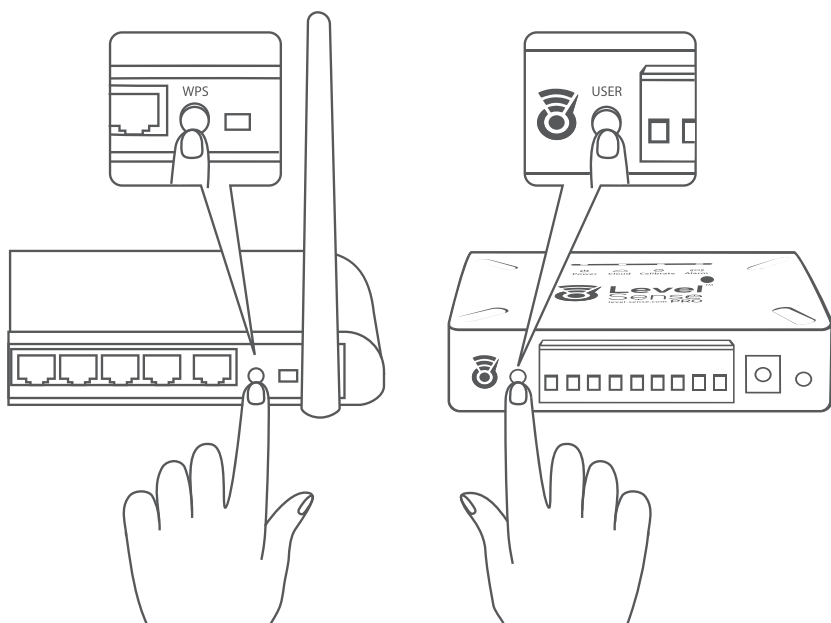


TIP: If the Cloud LED turns red following a WPS attempt, press the RESET button to restart the device. If the Cloud LED returns to red after restarting, check your router settings to see if WPS is enabled. Alternatively, try connecting with hotspot mode.

5.0 B Hotspot Method

To connect your Level Sense Pro to your Wi-Fi network via the hotspot mode, you will need a Wi-Fi enabled device like a smartphone or laptop. The Cloud LED of the Level Sense should be white which indicates the device is broadcasting a Wi-Fi hotspot. Use your Wi-Fi device (phone, tablet, or computer) to connect to the Level Sense network (the last four digits of the Level Sense network is the last 4 digits of the device's MAC address). Your phone may indicate that this network has no internet connection. This is normal.

Once connected to the Level Sense network, a Wi-Fi configuration page will automatically appear. If this page does not appear automatically, then open a web browser and enter the device's IP address into the address bar: 192.168.4.1

On the webpage, you will select the bubble of YOUR HOME 2.4 Ghz Wi-Fi network. Next you will enter the PASSWORD of YOUR HOME network. Note that this field is case sensitive.

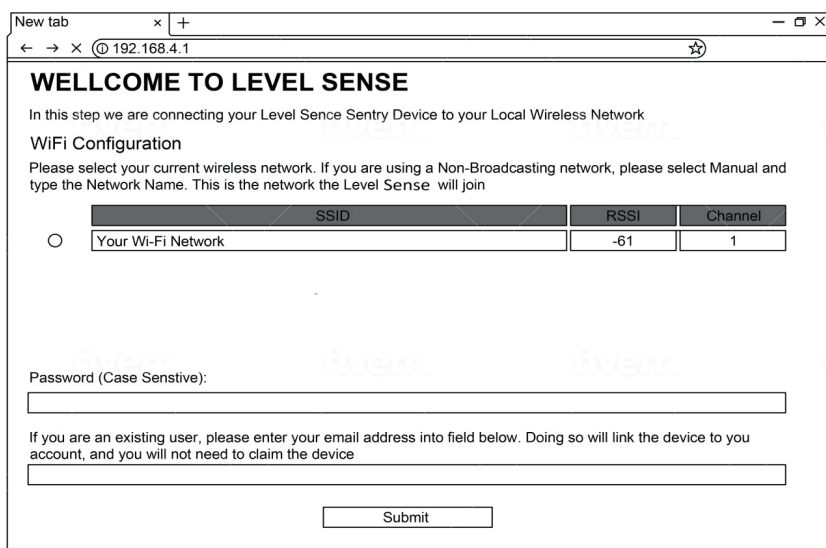

The screenshot shows a web browser window with the address bar set to 192.168.4.1. The page title is "WELCOME TO LEVEL SENSE". Below the title, there is a heading "WiFi Configuration" and a paragraph of instructions. A table lists available Wi-Fi networks with columns for SSID, RSSI, and Channel. The first entry is "Your Wi-Fi Network" with an RSSI of -61 and Channel 1. Below the table is a "Password (Case Sensitive)" input field. At the bottom, there is a "Submit" button.

WELCOME TO LEVEL SENSE

In this step we are connecting your Level Sense Sentry Device to your Local Wireless Network

WiFi Configuration

Please select your current wireless network. If you are using a Non-Broadcasting network, please select Manual and type the Network Name. This is the network the Level Sense will join

	SSID	RSSI	Channel
<input type="radio"/>	Your Wi-Fi Network	-61	1

Password (Case Sensitive):

If you are an existing user, please enter your email address into field below. Doing so will link the device to you account, and you will not need to claim the device

NOTE: If all four LEDs do not illuminate, and the Cloud LED turns red, the SSID or password is entered incorrectly. Refer to Password Reset, section 10.0, of the manual.




5.0 B Hotspot Method Continued

Once complete, you can enter your Level Sense account email address into the email address field (If you do this, the device will automatically link to your account, and you will NOT be presented with a claim code). Lastly, press the submit button.

The webpage then instructs you to click the RESET button on the Level Sense Pro. After restarting, the Cloud LED will pulse yellow until it connects to your Wi-Fi. Upon successful connection the device will either...

1. Present a claim code (all four LEDs on the device will blink in unison (**Proceed to Section 5.0C**))
2. The Cloud LED will change to pulsing blue, followed by blue on the other 3 LEDs (**Proceed to Section 5.1**). This indicates that the device has been successfully linked to your account, and no claim code is needed.
3. The Cloud LED changes to red (No local internet connection). This can be caused by an incorrect password for the Wi-Fi network, or the network is out of range. If this happens, press the RESET button to try again. If it does not connect on subsequent attempts, please reference **Section 10** for instructions on how to perform a password reset.

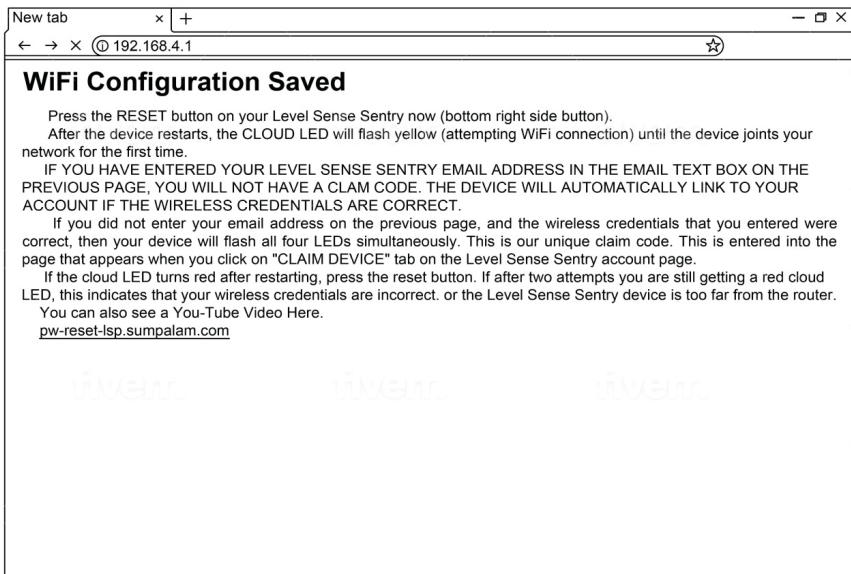

The screenshot shows a web browser window with the address bar displaying '192.168.4.1'. The main content area has the heading 'WiFi Configuration Saved' and the following text:

Press the RESET button on your Level Sense Sentry now (bottom right side button).
After the device restarts, the CLOUD LED will flash yellow (attempting WiFi connection) until the device joins your network for the first time.

IF YOU HAVE ENTERED YOUR LEVEL SENSE SENTRY EMAIL ADDRESS IN THE EMAIL TEXT BOX ON THE PREVIOUS PAGE, YOU WILL NOT HAVE A CLAM CODE. THE DEVICE WILL AUTOMATICALLY LINK TO YOUR ACCOUNT IF THE WIRELESS CREDENTIALS ARE CORRECT.

If you did not enter your email address on the previous page, and the wireless credentials that you entered were correct, then your device will flash all four LEDs simultaneously. This is our unique claim code. This is entered into the page that appears when you click on "CLAIM DEVICE" tab on the Level Sense Sentry account page.


If the cloud LED turns red after restarting, press the reset button. If after two attempts you are still getting a red cloud LED, this indicates that your wireless credentials are incorrect. or the Level Sense Sentry device is too far from the router.

You can also see a You-Tube Video Here.
pw-reset-lsp.sumpalam.com

5.0 C Claim Device

If you typed in your E-Mail address on the Wi-Fi configuration page (as seen in the previous Section), then your device will be claimed automatically, and it will be in your account upon login in the portal (if you do not see the device, refresh your screen). If you did not enter your E-Mail address on the Wi-Fi configuration page, it will be necessary to claim the device. Once the Level Sense is connected to your wireless network, the Level Sense Pro will flash all four LEDs in unison. This is a claim code. After logging

into the portal via the website or the mobile application click on the "Claim" button. Follow the directions on screen and enter the unique claim code.

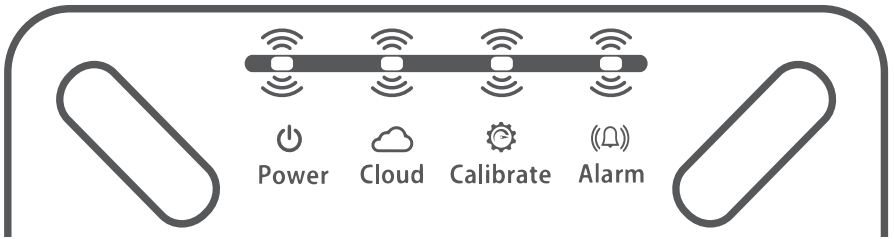

5.1 Configure Device Name

By default, the Level Sense Pro is named "New Sensor" in the Portal. The device name can be modified and is useful if you have multiple devices in your Portal.

5.2 Update Frequency

Set the update frequency between two minutes (default) and five minutes. Configuring for less frequent updates consumes less Wi-Fi data.

5.3 Offline Threshold

The offline threshold is how long our system will wait after it loses connection with your device to send out an alert. The lower the number of minutes is, the more notifications you will receive. We recommend a minimum of 10 minutes (or 5 times the Update Frequency).

6.0 Alarm Inputs

By default, all sensor inputs are enabled. Disable sensor inputs to suit your application. Sensors can be re-enabled at a later point.

6.1 Temperature and Humidity Alarm

Configure a safe temperature and humidity range by setting minimum and maximum safe levels. Alarms will occur when levels are outside of these bounds.

6.2 Power Loss Alarm

An alarm will occur after 60 seconds of power failure. If Wi-Fi connection is lost due to widespread power failure or lost Wi-Fi, an alarm message cannot be sent. However, Portal will send a device offline message after the device misses multiple consecutive check-ins. Using default settings, a device offline message is issued within 6-8 minutes of going offline. Device offline reminders are sent after 24 hours, 3 days, and 7 days of continued failed check-ins.

6.3 Float Switch Alarm

The float switch will alarm when water lifts the sensor float bobber for more than 10 seconds.

6.4 Leak Sensor Alarm

The leak sensor will alarm when the sensor is in a minimum water pool of 1/8" " for more than 10 seconds.

7.0 Alarm Outputs

Alarm outputs are set up based on each sensor input. By default, all sensors have all alarm outputs enabled. If the sensor input is enabled, it can have alarm outputs. You can disable inputs and outputs to suit your application and to match your installation configuration. The Alarm LED will turn red when there is an alarm and blue when there are no alarms.

7.1 Audible Alarm (Siren)

Enable the audible alarm for an audible warning. The audible alarm can be temporarily silenced by pressing the USER button.

7.2 Message Alarm (Text/Email)

In the portal click on CONTACTS. Enable the message alarm to receive alerts to your smart device via SMS and/or email. Use the test function within Portal to confirm each recipient. If using email and you do not receive the message, check your spam folder. You might need to configure spam settings to allow e-mails from alarm@level-sense.com.

7.3 Relay Alarm

Enable the relay alarm to have the dry contact relay change states on alarm event. The relay is a latching type and will maintain its state even when the power fails and after the battery has drained. The alarm relay is useful when connecting the Level Sense Pro into a home security system. Both NO and NC contacts are available for increased wiring applications.

7.4 Silencing an Alarm on the Device

Alarms can be temporarily disabled by pressing the USER button on the Level Sense Pro control. This is particularly useful to silence the audible alarm once you are aware of the alarm. This will disable the alarm until it has been cleared and then reoccurs. As an example, if you silence a temperature alarm, it will not alarm again until temperature goes back into the non-alarm range, and then returns into alarm range. If multiple alarms are disabled, all alarm inputs must be cleared before it will alarm again.



8.0 Device and Alarm Testing

The Level Sense Pro and sensors should be tested monthly to ensure proper operation.

8.1 Humidity and Temperature Testing

Testing for temperature and humidity sensors is done by comparing current levels in Portal with a calibrated reference. Readings of +/-3% are expected.

8.2 Float Switch Testing

Test the float switch by holding the float up, simulating high water, and waiting 60 seconds for an alarm. Release the float after testing.

8.3 Leak Sensor Testing

Test the leak sensor by dipping both metal tabs of the sensor into a cup of water and waiting 60 seconds for an alarm. Do not submerge the plastic housing of the sensor. Dry the metal tabs and replace the sensor after testing.

8.4 Power Loss Detection Testing

Test power loss detection by removing the power adapter from the wall and waiting for alarm. Reconnect the power adapter after testing.

8.5 Battery Condition Testing

Remove the power adapter from the wall and allow the device to run for three hours on the internal battery pack. If the device turns off before three hours replace the battery. Dispose battery according to local rules and regulations.

9.0 Maintenance

Level Sense Pro and sensors require the following monthly maintenance steps. Wipe the control off with a damp cloth. Inspect the leak sensor contacts for corrosion and clean or replace if necessary. Check the float sensor can travel freely. Check the level sensor has not come loose from the PVC pipe. Check for fraying wire, loose connections or other general wear and replace if necessary.

10.0 Password Reset

To clear the Wi-Fi credentials from the Level Sense Pro, complete the following password reset steps:

- Press and hold the USER button until all four LEDs turn solid red. (If after 10 seconds they have not turned red, release the button for a few seconds and try again. It can take several attempts to get into password reset mode.)
- Once all four LEDs turn red, click the USER button until two LEDs have turned off and two remain lit, usually this requires two button clicks.
- Wait until the two red lights go out ten seconds and press the RESET button. The password reset is complete.

A red cloud LED following hotspot mode setup typically means an incorrect SSID or password. Remember, these fields are case sensitive. Use password reset to return the device to hotspot mode and repeat the hotspot setup steps.

11.0 Battery Warning

Level Sense Pro contains a Lithium Ion Polymer battery which can be volatile. Damaged or misused batteries can result in fire, personal injury and damage to property. Please handle the device carefully, never drop or subject the device to harsh movements or environments. If the product is damaged in shipping, please quarantine the device and contact us immediately. If you suspect you have a damaged battery, place it in a safe open space and observe the battery for approximately 15 minutes. A battery may swell or even possibly catch fire after a short time.

By using the Level Sense Pro, the buyer assumes all risks associated Lithium Ion Polymer batteries. If you do not agree with these conditions, return the device immediately before use.

Replace the battery after 300-500 full or partial discharges or three years, whichever occurs sooner. Only use batteries from Level Sense.

12.0 Service Disclaimer

Level Sense includes a minimum cloud monitoring service ("Portal") period of one year from the date of manufacture. Continued service may be offered monthly or annually for a fee or gratis. Level Sense reserves the right to alter, amend or change information, services and pricing at any time. Level Sense also reserves the right to modify or discontinue services at any time after the first year.



13.0 Warranty

2 YEAR LIMITED WARRANTY

PLEASE READ THIS WARRANTY CAREFULLY BEFORE USING THE PRODUCT.

THIS LIMITED WARRANTY CONTAINS THE STANDARD TERMS AND CONDITIONS ("TOC") OF LEVEL SENSE. WHERE PERMITTED BY THE APPLICABLE LAW, BY KEEPING YOUR LEVEL SENSE PRODUCT BEYOND THIRTY (30) DAYS AFTER THE DATE OF DELIVERY, YOU FULLY ACCEPT THE TERMS AND CONDITIONS SET FORTH IN THIS LIMITED WARRANTY.

IN ADDITION, WHERE PERMITTED BY THE APPLICABLE LAW, YOUR INSTALLATION AND/OR USE OF THE PRODUCT CONSTITUTES FULL ACCEPTANCE OF THE TERMS AND CONDITIONS OF THIS LIMITED WARRANTY (HEREINAFTER REFERRED TO AS "LIMITED WARRANTY OR WARRANTY"). IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS WARRANTY, INCLUDING ANY LIMITATIONS OF WARRANTY, INDEMNIFICATION TERMS OR LIMITATION OF LIABILITY, THEN YOU SHOULD NOT USE THE PRODUCT AND SHOULD RETURN IT TO THE SELLER FOR A REFUND OF THE PURCHASE PRICE. THE LAW MAY VARY BY JURISDICTION AS TO THE APPLICABILITY OF YOUR INSTALLATION OR USE ACTUALLY CONSTITUTING ACCEPTANCE OF THE TERMS AND CONDITIONS HEREIN AND AS TO THE APPLICABILITY OF ANY LIMITATION OF WARRANTY, INDEMNIFICATION TERMS OR LIMITATIONS OF LIABILITY.

- 1. WARRANTOR:** IN THIS WARRANTY, WARRANTOR SHALL MEAN "DEALER, DISTRIBUTOR, AND/OR MANUFACTURER."
- 2. ELEMENTS OF WARRANTY:** THIS PRODUCT IS WARRANTED TO BE FREE FROM DEFECTS IN MATERIALS AND CRAFTSMANSHIP WITH ONLY THE LIMITATIONS AND EXCLUSIONS SET OUT BELOW.
- 3. WARRANTY AND REMEDY:** TWO-YEAR WARRANTY – IN THE EVENT THAT THE PRODUCT DOES NOT CONFORM TO THIS WARRANTY AT ANY TIME DURING THE TIME OF TWO YEARS FROM ORIGINAL PURCHASE, WARRANTOR WILL REPAIR THE DEFECT AND RETURN IT TO YOU AT NO CHARGE.

THIS WARRANTY SHALL TERMINATE AND BE OF NO FURTHER EFFECT AT THE TIME THE PRODUCT IS: (1) DAMAGED BY EXTERNAL CAUSES SUCH AS FIRE, WATER, LIGHTNING, ETC. OR NOT MAINTAINED AS REASONABLE AND NECESSARY; OR (2) MODIFIED; OR (3) IMPROPERLY INSTALLED; OR (4) MISUSED; OR (5) REPAIRED OR SERVICED BY SOMEONE OTHER THAN WARRANTORS' AUTHORIZED PERSONNEL OR SOMEONE EXPRESSLY AUTHORIZED BY WARRANTOR'S TO MAKE SUCH SERVICE OR REPAIRS; (6) USED IN A MANNER OR PURPOSE FOR WHICH THE PRODUCT WAS NOT INTENDED; OR (7) SOLD BY ORIGINAL PURCHASER.

LIMITED WARRANTY, LIMITATION OF DAMAGES AND DISCLAIMER OF LIABILITY FOR DAMAGES: THE WARRANTOR'S OBLIGATION UNDER THIS WARRANTY IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT THE WARRANTOR'S OPTION AS TO REPAIR OR REPLACEMENT. IN NO EVENT SHALL WARRANTORS BE LIABLE OR RESPONSIBLE FOR PAYMENT OF ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL AND/OR PUNITIVE DAMAGES OF ANY KIND, INCLUDING BUT NOT LIMITED TO ANY LABOR COSTS, PRODUCT COSTS, LOST REVENUE, BUSINESS INTERRUPTION LOSSES, LOST PROFITS, LOSS OF BUSINESS, LOSS OF DATA OR INFORMATION, OR FINANCIAL LOSS, FOR CLAIMS OF ANY NATURE, INCLUDING BUT NOT LIMITED TO CLAIMS IN CONTRACT, BREACH OF WARRANTY OR TORT, AND WHETHER OR NOT CAUSED BY WARRANTORS' NEGLIGENCE. IN THE EVENT THAT IT IS DETERMINED IN ANY ADJUDICATION THAT THE LIMITED WARRANTIES OF REPAIR OR REPLACEMENT ARE INAPPLICABLE, THEN THE PURCHASER'S SOLE REMEDY SHALL BE PAYMENT TO THE PURCHASER OF THE ORIGINAL COST OF THE PRODUCT, AND IN NO EVENT SHALL WARRANTORS BE LIABLE OR RESPONSIBLE FOR PAYMENT OF ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL AND/OR PUNITIVE DAMAGES OF ANY KIND, INCLUDING BUT NOT LIMITED TO ANY LOST REVENUE, BUSINESS INTERRUPTION LOSSES, LOST PROFITS, LOSS OF BUSINESS, LOSS OF DATA OR INFORMATION, OR FINANCIAL LOSS, FOR CLAIMS OF ANY NATURE, INCLUDING BUT NOT LIMITED TO CLAIMS IN CONTRACT, BREACH OF WARRANTY OR TORT, AND WHETHER OR NOT CAUSED BY WARRANTORS' NEGLIGENCE.

WITHOUT WAIVING ANY PROVISION IN THIS LIMITED WARRANTY, IF A CIRCUMSTANCE ARISES WHERE WARRANTORS ARE FOUND TO BE LIABLE FOR ANY LOSS OR DAMAGE ARISING OUT OF MISTAKES, NEGLIGENCE, OMISSIONS, INTERRUPTIONS, DELAYS, ERRORS OR DEFECTS IN WARRANTORS' PRODUCTS OR SERVICES, SUCH LIABILITY SHALL NOT EXCEED THE TOTAL AMOUNT PAID BY THE CUSTOMER FOR WARRANTORS' PRODUCT AND SERVICES OR \$150.00, WHICHEVER IS GREATER. YOU HEREBY RELEASE WARRANTORS FROM ANY AND ALL OBLIGATIONS, LIABILITIES AND CLAIMS IN EXCESS OF THIS LIMITATION.

INDEMNIFICATION AND COVENANT NOT TO SUE: YOU WILL INDEMNIFY, DEFEND AND HOLD HARMLESS WARRANTORS, THEIR OWNERS, DIRECTORS, OFFICERS, EMPLOYEES, AGENTS, SUPPLIERS OR AFFILIATED COMPANIES, AGAINST ANY AND ALL CLAIMS, DEMANDS OR ACTIONS BASED UPON ANY LOSSES, LIABILITIES, DAMAGES OR COSTS, INCLUDING BUT NOT LIMITED TO DAMAGES THAT ARE DIRECT OR INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL, AND INCLUDING ATTORNEYS FEES AND LEGAL COSTS, THAT MAY RESULT FROM THE INSTALLATION, OPERATION, USE OF, OR INABILITY TO USE WARRANTORS' PRODUCTS AND SERVICES, OR FROM THE FAILURE OF THE WARRANTORS' SYSTEM TO REPORT A GIVEN EVENT OR CONDITION, WHETHER OR NOT CAUSED BY WARRANTORS' NEGLIGENCE.

YOU AGREE TO RELEASE, WAIVE, DISCHARGE AND COVENANT NOT TO SUE WARRANTORS, THEIR OWNERS, DIRECTORS, OFFICERS, EMPLOYEES, AGENTS, SUPPLIERS OR AFFILIATED COMPANIES, FOR ANY AND ALL LIABILITIES POTENTIALLY ARISING FROM ANY CLAIM, DEMAND OR ACTION BASED UPON ANY LOSSES, LIABILITIES, DAMAGES OR COSTS, INCLUDING BUT NOT LIMITED TO DAMAGES THAT ARE DIRECT OR INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL, AND INCLUDING ATTORNEYS FEES AND LEGAL COSTS, THAT MAY RESULT FROM THE INSTALLATION, OPERATION, USE OF, OR INABILITY TO USE WARRANTORS' PRODUCTS AND SERVICES, OR FROM THE FAILURE OF THE WARRANTORS' SYSTEM TO REPORT A GIVEN EVENT OR CONDITION, WHETHER OR NOT CAUSED BY WARRANTORS' NEGLIGENCE, EXCEPT AS NECESSARY TO ENFORCE THE EXPRESS TERMS OF THIS LIMITED WARRANTY.

EXCLUSIVE WARRANTY: THE LIMITED WARRANTY OR WARRANTIES DESCRIBED HEREIN CONSTITUTE THE SOLE WARRANTY OR WARRANTIES TO THE PURCHASER. ALL IMPLIED WARRANTIES ARE EXPRESSLY DISCLAIMED, INCLUDING: THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR USE AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND THE WARRANTY OF NON-INFRINGEMENT AND/OR ANY WARRANTY ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IT MUST BE CLEAR THAT THE WARRANTORS ARE NOT INSURING YOUR PREMISES OR BUSINESS OR GUARANTEEING THAT THERE WILL NOT BE DAMAGE TO YOUR PERSON OR PROPERTY OR BUSINESS IF YOU USE THIS PRODUCT. YOU SHOULD MAINTAIN INSURANCE COVERAGE SUFFICIENT TO PROVIDE COMPENSATION FOR ANY LOSS, DAMAGE, OR EXPENSE THAT MAY ARISE IN CONNECTION WITH THE USE OF PRODUCTS OR SERVICES, EVEN IF CAUSED BY WARRANTORS' NEGLIGENCE. THE WARRANTORS ASSUME NO LIABILITY FOR INSTALLATION OF THE PRODUCT AND/OR INTERRUPTIONS OF THE SERVICE DUE TO STRIKES, RIOTS, FLOODS, FIRE, AND/OR ANY CAUSE BEYOND SELLER'S CONTROL, FURTHER SUBJECT TO THE LIMITATIONS EXPRESSED IN ANY LICENSE AGREEMENT OR OTHER AGREEMENT PROVIDED BY WARRANTORS TO PURCHASER.

THE AGREEMENT BETWEEN THE WARRANTORS AND THE PURCHASER, INCLUDING BUT NOT LIMITED TO THE TERMS AND CONDITIONS HEREIN SHALL NOT BE GOVERNED BY THE CONVENTION FOR THE INTERNATIONAL SALE OF GOODS. WHERE APPLICABLE, THE UNIFORM COMMERCIAL CODE AS ADOPTED BY THE STATE OF DELAWARE SHALL APPLY.



- 4. PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** IN THE EVENT THAT THE PRODUCT DOES NOT CONFORM TO THIS WARRANTY, THE PRODUCT SHOULD BE SHIPPED OR DELIVERED FREIGHT PREPAID TO A WARRANTOR WITH EVIDENCE OF ORIGINAL PURCHASE.
- 5. LEGAL REMEDIES AND DISCLAIMER:** SOME JURISDICTIONS MAY NOT ALLOW, OR MAY PLACE LIMITS UPON, THE EXCLUSION AND/OR LIMITATION OF IMPLIED WARRANTIES, INCIDENTAL DAMAGES AND/OR CONSEQUENTIAL DAMAGES FOR SOME TYPES OF GOODS OR PRODUCTS SOLD TO CONSUMERS AND/OR THE USE OF INDEMNIFICATION TERMS. THUS, THE EXCLUSIONS, INDEMNIFICATION TERMS AND LIMITATIONS SET OUT ABOVE MAY NOT APPLY, OR MAY BE LIMITED IN THEIR APPLICATION, TO YOU. IF THE IMPLIED WARRANTIES CAN NOT BE EXCLUDED, AND THE APPLICABLE LAW PERMITS LIMITING THE DURATION OF IMPLIED WARRANTIES, THEN THE IMPLIED WARRANTIES HEREIN ARE TO BE LIMITED TO THE SAME DURATION AS THE APPLICABLE WRITTEN WARRANTY OR WARRANTIES HEREIN. THE WARRANTY OR WARRANTIES HEREIN MAY GIVE YOU SPECIFIC LEGAL RIGHTS THAT WILL DEPEND UPON THE APPLICABLE LAW. YOU MAY ALSO HAVE OTHER LEGAL RIGHTS DEPENDING UPON THE LAW IN YOUR JURISDICTION.
- 6. CHOICE OF FORUM AND CHOICE OF LAW:** IN THE EVENT THAT A DISPUTE ARISES OUT OF OR IN CONNECTION WITH THIS LIMITED WARRANTY, THEN ANY CLAIMS OR SUITS OF ANY KIND CONCERNING SUCH DISPUTES SHALL ONLY AND EXCLUSIVELY BE BROUGHT IN EITHER THE EASTERN DISTRICT COURT OF MISSOURI OR THE UNITED STATES DISTRICT COURT FOR THE EASTERN DISTRICT OF MISSOURI.

REGARDLESS OF THE PLACE OF CONTRACTING OR PERFORMANCE, THIS LIMITED WARRANTY AND ALL QUESTIONS RELATING TO ITS VALIDITY, INTERPRETATION, PERFORMANCE AND ENFORCEMENT SHALL BE GOVERNED BY AND CONSTRUED IN ACCORDANCE WITH THE LAWS OF THE STATE OF MISSOURI, WITHOUT REGARD TO THE PRINCIPLES OF CONFLICTS OF LAW.

Effective date 01/11/2019

Sump Alarm, Inc. d.b.a. Level Sense

Phone: 314-787-8059

14.0 Test Log

Please maintain a monthly test log. This page can be replicated for additional recordings.

Date of Test	Float Switch	Leak Switch	Water Level	Battery	Temp Reading	Humidity Reading	Tested By
EXAMPLE: 1/1/2015	Pass	Pass	55%	3 hours	72°F	25%	Joe Smith



15.0 Troubleshooting

There are a series of articles on more advanced troubleshooting on the Level Sense Website at <https://Level-Sense.Com> then click "Troubleshoot". Here you can find information for more advanced issues on Wi-Fi connectivity.

Wi-Fi will not stay connected: Device out of range. Check router antennas are not blocked and router is optimally placed within house.

Wi-Fi will not connect: Assuming the device is within range of the router, check network SSID and password. Refer to Password Reset, section 10.0, of the manual.

Email messages and test email not received: Check the spam message folder for message from alarm@level-sense.com.

False high water float switch readings: Check placement of switch relative to normal high water line. Slide float and bracket assembly up so sensor will not activate until water is at a higher level.

False leak or float switch alarm: Check sensor wires are not in close proximity to high voltage pump wires. This can cause the sensor to have false readings.

Water Level Graphs Not Rendering Properly: Wait until a heavy rain (or put a hose into your sump), and then restart the calibration process in the Portal.

16.0 Support

HAVE A QUESTION?

Send us an email to: CustomerService@SumpAlarm.Com or submit a request through our webpage: <http://www.Level-Sense.com/pages/support>



Contact support

CustomerService@SumpAlarm.Com
or Phone: 314-787-8059





www.Level-Sense.com



