# MUST READ IN ENTIRETY BEFORE ASSEMBLING Instructions For Installing Your New Tri-Tel Pole

## **WARNING!**

Examine your location for the Tri-Tel Pole. DO NOT ERECT POLE NEAR ELECTRICAL WIRES IN THE AIR OR UNDER THE GROUND! Pole is not warranted against high winds and weather.

When operating the pole, always wear gloves, and hold on the pole before operating the snaps or keys. Also see the website for all updates on instructions before operation.

**3 Pole Sections** 

3 "A" Snaps

(pre-installed)


2 "Pole Keys"

(taped to poles)

### Parts list:

- 3 Pole Sections
- **3** "A" Snap Buttons (pre-installed)
- 2 "Pole Keys" (taped to poles)
- Look for loose keys on side of poles.
- 17" Ground Sleeve

Your Tri-Tel Pole was shipped with the 3 Pole Sections together. A painted red line sits 1" above the hole on each pole section, to help with assembly. The outer section - the widest - is pole section "C" with "A" being the smallest section.

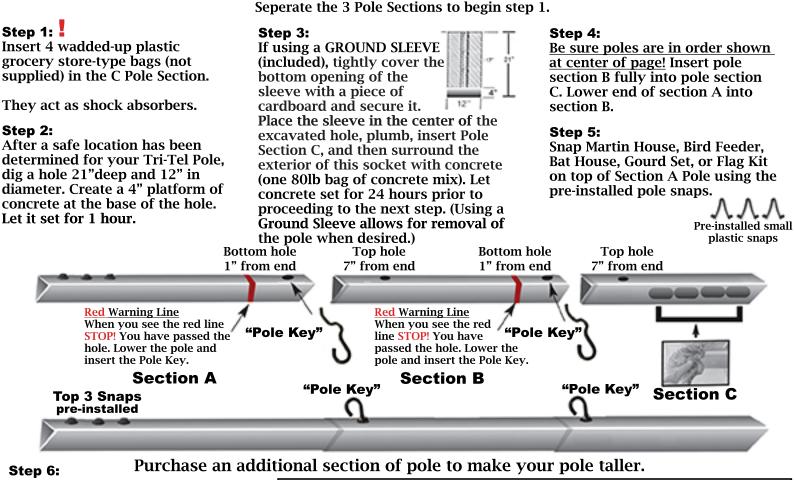

Raise pole section A to align the hole with pole section B then insert the Pole Key. - A DO NOT LET GO OF "Pole Kev" POLE WHEN RAISING OR LOWERING UNTIL POLE **KEYS ARE INSTALLED** B **CORRECTLY!** "Pole Key' Raise pole section B to align the hole with pole C section C then insert the 4 Plastic Bags Pole Key.

#### **Safety Tips:**



When lowered the pole ections should not a all the way inside the lower pole section(s).

#### To Lower Pole:

Gently lift the section of pole, then remove the Pole Key. Lower the pole section slowly - DO NOT ALLOW THE POLE TO DROP. Continue process with the remaining pole sections.

**During Cold Weather:** 

If you live where the ground freezes, DO NOT lower any section below ground level during the winter months. This will protect your pole against freeze damage. Common sense must be used:

when high winds are expected lower your pole. This will not only protect your pole, but will also protect you, your bird house, flags, gourds, or other items being used on vour Tri-Tel Pole.