


True & TidyTM

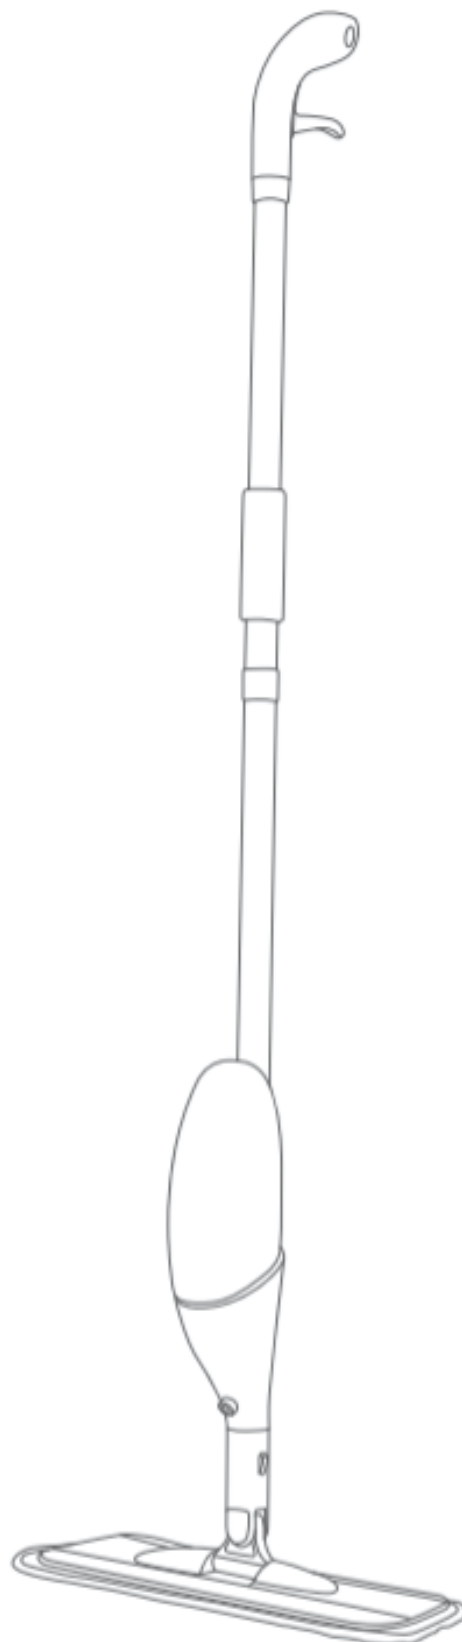

Spray Mop

SPRAY-250

USE & CARE MANUAL



www.trueandtidy.com



facebook.com/TrueandTidyHome



Instagram.com/trueandtidyhome

SMART • HANDY • RELIABLE • INNOVATIVE • NEW • FUNCTION • DESIGN



 
IMPORTANT SAFEGUARDS & INSTRUCTIONS

At True & Tidy, safe performance is our top priority with any consumer product, so that you can use and trust our products confidently. Please use and operate product with due care and attention placed on the following operating instructions and precautions.

- Carefully read all instructions before operating the spray mop for the first time.
- This appliance is not intended for use by children or persons with physical, mental or sensory capabilities, or lack of experience and knowledge without the supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Use spray mop on floor surfaces only. Do not spray cleaning solution on people or pets.
- Ensure the spray mop is properly assembled before use.
- Only use attachments or accessories provided and specified in this instruction manual.
- Never use the spray mop without the mop pad.
- Store the spray mop indoors in a cool, dry place.
- Do not fill the water tank with hot water. Distilled or filtered water is strongly recommended.




PARTS & ACCESSORIES

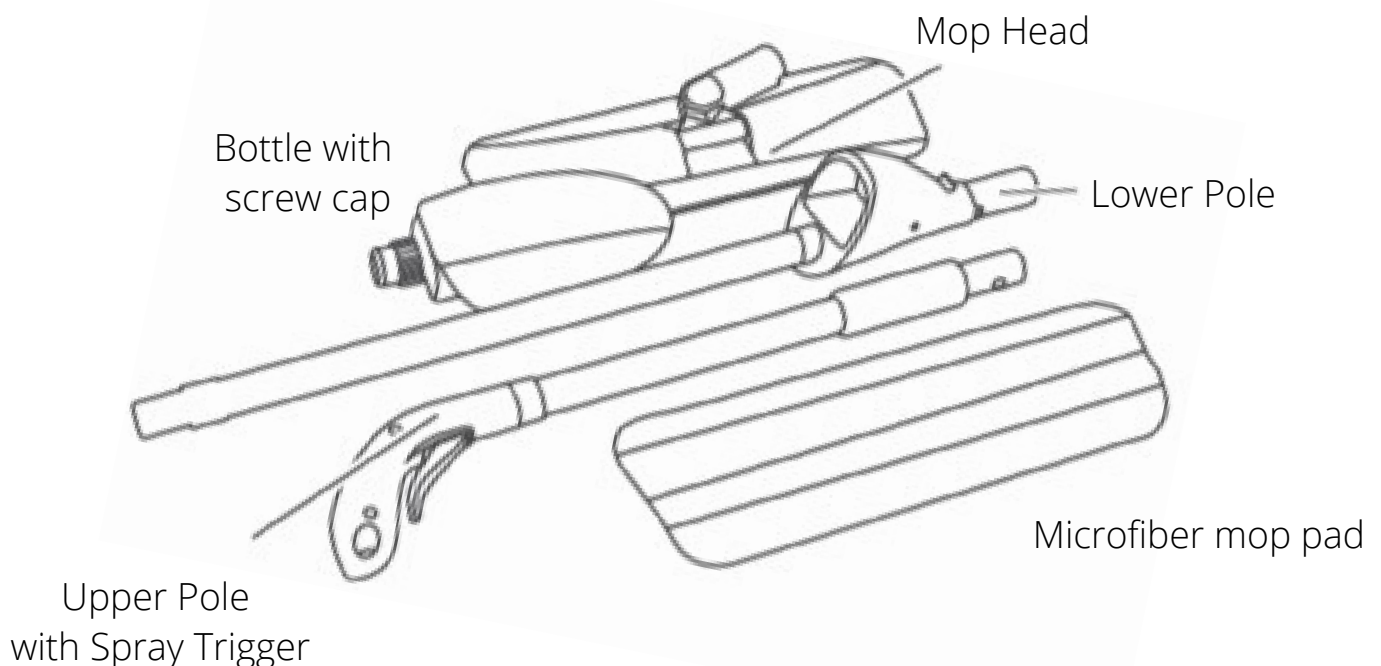




ASSEMBLY & USE INSTRUCTIONS

 1. Attach upper pole to lower pole and twist together until the white push button locks in place

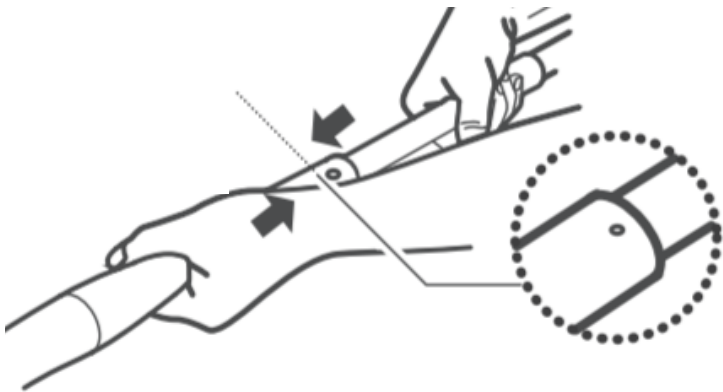

2. Attach lower pole to mop head by aligning the clasp and inserting until pole locks in place

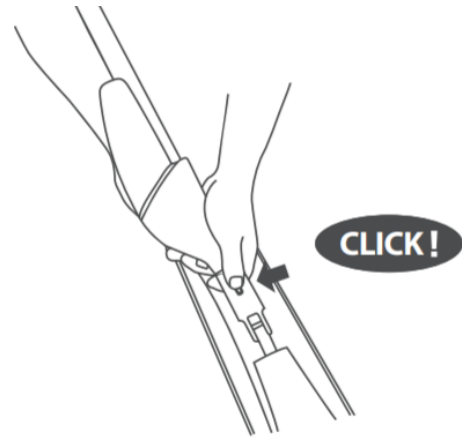 


3. Remove bottle and fill with your favorite cleaner, disinfectant or water. Always include at least 30% water in your cleaning solution



& TIP: Try adding essential oil for a natural clean scent

 4. Securely screw cap to bottle and firmly insert in to spray mop

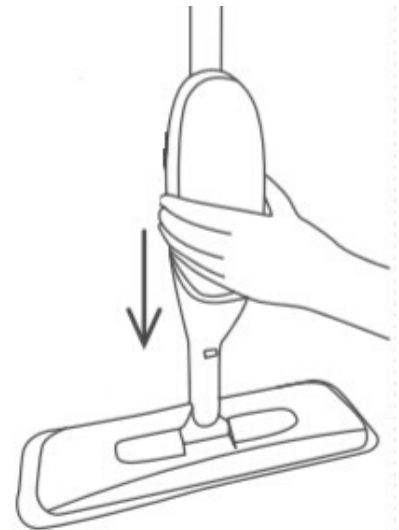

5. Attach microfiber mop pad to bottom of spray mop by aligning the velcro pads



6. Pull spray trigger to evenly spray your cleaning solution



& TIP: Purchase extra mop pads at www.trueandtidy.com



CARE & CLEANING

- To clean the outside of the spray mop, gently wipe down with a damp cloth
- To prolong the life of your spray mop, always use at least 30% water in your cleaning solution
- Distilled or filtered water is recommended
- Do not store the spray mop outdoors or in harsh conditions, store indoors in cool, dry place
- Microfiber mop pad is washable and reusable
- If buildup occurs and spraying is limited, add a descaling solution of 1/2 water and 1/2 distilled vinegar to the water bottle and let solution flow through the spray mop
- Descaling solution can also be used to clean the spray hole and exterior of the spray mop



ONE YEAR LIMITED WARRANTY

True & Tidy products are warranted for 1 year from the date of purchase if the appliance is defective in materials or workmanship. True & Tidy will repair or replace (at our option) your unit during this period. Any replacement product will carry the remaining warranty of the original product. True & Tidy is not liable for any incidental, misuse, negligence or failure to follow True & Tidy's Use & Care manual. To obtain a repair or replacement under the terms of this warranty, contact customer service for return authorization and instructions.

If you have any questions regarding this warranty, you may contact us through our website: www.trueandtidy.com. Customers located outside of the continental US will be responsible for all international shipping charges for your return or replacement.



CONNECT WITH US

For cleaning tips, FAQ, customer service and replacement parts

www.trueandtidy.com

1-888-293-3492



www.trueandtidy.com



facebook.com/TrueandTidyHome



Instagram.com/trueandtidyhome