

## 手持风扇 Handheld Fan Ultra1 -- 说明书 ---

使用前请仔细阅读本说明书, 严格按照说明书要求正确使用,

## → 电量百分比 - 氛围灯 —— 无级拨轮 - 灯光丑/关 ---- 开/关机按键 模式切换按键 聚风圆嘴 聚风扁嘴 底座

# 使用前注意事项

并妥善保存说明书以备后用。

## 亮度)。

开机状态下,上拨加大风速,下拨减小风速, 由1~100档之间调整; 氛围灯在开启状态下,

短按: 开机状态下,切换灯光模式, 常亮模式、 呼吸亮暗模式、SOS模式、关闭氛围灯: 长按: 任意灯光模式下关闭灯光; 无级拨轮 关机状态: 短按开启SOS模式。

## 位为10。

组装后再通电使用。

- 2. 给产品充电前请检查所使用电源电压是否和产品标签一致。
- 时请至原购买的销售商或制造厂指定的服务站询问。

## 使用方法

### A. 开关机/风速切换/灯光切换

## 开/关机按键

长按: 开/关机循环切换 (开机后默认开启最低风速, 如持续长按 超过3s未松开,则判为误触,风扇自动关机) 快速双击:显示当前电量百分比(5s后熄灭或跳转其他状态并降低

## 无级拨轮

随风扇档位大小变化明暗。 灯光开/关、模式切换按键

支架云台

为更安全使用产品,风扇在充电状态下使用时,风速调节最大档

## B. 配件使用 风扇配有三个配件以满足不同场景下使用。

## 1. 请检查产品、电源线是否有损伤,确认完好并按说明书的指导

3. 请勿私自分解、改造、修理以免造成触电、着火等事故、修理

Wind speed gea

Percentage of Power

- 4. 请勿堵住进出风口。
- 5. 由于进风口吸力较大,使用时请远离头发、织物等。

当前电量百分比 - 电量指示灯亭

C. 显示屏状态说明



## 开机 显示当前电量, 5s后降低亮度并跳转显示风速 显示当前风速档位,5s后降低亮度,充电时则跳回充 调节风速 电显示状态。 关机状态: 双击按键显示当前电量, 5s后熄灭。 开机状态: 开机显示当前电量 (5s后跳转显示当前 显示风速时双击显示当前电量(5s后跳 转至显示当前风速档位) 缺电无法启动 按下按键,电量显示0%,电量图标闪烁三次后显示屏熄灭。 低电量提醒 电量≤10%时,电量图标持续闪烁, 充电 电量个位数持续闪烁。 充满电 电量100%常亮,断开电源输入后熄灭。

## D. 输入安全保护

关机状态: 连续充电12h后自动断开输入: 开机状态: 连续充电10h后自动关机, 同时充电会继续2h后自动断开

输入; 如要重新充电,需拔出输入端口重新插回。

## E. 产品清洁


## 1. 对产品进行清洁前,请确保电源已被切断。

- 2. 产品面罩无法拆除,清洁时可用干净的抹布和毛刷擦拭扇罩表面及 进风口栅格。
- 3. 禁止用水或其他液体清洗电器部分(如电机、电源开关等)。
- 4. 禁止用湿润的手或抹布触碰电源及电器部件。

## 取出电池

在废弃产品前,必须将电池从产品中取出;取出电池前,产品必 须关闭电源: 电池应依据销售地法规安全地处置。 1. 用工具撬开手柄底部螺丝盖, 拧出内部螺丝(图一)

- 2. 取下手柄 (图二)
- 3. 拔出电池插线端子, 取出电池, 将其依照销售地法规安全地处 置(图三)。

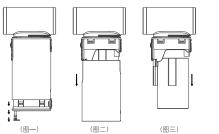

## 安全注意事项

- 为了保证使用安全,避免对您和他人造成伤害和财产损失,请遵 守以下安全注意事项: 不遵守安全警告而错误使用可能导致事故 发生。
- 01. 本产品非儿童玩具,请确保婴幼儿不将此产品作为玩具玩耍; 14岁以下儿童,请在监护人看护下使用。
- 02. 本产品不预期提供生理、感知、心智能力、经验或知识不足之 使用者(包含孩童)使用,除非在对其负有安全责任的人员监 护或知道下安全使用。
- 03. 请勿直接对着人体长时间吹拂,尤其是老人与小孩,以免造成 身体不适。 04. 使用时,请勿放入手指、尖锐物及金属物等,会造成产品故障
- 及触电、受伤的危险。 05. 使用时,禁止用湿手、湿毛巾等进行插拔电源,以免触电。
- 06. 本产品不防水,请勿用水直接冲洗产品或在浴室、湿气重、有
- 储水的地方来使用:表面有水时请及时擦干晾干后再尝试开机 使用:完全泡水及内部进水后禁止再次使用。 07. 请勿盖住出风口及入风口,如披挂衣物、毛巾、布匹等物品,
- 以免诰成产品故障. 08.禁止在高温(高于60℃)环境及密闭空间使用和存储,如温
- 室、建筑工地、火炉、暴晒的车室等环境,会造成塑胶变形、 火焰随风飘散造成火灾、电池爆炸等故障及事故。 09. 请勿挤压、拆解电池或将电池长期置于高温环境(60℃及以
- 上) 否则可能会有漏液或爆炸危险。 10. 如果消费者使用电源适配器充电,其电源适配器输入额定电
- 压、电流应在5.0V-2.0A / 9.0V-2.0A / 12.0V-1.5A范围内, 并获得国家强制性安规认证才能使用。
- 11. 本产品使用锂离子电池,无记忆功能,过充或过放都将影响产

## 品使用寿命, 请及时充电及充满电后断开电源, 长时间(大于 3个月)不使用请充满电。

- 12. 使用中若有冒烟、起火现象及其他故障,请立即关闭电源停止
- 使用,并送至经销商或生产厂处理,切勿自行拆装以免发生危险。 13. 使用中电源线请勿弯折、拉扯以免造成接触不良。

## 产品中有害物质的名称及含量

部件 名称						
					多溴联苯 (PBB)	
塑料件	0	0	0	0	0	0
金属件	0	0	0	0	0	0
硅胶件	0	0	0	0	0	0
PCB	×	0	0	0	0	0
O : :	表示该和 26572规 表示该和	宇物质 定的限 宇害物质	量要求以	井所有均质 下。 该部件的某	材料中的含 :一均质材料	量均在GB/T 中的含量超

出GB/T 26572规定的限量要求。 此表中所有名称中含"X"的部件均符合中国RoHS达标管理目录限 用物质应用例外清单的豁免.

此表中所有名称中含"X"的部件均符合欧盟RoHS立法。 注:环保使用期限的参考标识取决于产品正常工作的温度和湿度

本标识内的数字表示产品在正常使用状态下的环保使用 期限为10年

## 三包凭证

- 2. 保修期为产品购买之目起一年内。

## 以下情况恕不提供免费维修

- 属于下列情况的设备故障或损坏,不在有限保修之列,本公司不
- 承担免费的保修义务; 1. 设备或部件已经超出了有效的保修期;
- 的设备故障或损坏:
- 4. 因意外因素或人为原因(包括但不限于操作失误、刮伤、搬
- 隨或损坏。

- 验属实,将免费提供维修和换新服务。

- 本公司产品实行保修年限之内的有限保修

- 3. 非由本公司授权机构或人员拆卸而造成的设备故障或损坏

- 1. 请妥善保管保修卡,以作维修时的凭证,
- 3. 保修期内,本产品在正常使用的情况下发生故障,经本公司查

- 2. 客户未按照说明书的要求,错误的安装、保管以及使用而造成
- 运、磕碰、输入不合适的电压电流等) 导致的设备故障或损
- 5. 因自然灾害等不可抗力(如地震、火灾等)原因造成的设备故

# 额定电压、电流: 5.0V=2.0A / 9.0V=2.0A / 12.0V=1.5A

- 产品名称 联系电话
- 用户姓名

产品保修卡

(本卡仅适用中国地区)

# \_\_\_\_\_\_

合格证 检测员 01 Pass

本说明书的内容及产品的规格技术说明如有变更,恕不另行通知

Product Weight: about 315g( Bare Metal )

品 牌: 几素

产品名称:手持风扇

电池容量: 9000mAh

电 芯: 锂离子电池

包装配件

手持风扇\*1

聚风圆嘴\*1

聚风扁嘴 \* 1

USB-C to USB-C充电线 \* 1

USB-A to USB-C充电线 \* 1

底座\*1

毛刷 \* 1

挂绳\*1

说明书 \* 1

产品重量:约315g(裸机)

产品尺寸: 75(L)×38(W)×134(H)mm

执行标准: GB4706.1-2005 GB4706.27-2008

充电时间: 2-3h(18W快充输入) / 5-6h(5.0V=2.0A输入)

低至70档,基于此条件测试)

工作时间: 1-6h (为更安全使用, 71-100档使用10分钟后会自动降

产品型号: Handheld Fan Ultra1

## 地址:深圳市龙岗区园山街道荷坳社区长江埔二路8号A栋301 网址: www. jisulife.com 服务电话: 400-011-8812

制造商:深圳市几素科技有限公司

## 全球USB小风扇专家与领导者\* The World's No.1 Portable Fan Brand\*

球范围内全渠道的出厂销售额统计;不包含以品牌授权模式经营的品牌;USB小风扇是指通过USB接口提 供电源的风扇; USB小风扇专家是指该品牌USB小风扇销售额全球排名位列前10旦占比超过品牌所有产品

"Data source: Euromonitor International Shanghai Co, Ltd.; measured in terms of global sales revenue of portable fans in 2021 of the brands; brands that authorize others to use their

trademarks for sales, marketing and distribution of the products are excluded; portable fan i one brand's sales of partable fan rank tan 10 in the world, and the proportion of sales from portable fans exceeds 50% of the brand's overall sales revenue; research conducted between

Toggle Wheel Round Wind Nozzle Square Wind Nozzle Base \*注释、第2021年全球倒售额计 数据李泽干阶级信息签划 (上面) 右侧公司、第条士品牌干2021年间全

## Please check the product and power cord for any damage and

- make sure they are in good condition and assemble them according to the instructions before powering them on. 2. Before charging the product, please check whether the voltage
- of the power supply used is consistent with the product label. 3. Please do not disassemble, modify or repair the product to

avoid electric shock and fire accidents, and ask the service. station designated by the original seller or manufacturer for Do not block the air inlet and outlet.

5. Due to the large suction power of the air inlet, please keep

away from hair, fabrics, etc. when using.

## A. Switch Machine/wind Speed Switch/light Switch

Long press: on/off cycle switching (the minimum wind speed is turned on by default after booting, if the long press is continuously for more than 3s and is not released, it will be judged as a false touch and the fan will automatically shut down); Quick double-click: display the current battery percentage (turn off or jump to other states and reduce brightness after 5s).

## Non-polar toggle wheel In the boot state, the wind speed is increased

by dialing up, and the wind speed is reduced / by dialing down, which is adjusted between Lower Dial 1~100 gears; When the ambient light is on, the brightness and darkness change with the size of the fan gear.

## Light on/off, mode switch button Short press: switch the light mode, continuous light mode,

breathing light and dark mode, SOS mode, turn off the ambient light when it is turned on: Long press: turn off the light in any light mode; Shutdown status: Short press to turn on SOS mode.

B. Accessory Use

For safer use of the product, the maximum gear for fan speed adjustment is 10 when used in the charging state.

# The fan is equipped with three accessories to meet different

## C. Status Description of the Display Screen



Display the current battery level, after 5s reduce

# Non-Polar Toggle Wheel

Power On the brightness and jump to display the wind Display the current wind speed, reduce the brightness after 5s, and jump back to the charging display when charging.

Power On: Power on display the current power Power Display (after 5s jump to display the current wind speed gear); Double-click to display the current power (after 5s jump to display the current wind speed

Power Off: Double click the button to display the

current power, and then turn it off after 5s.

	Power Shortage Can Not Start	Press the button, the power display 0%, power icon blinks three times after the display goes of.			
	Low Battery Reminder	When the power level is ≤10%, the power icon will keep flashing.			
	Charging	The single-digit power number keeps flashing.			
	Fully Charged	100% of the power is always on, and goes off after disconnecting the power input.			

## D. Input Security

Power off state: automatically disconnect the input after 12 hours of continuous charging: Power-on status: It will automatically shut down after 10 hours of

continuous charging, and the input will be automatically disconnected after 2 hours of continuous charging; if you want to recharge, you need to pull out the input port and plug it back in

## E. Product Cleaning

- 1. Before cleaning the product, please make sure the power is disconnected 2. The product mask cannot be removed, and the surface of the
- fan cover and the air inlet grid can be wiped with a clean cloth and brush during deaning. 3. Do not use water or other liquids to clean the electrical parts (such as the motor, power switch, etc.).

## 4. Prohibit touching the power supply and electrical parts with wet hands or rags.

Take Out the Battery

(Figure 1)


Before disposing of the product, the battery must be removed from the product; Before removing the battery, the product must be powered off; The battery should be disposed of safely according to the regulations of the place of sale.

- 1. Use a tool to pry open the screw cover at the bottom of the handle and unscrew out the inner screw (Figure 1); 2. Remove the handle (Figure 2):
- place of sale (Figure 3).



(Figure 2)

 3. Unplug the battery cord terminal, remove the battery, and dispose of it safely in accordance with the regulations of the



(Figure 3)

damage to you and others, please observe the following safety precautions: Incorrect use without observing the safety warnings may lead to accidents. 01. This product is not a child's toy, please ensure that infants and

To ensure the safety of use and to avoid injury and property

02. This product is not intended for use by users (including children) with inadequate physiology, perception, mental ability experience or knowledge unless used safely under the supervision or knowledge of a person responsible for their

children do not play with this product as a toy; Children under

14 years of age, please use it under the supervision of a

- 03. Please do not blow directly on the human body for a long time, especially the elderly and children, to avoid physical discomfort 04. When using, please do not put fingers, sharp objects and metal objects, etc., which will cause product failure and the
- risk of electric shock, or injury. 05. When using, prohibit the use of wet hands, wet towels and other plugging power to avoid electric shock.

07. Do not cover the air outlet and air inlet, such as hanging

clothes, towels, cloths and other items, so as not to cause

- 06. This product is not waterproof, please do not use water to directly rinse the product or in the bathroom, heavy moisture, water storage places to use: surface water, please dry in time to dry before trying to turn on the use; completely soaked and internal water into the prohibition of re-use.
- product failure 08. Prohibit the use and storage in high temperature (higher than 60 °C) environments and confined spaces, such as

greenhouses construction sites fireplaces exposed car rooms and other environments, which will cause plastic deformation, flame with the wind to cause fire, battery explosion and other failures and accidents. 09. Do not squeeze, disassemble the battery or place the battery

in a high-temperature environment (60°C and above) for a

- long time, otherwise there may be a risk of liquid leakage or 10. If consumers use the power adapter to charge, the power adapter input rated voltage and current should be within 5.0V= 2.0A / 9.0V= 2.0A / 12.0V= 1.5A, and the national
- mandatory safety certification before use. 11. This product uses lithium-ion battery, no memory function, overcharge or overdischarge will affect the service life of the product, please charge in time and disconnect the power after full charge, long time (more than 3 months) do not use please fully charge.
- immediately turn off the power to stop using, and send it to the dealer or manufacturer to deal with, do not disassemble themselves to avoid danger. 13. Do not bend or pull the power cord in use to avoid poor

12. If there is smoke, fire and other failures in use, please

## **Product Parameters** Brand: JisuLife

contact.

Product Model: Handheld Fan Ultra1 Product Name: Handheld Fan Ultra1 Rated Voltage: Current: 5.0V=2.0A / 9.0V=2.0A / 12.0V=1.5A Battery Capacity: 9000mAh

Battery cell: lithium-ion battery

Charging Time: 2-3h(18W fast charging input) / 5-6h(5.0V= 2.0A input) Operating Time: 1-6h (For safer use, the 71-100 gear will be automatically reduced to 70 gear after 10 minutes of use, based on this condition test) Product Size: 75(L)×38(W)×134(H)mm

## Packing Accessories

Round Wind Nozzle \* 1 Square Wind Nozzle \* 1 USB-C to USB-C Cable \* 1 USB-A to USB-C Cable \* 1 Brush \* 1 Rope \* 1 Manual \* 1

Handheld Fan Ultra1 \* 1



The contents in this user manual and the technical specification of the product will be changed without prior notice.

Manufacturer: Shenzhen Jisu Technology Co., Ltd Address: 301, Building A, No.8, Changjiangpu 2 Road, He'ao Community, Yuanshan Street, Longgang District, Shenzhen Tel: 400-011-8812 Web: www.iisulife.com

# Explanatory note: in terms of global sales revenue in 2021.