

 
FA19/FA19B

桌面风扇

— 说明书 —

使用前请仔细阅读本说明书  
严格按照说明书要求正确使用，并妥善保存说明书以备后用

外观说明

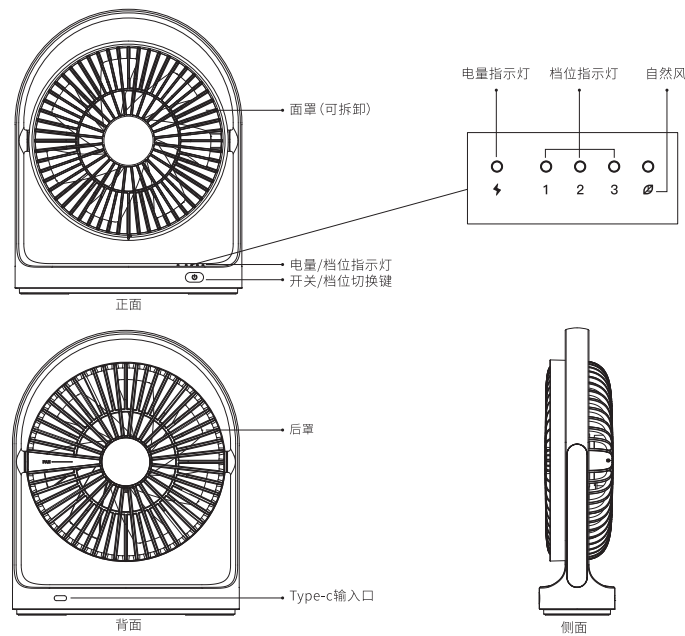

产品特点

- 1. 多档位风力输出, 手动调节使用角度。 2. 风质柔和, 舒适陪伴。 3. 内置电池, 超强续航。

 
使用方法

A. 开关/模式切换

风力模式切换:  
短按开关键开机(默认一档), 短按开关切换一档/二档/三档/自然风/关机模式; 在任意档位长按(2s)则直接关机。



\*自然风档位说明: 风扇风速在慢档和2档之间均匀缓慢的呈波浪线变化。

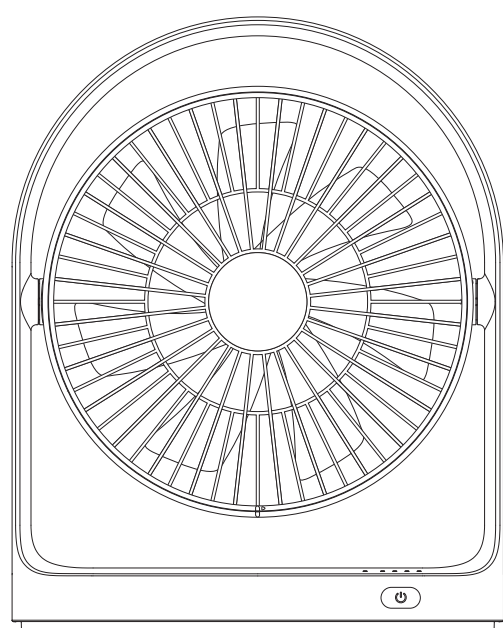


FA19/FA19B

Desk Fan

— User manual —

Please read this manual carefully before use. Be sure to use it in strict accordance with the requirements of the manual, and keep the manual properly for future use

 Appearance Description

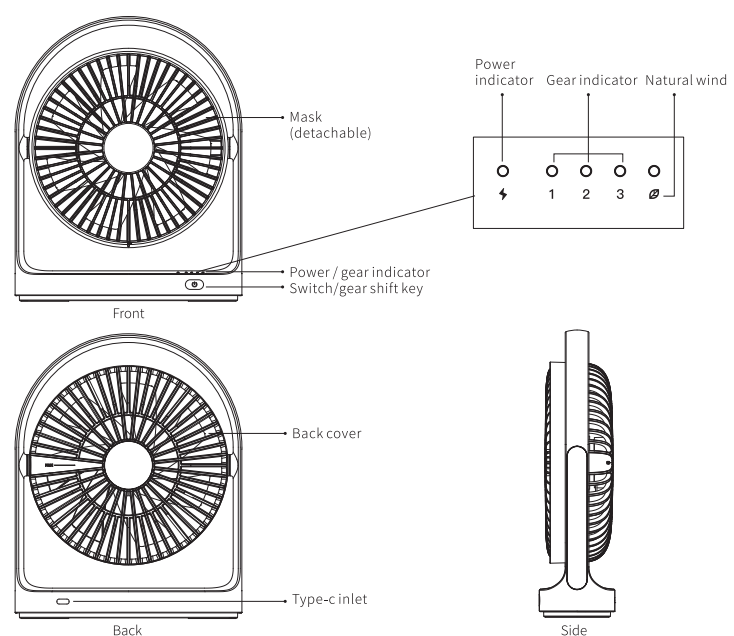


Product Features

- 1. Multi-position wind output, manual adjustment of the use angle. 2. Natural wind, soft and comfortable. 3. Built-in battery, super battery life.

How To Use It

A. ON-OFF/mode switching

 Switching among airflow modes:  
Short press the power button to turn on (default first gear), short press the switch to switch the first gear/second gear/third gear/natural wind/off mode; long press (2s) in any gear to directly shut down.

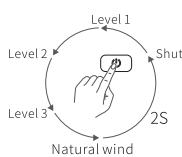


档位指示灯功能说明

○ ○ ○ ○ ○	风扇未开启
● ● ○ ○ ○	一档风力
● ● ● ○ ○	二档风力
● ● ● ● ○	三档风力
● ● ● ● ●	自然风


B. 角度调节

 上下翻轉:  
风扇可上下翻轉330°, 需要手动调整。

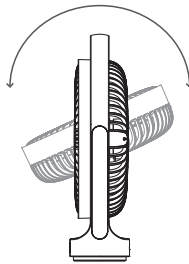

C. 如何清洁

 拆除面罩  
双手按住面罩边缘, 逆时针旋转直到听到“咔”的一声, 卡扣完全解除后, 双手抓住面罩边缘横条, 垂直向上取出即可。

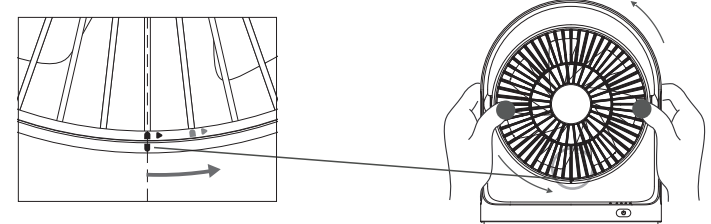

清洁保养

- 1. 对产品进行清洁前, 请确保电源已被切断。
- 2. 面罩用清水清洗, 扇叶、后罩可用干净的抹布擦拭, 面罩、后罩及扇叶清洗完毕后请静置至完全干燥方可安装使用。
- 3. 禁止用水或其他液体清洗电器部件(如电机、电源开关等)。
- 4. 禁止用湿润的手或抹布触碰电源及电器部件。


\* Natural wind shows that the wind speed of the fan changes evenly and slowly in a wavy line between the extremely slow and the second gear.

Functional instructions for the level indicator

○ ○ ○ ○ ○	The fan is off
● ● ○ ○ ○	Level 1 airflow
● ● ● ○ ○	Level 2 airflow
● ● ● ● ○	Level 3 airflow
● ● ● ● ●	Natural wind

B. Angle adjustment

 
Flip up and down:  
The fan can be turned up and down by 330°, which requires manual adjustment.

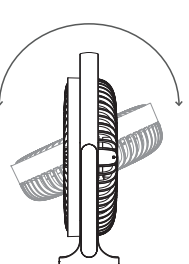

C. How to clean It


Remove the mask

 Hold the frame of the mask with both hands to turn it counter clock wise till you hear a "click". After releasing the buckle completely, grasp the edge of the mask with both hands and remove it vertically.

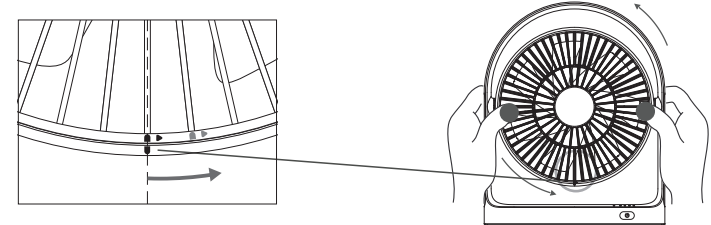


Cleaning and Maintenance

 - 1. Before cleaning the fan, please make sure that the power is off.
- 2. The face mask could be cleaned with clean water, while the fan blades and the back cover should be wiped

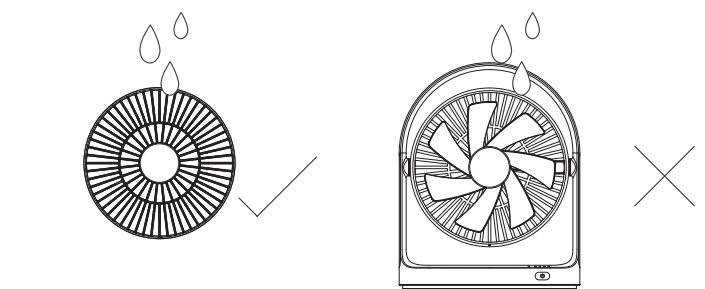

安装面罩

 抓住面罩边缘横条, 垂直向下放入后罩(如图一两个点的位置), 双手按住面罩边缘, 顺时针旋转直到听到“咔”的一声(如图二两个点重合), 即完成操作。

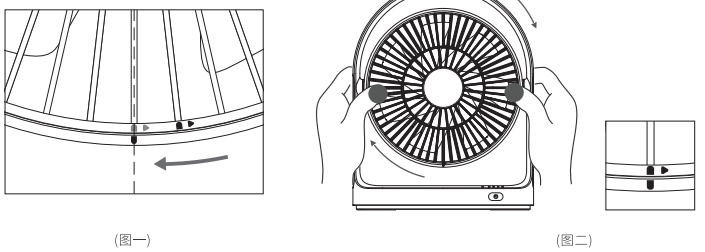

D. 充电说明


电量指示灯电量状态说明

指示灯状态	含义
电量白灯常亮	电量100%~70%
电量绿灯常亮	电量70%~40%
电量红灯常亮	电量40%~15%
电量红灯快闪	电量<15%
电量红灯闪烁3s	电量不足, 无法工作
电量红灯闪烁	充电中
电量白灯常亮/30秒后熄灭	开机状态: 充满常亮/关机状态: 充满电30S后关闭
灯不亮	关机状态


with a clean cloth. After completion of cleaning, please leave them to dry completely before installation of them for use.

3. Do not use water or other liquids to clean electrical components (such as motor, power switch, etc.).

 4. Never touch the power supply and electrical components with a wet hand or cloth.

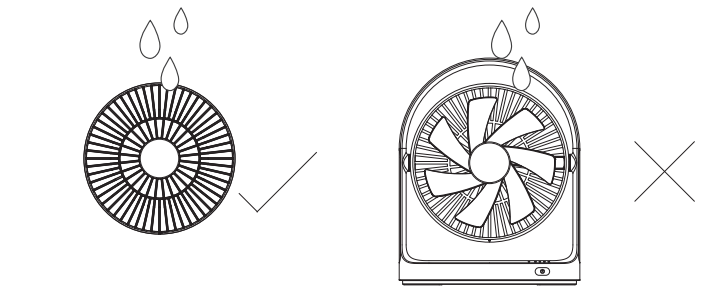

Installation of the Mask

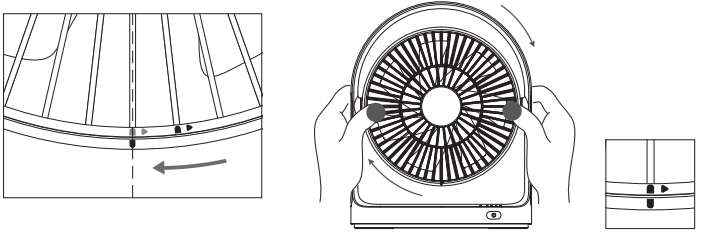 

Grasp the edge of the mask to put it vertically down into the back cover (as shown by the two points in Figure 1), and then hold the mask frame with both hands to rotate it clockwise till you hear a "click" (as shown by the two points in Figure 2) to complete the installation.


D. Instructions for charging

Description for the indicator's power status


Indicator status	Meaning
White light is always on	Powerer 100%~70%
Green light is always on	Power 70%~40%
Red light is always on	Power 40%~15%
Red light flashes quickly	Power <15%
The battery red light flashes 3s	Inufficient battery to work
Corresponding to the battery light flashes slowly	Charging the fan (charging to the corresponding power range)

E. 取出电池

 在废弃产品前必须关闭电源, 然后将电池从产品中取出。

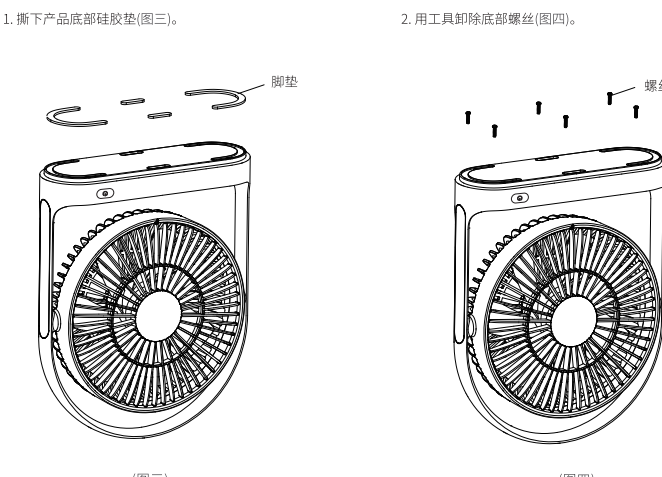

 3. 拆开底壳(图五)。

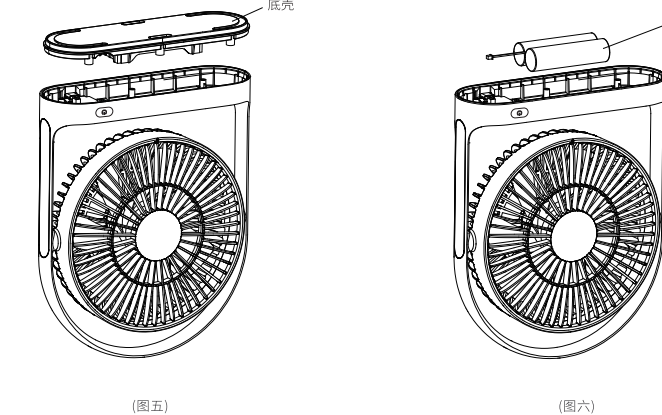


The battery white light is always on/turns off after 30 seconds light is not on


Power-on state: always on when fully charged/off state: turn off after fully charged for 30s Shutdown

E. Remove the battery

 The power must be turned off before the product is discarded, and then the battery must be removed from the product.

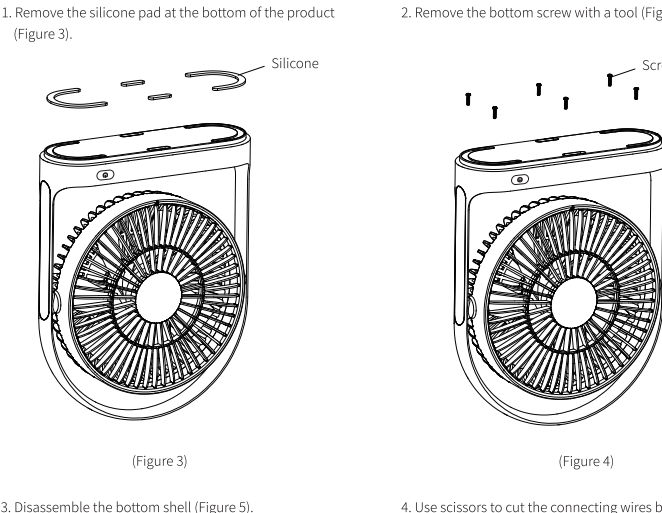

 3. Disassemble the bottom shell (Figure 5).

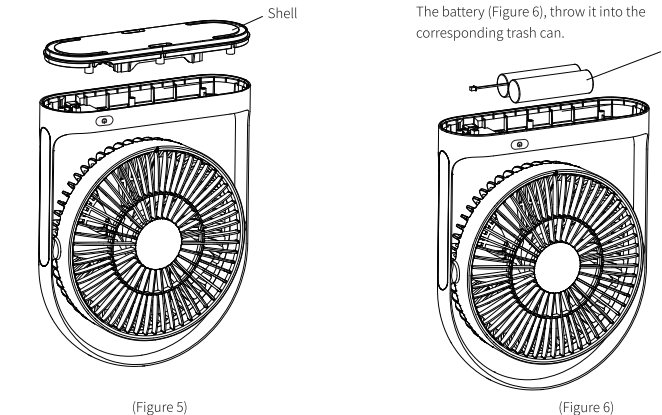

注意事项

- 1. 长时间短距离直接吹强风可能会导致不适, 尤其是婴儿和老人。
- 2. 本机使用的是锂离子电池, 无论记忆效应, 可随用随充, 不必等到电池耗尽才充电, 随时保持电池有电, 有利于延长电池寿命。
- 3. 风扇工作时的扇叶会高速旋转, 严禁将异物伸进风扇内, 否则可能会造成机器损坏。
- 4. 本产品儿童玩具, 14岁以下儿童, 请在监护人看护下使用。
- 5. 手动调节风扇过程中, 请勿水过用力。
- 6. 请勿挤压、长按电池或将电池长期置于高温环境(60°C及以上), 否则可能会有漏液或爆炸危险。
- 7. 如果用户电源适配器充电, 其电源适配器获得CCC国家强制性认证才能使用。
- 8. 请勿在充电时使用本产品。
- 9. 电池禁止拆解、撞击、挤压或投入火中, 若出现产品膨胀, 请勿继续使用, 请勿置于高温环境中。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
塑料件	○	○	○	○	○	○
金属件	○	○	○	○	○	○
硅胶件	○	○	○	○	○	○
PCB	×	○	○	○	○	○

本表格依据SJ/T11364-2014的规定编制  
 ○: 表示该有害物质在该部件所有材料中的含量均在GB/T 26572规定的限量要求以下。  
 ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。  
 此表中所有名称中含“X”的部件均符合中国RoHS达标管理目录豁免物质应用例外清单的豁免。  
 此表中所有名称中含“X”的部件均符合欧盟RoHS立法。  
 注: 环保使用期限的参考标识取决于产品正常工作时的温度和湿度等条件。  
 10: 本标识的数字表示产品在正常使用状态下的环保使用期限为10年

三包凭证

- 1. 请妥善保管保修卡, 以作维修时的凭证。
- 2. 保修期为产品购买之日起一年内。
- 3. 保修期内, 本产品在日常使用情况下发生故障, 经本公司查验属实, 将免费提供维修和换新服务。

以下情况恕不提供免费维修

本公司产品实行保修年限之内的有限保修。  
 属于下列情况的设备故障或损坏, 不在有限保修之列, 本公司不承担免费的保修义务;  
 1. 设备或部件已经超出了有效的保修期;  
 2. 用户未按说明书的要求, 错误的安装、保管以及使用而造成的设备故障或损坏;  
 3. 非由本公司授权机构或人员拆卸而造成的设备故障或损坏;  
 4. 因意外因素或人为原因(包括但不限于操作失误、刮伤、搬运、碰撞、输入不合适的电压电流等)导致的设备故障或损坏;  
 5. 因自然灾害等不可抗力(如地震、火灾等)原因造成的设备故障或损坏。

产品参数

品牌: 几素  
 产品名称: 桌面风扇  
 输入: 5.0V=2.0A MAX  
 风扇功率: 3.0W MAX  
 风扇风速: 3.2m/s MAX

电芯: 锂离子电池  
 执行标准: GB 4706.1-2005  
 GB 4706.21-2008

产品型号	FA19	FA19B
电池容量	4000mAh (14.8Wh/3.7V)	6000mAh (22.2Wh/3.7V)
充电时间	3-5h	4-6h
使用时间	4-15h (根据不同档位/使用场景而定)	6-19h (根据不同档位/使用场景而定)
产品重量	436g	445g
产品尺寸	182(L)×60(W)×228(H)mm	182(L)×60(W)×228(H)mm

包装配件

桌面风扇 \*1  
 Type-C 充电线 \*1  
 说明书 \*1

合格证  
 检测员 01 Pass

本说明书的内容及产品的规格技术说明如有变更, 恕不另行通知

产品保修卡

(本卡仅适用中国地区)

产品名称	联系电话
产品型号	购买地点
用户姓名	经销商名称
购买时间	

生产商: 深圳市几素科技有限公司  
 生产地址: 深圳市龙岗区园山街道荷坳社区长江埔二路8A栋301  
 办公地址: 深圳市龙岗区坂田街道永香路板维园C栋4楼  
 服务电话: 400-011-8812

Product Parameters

Brand : JSULIFE  
 Product name : desk fan  
 Input : 5.0V=2.0A MAX  
 Fan power : 3.0W MAX  
 Fan speed : 3.2m/s MAX  
 Battery cell : lithium-ion battery

Model	FA19	FA19B
Battery capacity	4000mAh (14.8Wh/3.7V)	6000mAh (22.2Wh/3.7V)
Charging time	3-5h	4-6h
Usage time	4-15h (depending on theseevice at different levels/usage scenarios)	6-19h
Product weight	436g	445g
Dimension	182(L)×60(W)×228(H)mm	182(L)×60(W)×228(H)mm

Attention

- 1. Directing the fan at people with a high level of airflow for a long time will cause discomfort, especially for infants and the elderly.
- 2. This product uses lithium-ion batteries and has no memory function. Overcharging or over-discharging will affect the service life of the product. Please charge in time and disconnect the power after fully charged.
- 3. When the fan is working, the fan blades will rotate at high speed. Therefore, it is strictly prohibited to extend foreign objects into the fan, otherwise the fan may be damaged.
- 4. As this product is not a toy for children, children below 14 years old should use it under the care of a guardian.
- 5. Do not use too much force when adjusting the fan manually.
- 6. Do not expose, disassemble the battery or leave it in a high temperature environment(60°C and above) for a long time, otherwise there may be a risk of leakage or explosion.
- 7. If the user uses the power adapter to charge, the power adapter should obtain CCC national compulsory certification before it can be used.
- 8. Do not use this product while charging.
- 9. Batteries must not be disassembled, hit, crushed or thrown into fire. Do not continue to use if severe swelling occurs. Do not place in high temperature environment.

Three-guarantee Certificate

- 1. Please keep the warranty card properly as a certificate for maintenance.
- 2. The warranty period is within one year from the date of purchase.
- 3. During the warranty period, if this product breaks down under normal use and is verified by our company, we will provide maintenance and replacement services free of charge.

The Following Conditions Will Not Be Free Maintenance

Our products are subject to limited warranty within the warranty period.  
 Equipment failure or damage under the following circumstances is not covered by the limited warranty, and the company will not undertake the free warranty obligation.  
 1. Equipment or components have exceeded the valid warranty period.  
 2. Equipment failure or damage caused by incorrect installation, storage and use by users who fail to comply with the requirements of the manual.  
 3. Equipment failure or damage not caused by disassembly by authorized institutions or personnel of the Company.  
 4. Equipment failure or damage caused by unexpected factors or man-made reasons (including but not limited to operation errors, scratches, handling, bumping, input of inappropriate voltage and current, etc.).  
 5. Equipment failure or damage caused by force majeure such as natural disasters (including earthquake, fire, etc.).

Packing Accessories

Desk fan \*1  
 Type-C cable \*1  
 User manual \*1

CERTIFICATION  
 QC 01 PASS