 




MULEPRODUCTS.COM

 
GARAGE FAN XL WITH REMOTE

Model #52020

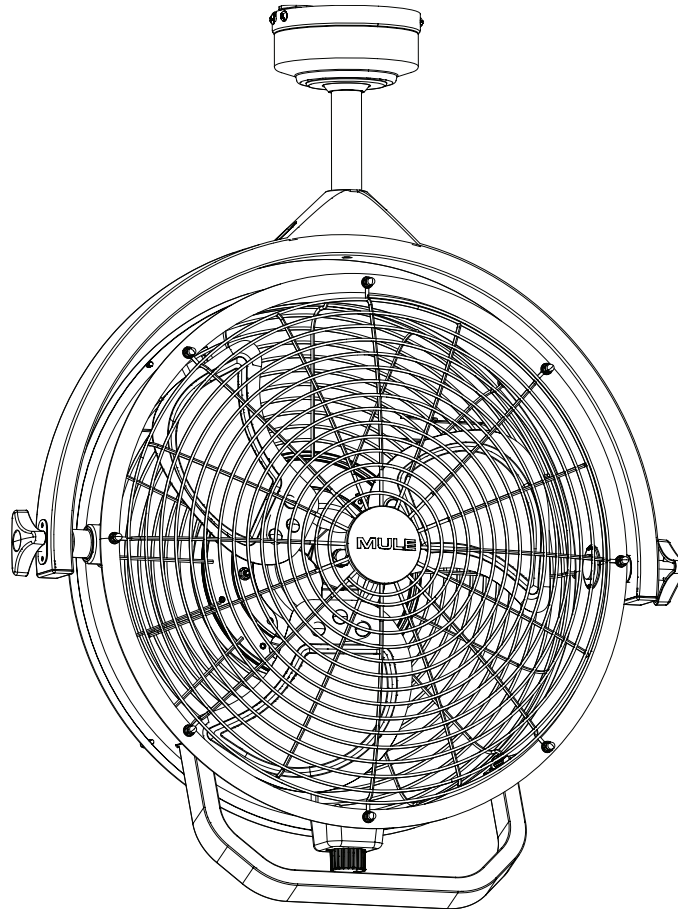

Thank you for purchasing this **MULE PRODUCT**. We know you will enjoy the easy-to-follow instructions. If you have any questions, problems, or missing parts, please email us at support@muleproducts.com or call customer service at 1-877-289-8692, 8 a.m. - 5 p.m. Central Time, Monday - Friday.


PACKAGE CONTENTS

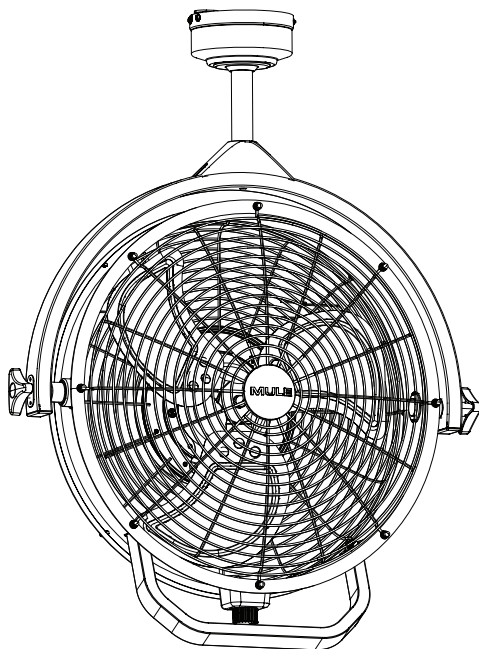


Fan Assembly



 
Receiver

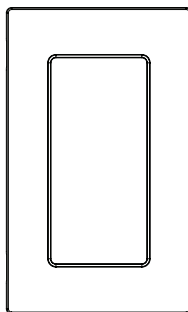

Front Cover

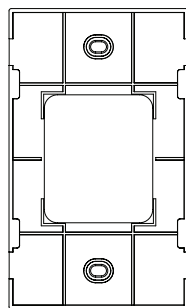 


Wall Bracket

 

Remote




 Fan includes 12-inch downrod for ceilings 9 feet or higher and a 6-inch downrod for ceilings 8 feet or lower.



Cord Clip (x6)

 HARDWARE CONTENTS

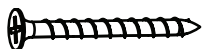

Bracket Screw
(x2)
+2 extra



Washer
(x2)
+2 extra



Lock Washer
(x2)
+2 extra

 


Mounting
Screw (x2)


TOOLS REQUIRED

Tools required for assembly: Phillips screwdriver, level, drill, 1/8" drill bit, stud finder and pencil.


ASSEMBLY INSTRUCTIONS

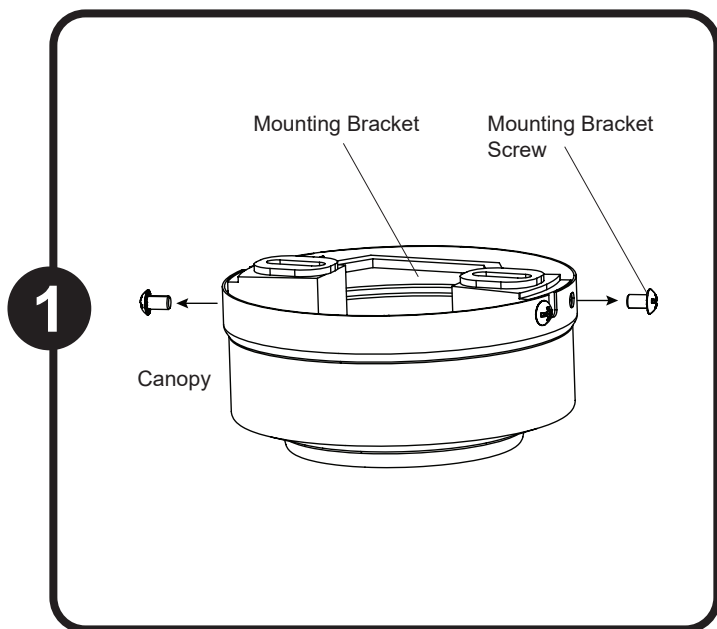

 
Loosen all four mounting bracket screws and completely remove the two screws from the round holes in the canopy. Save the screws for later. Remove the canopy from the mounting bracket.

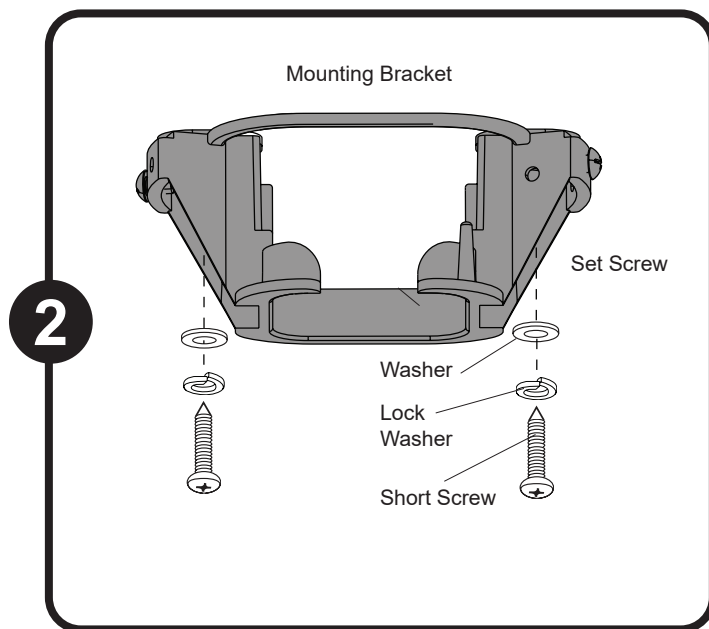

 Use two short screws along with washer and lock washer to secure the mounting bracket to ceiling joists. Then, loosen but do not remove two set screws on each side of the mounting bracket.

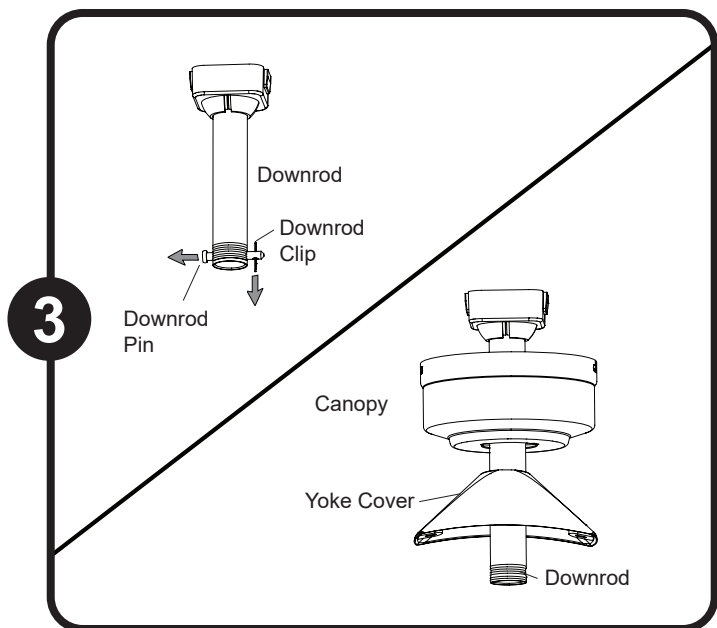


 Select one of the two downrods. If longer downrod is needed, see page 6. Then, remove the downrod clip and downrod pin from the downrod. Insert the downrod through the canopy and yoke cover.

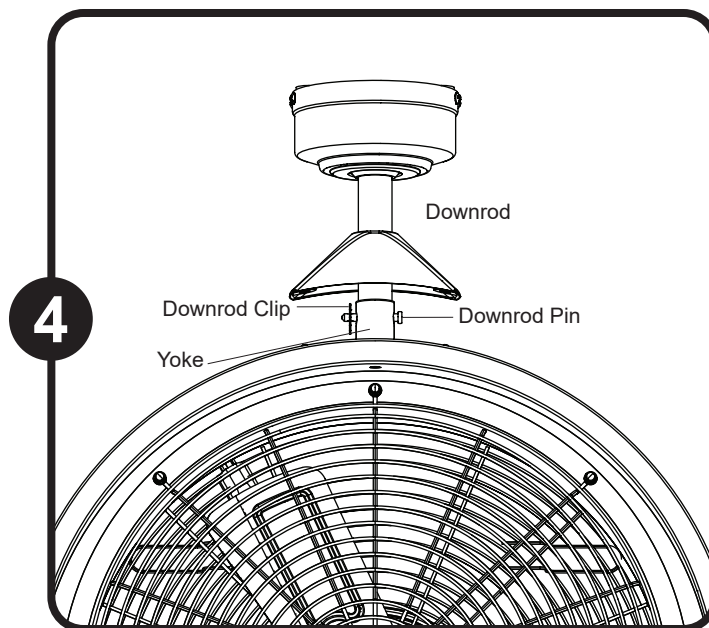


Slide the downrod into the yoke at the top of the fan and turn clockwise until the holes in the downrod align with the holes in the yoke. Then reinstall the downrod pin and downrod clip to secure.

 
ASSEMBLY INSTRUCTIONS

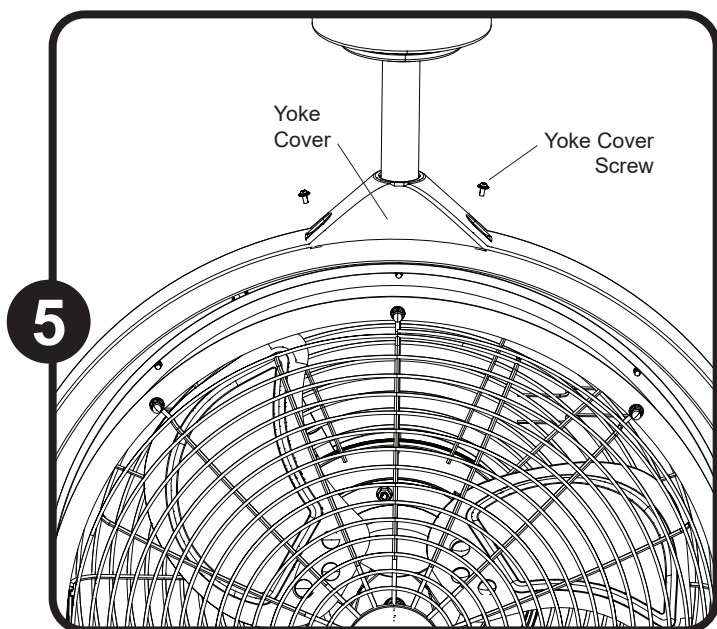

 
Remove the two yoke cover screws from the top of the fan. Use the two yoke cover screws to secure the yoke cover to the top of the fan assembly. Then, lower the yoke cover to rest on top of fan assembly.

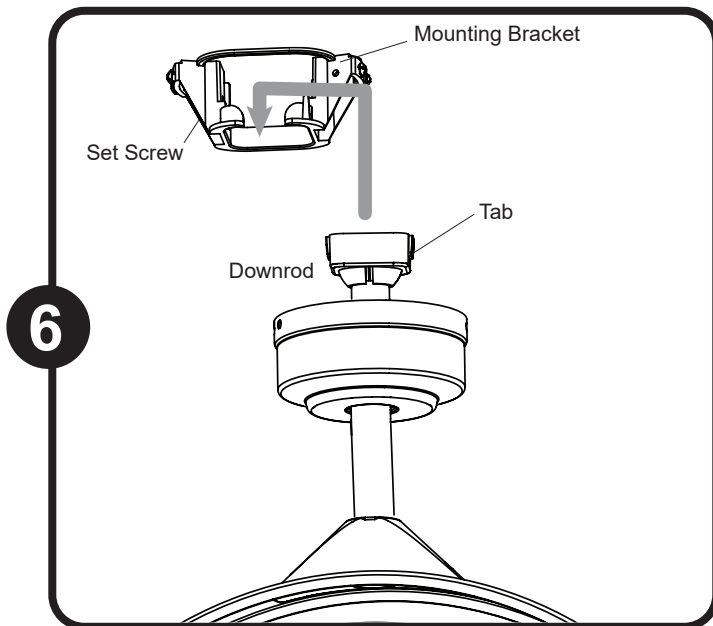

 Install the downrod into the opening of the mounting bracket. Tabs on downrod should face the sides of the mounting bracket to engage the slots inside the mounting bracket. Re-tighten the two set screws to secure.

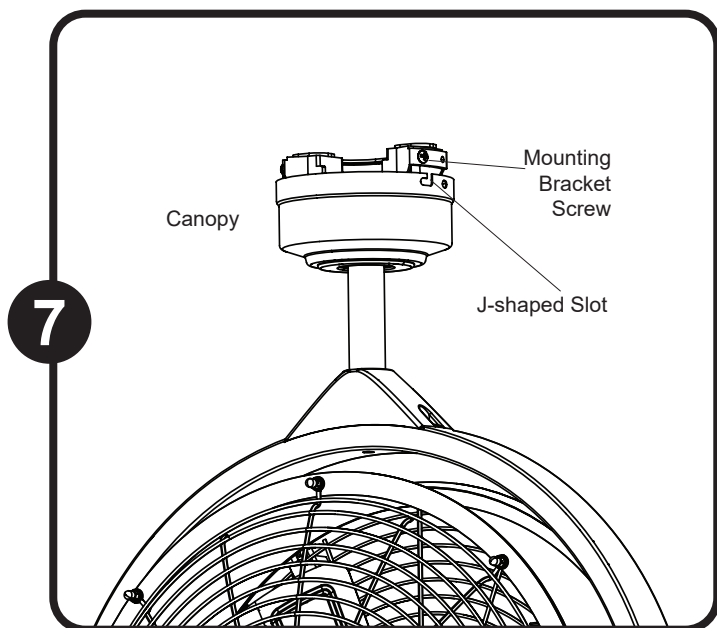

 
Raise the canopy, ensure the two mounting bracket screws are aligned with the J-shaped slots in the canopy. Then turn the canopy in a clockwise direction until the mounting bracket screws are completely engaged in the J-shaped slots.

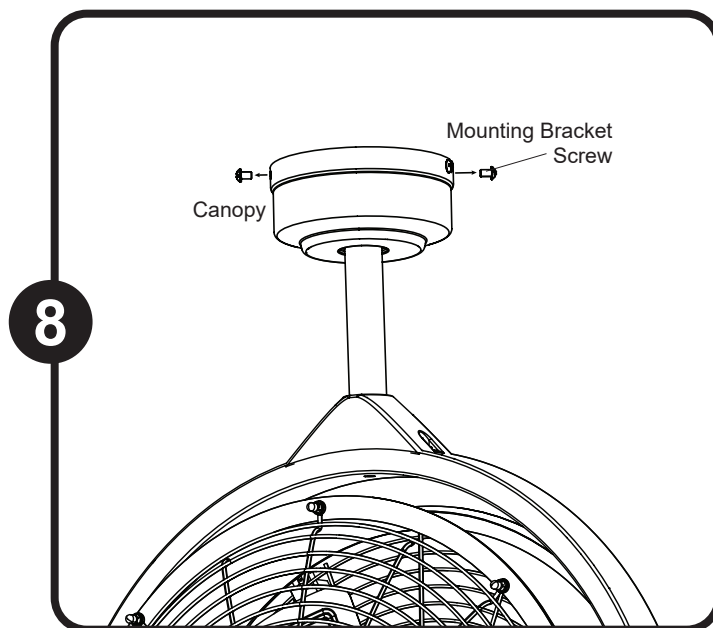

Install the two previously removed mounting bracket screws in the round holes. Securely tighten all mounting bracket screws.


ASSEMBLY INSTRUCTIONS

 9

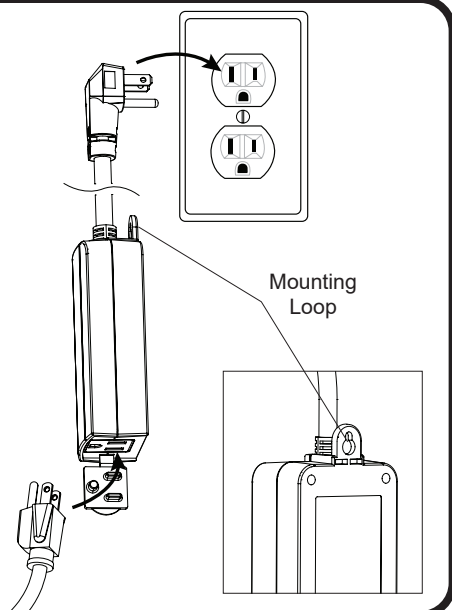


Plug the power cord from fan into the receiver and plug the receiver into a grounded 120 V outlet. **Note:** Some installations may require or benefit from the use of a screw (sold separately), to secure the receiver to ceiling or wall. Use the optional mounting loop for these applications.

 10

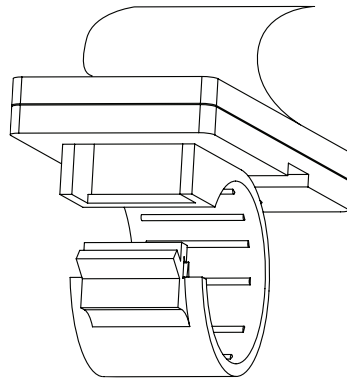


Use cord clips to secure the fan's power cord to ceiling in a path toward the power outlet. Peel the backing off of the double-sided tape preassembled to back side of each cord clip.

 11

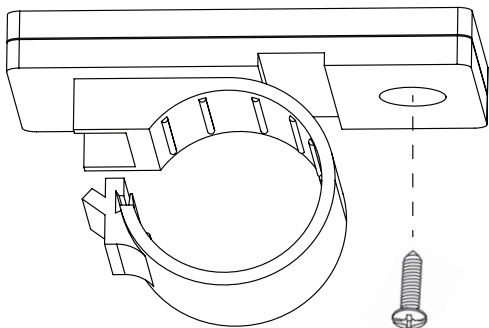

(Optional) Cord clips have a round hole to accommodate a wood screw (sold separately) as an option to the taping method.

 
12

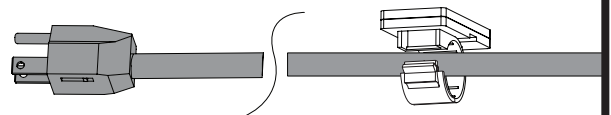

Secure each cord clip to the wall or ceiling. Then insert the cord into each clip and press the clip closed to secure the cord. **Note:** Leave adequate slack near the fan to allow fan to swivel and/or tilt.


ASSEMBLY INSTRUCTIONS

 13

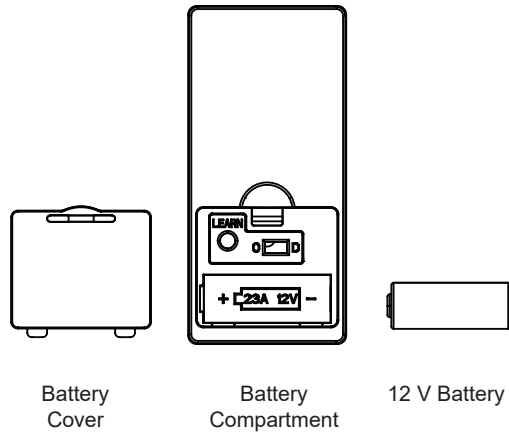

Use a flat-head screwdriver, if necessary, to remove the battery cover from the back of the remote found in remote pack. Insert the battery into the remote; ensure polarity of battery matches the polarity indicated in the battery compartment -- positive (+) to positive (+) and negative (-) to negative (-). Replace the back cover and press the fan on/off button on the remote to ensure the LED indicator illuminates and the remote turns on the fan.

 
14

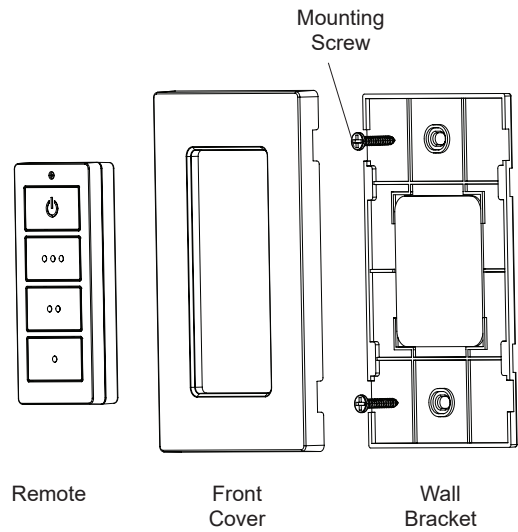

If desired, the wall bracket in remote pack can be installed to a wall using the provided mounting screws. Once the wall bracket is installed, snap the front cover onto it. The remote can be stored in the wall bracket for easy access.


REPLACE DOWNROD (OPTIONAL)

 A

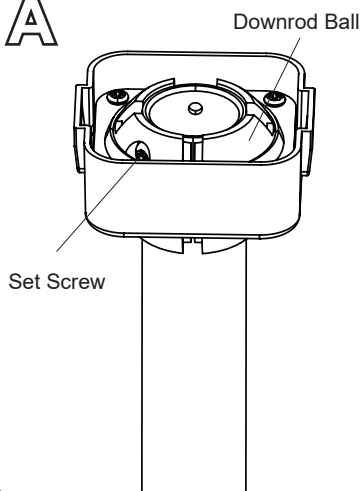


Tilt the downrod ball in the square bracket to access and remove the set screw with Phillips screwdriver.

 B

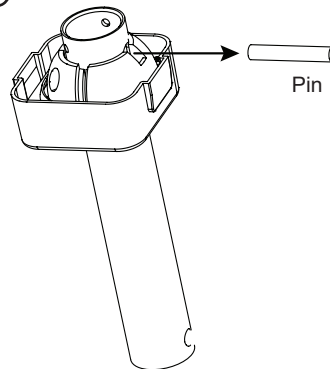


Lower the downrod ball and square bracket to access and remove the pin.

 C

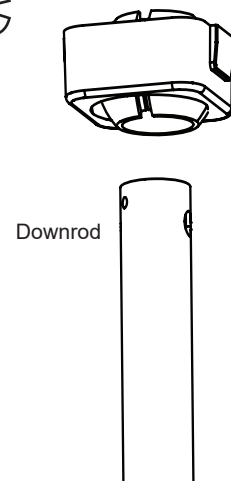

Remove the downrod and exchange with the extra downrod. Slide extra downrod into downrod ball. Replace the pin and set screw as shown in previous steps.

 
OPERATING INSTRUCTIONS

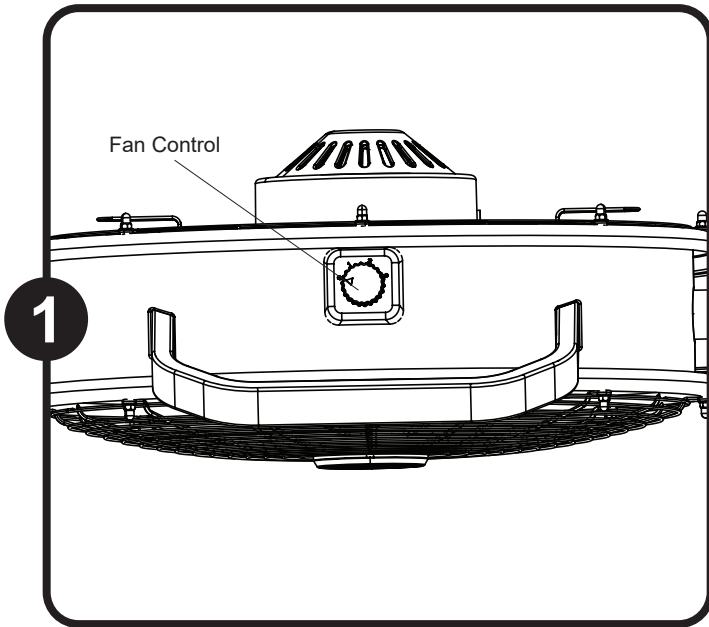


Fan Control is located on the bottom side of the fan. The fan has four settings:

- 0 - Off
- 1 - Low Speed
- 2 - Medium Speed
- 3 - High Speed

 
Important: When using remote, the fan speed must be set to High (3).

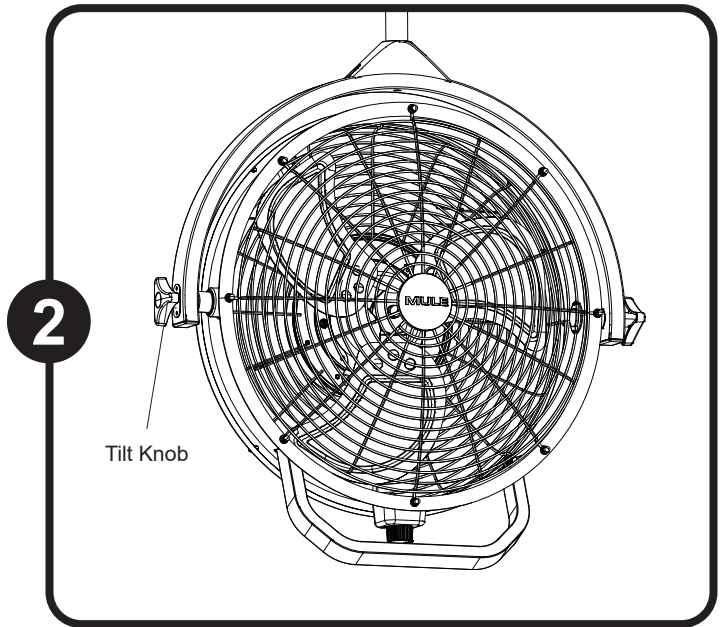

 Use tilt knobs on sides of fan to adjust airflow up or down. Loosen tilt knobs by turning counterclockwise, adjust fan, and re-tighten tilt knobs.

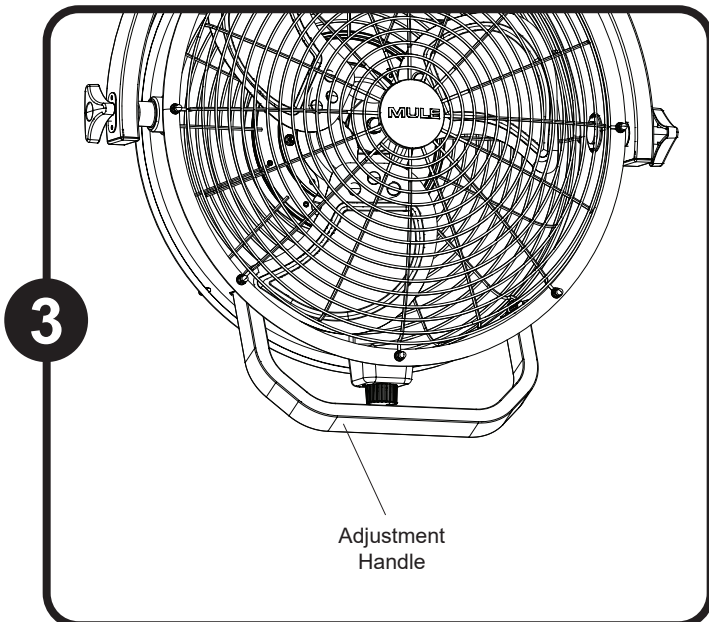


 Use adjustment handle located on bottom of fan to change the direction of airflow from left to right.

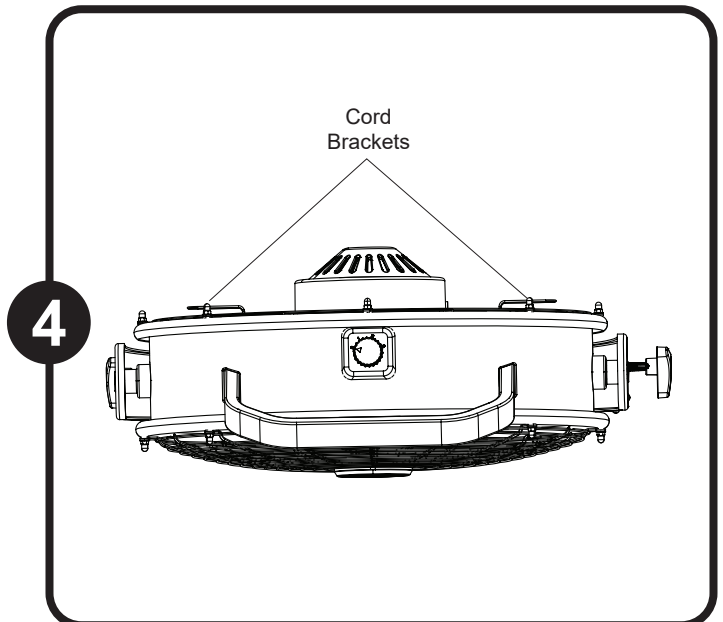

Cord Brackets are located on back of fan. When not in use, wrap power cord around the two cord brackets.

 OPERATING INSTRUCTIONS

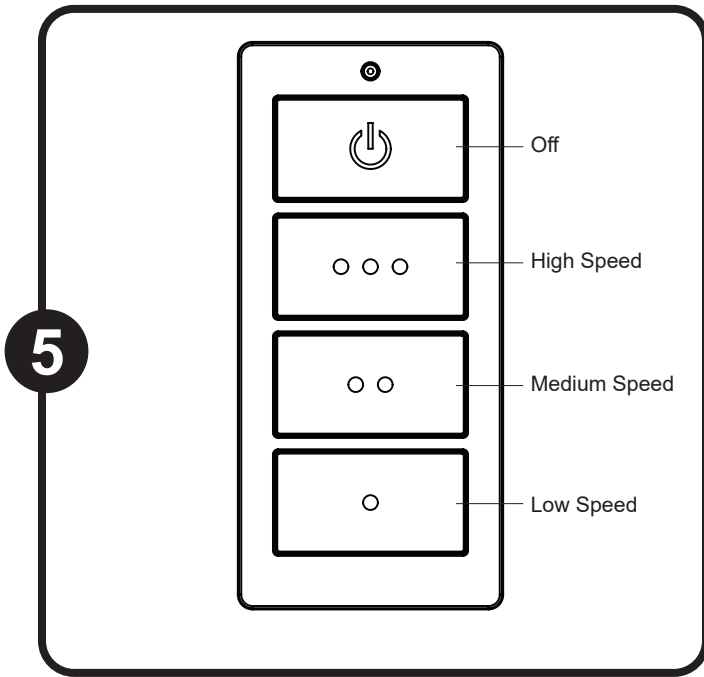


To operate the fan using the remote, press and release the following buttons:

- Turns the power to fan off.
- Turns on fan at high speed.
- Turns on fan at medium speed.
- Turns on fan at low speed.

MAINTENANCE

 Battery Replacement: Use A23, 12 V alkaline battery. **WARNING:** Keep batteries out of reach of children. May be fatal if swallowed. In the event that a battery is swallowed, immediately consult a doctor. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product. Do not dispose of batteries in fire, as they may explode or leak.

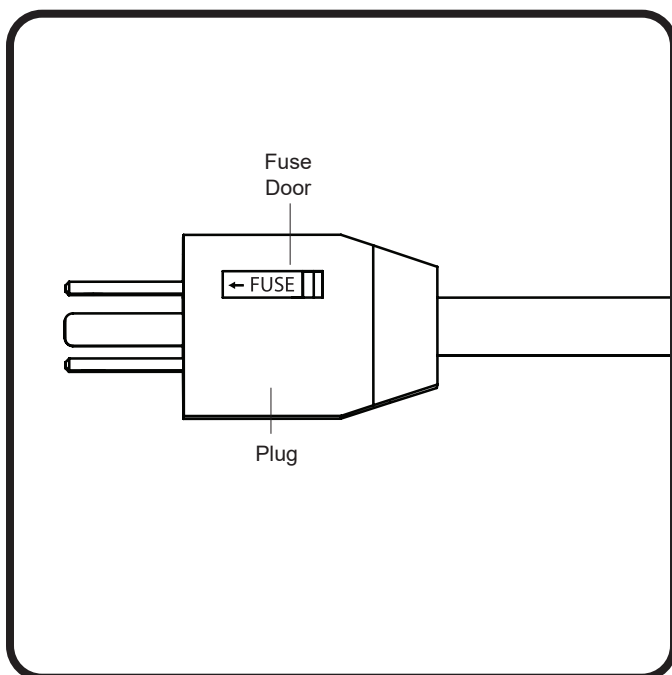

The plug is a safety feature, it contains a safety device (fuse), if your replaceable fuse (5 Amp, 125 Volt) blows, please follow below instructions to replace the fuse:

- a) Unplug your fan, grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Slide open the fuse cover at the side of the plug by using your thumb or a flat screwdriver.
- c) Remove the fuse carefully.
- d) Put in a new 5 Amp 125 Volt fuse and make sure it is secured in place.
- e) Slide back the fuse cover completely.
- f) Risk of fire. Do not replace attached plug. Contains a safety device (fuse) that should not be removed. Discard product if the attached plug is damaged.

TROUBLESHOOTING

- Fan does not work - A) Ensure the main power cord is plugged into a 120V receptacle.
B) Replace fuse in plug (see MAINTENANCE, page 5).
C) Ensure fan is set to High Speed (3) (Step 6, page 4).

SAFETY INFORMATION

CAUTION:

- Read and follow all instructions before operating fan.
- Do not use fan if any part is damaged or missing.
- This garage fan is rated for indoor and damp locations.
- Connect to properly grounded outlets only.
- Do not insert fingers or any other objects through the grill guard when fan is in operation.
- Disconnect the fan when moving from one location to another.
- Disconnect the fan when removing guards for cleaning.
- Do not use fan near windows. Rain and water may create an electrical hazard.
- Do not alter the fan's assembly.
- This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: 1) This device may cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help. Please note changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING:

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).

WARRANTY

The manufacturer warrants all of its utility fans against defects in materials and workmanship for three (3) years from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The manufacturer will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover utility fans becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.

CUSTOMER SERVICE

To obtain service, please contact Customer Service: 1-877-289-8692, 8 a.m. - 5 p.m. Central Time, Monday - Friday or email us at support@muleproducts.com.