 





Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

2-TIER STORAGE BASKET CFT-673

 Review all assembly and care information carefully before using this product. Save this manual for future reference.
Assemble components on a soft, clean surface to avoid damaging the finish.

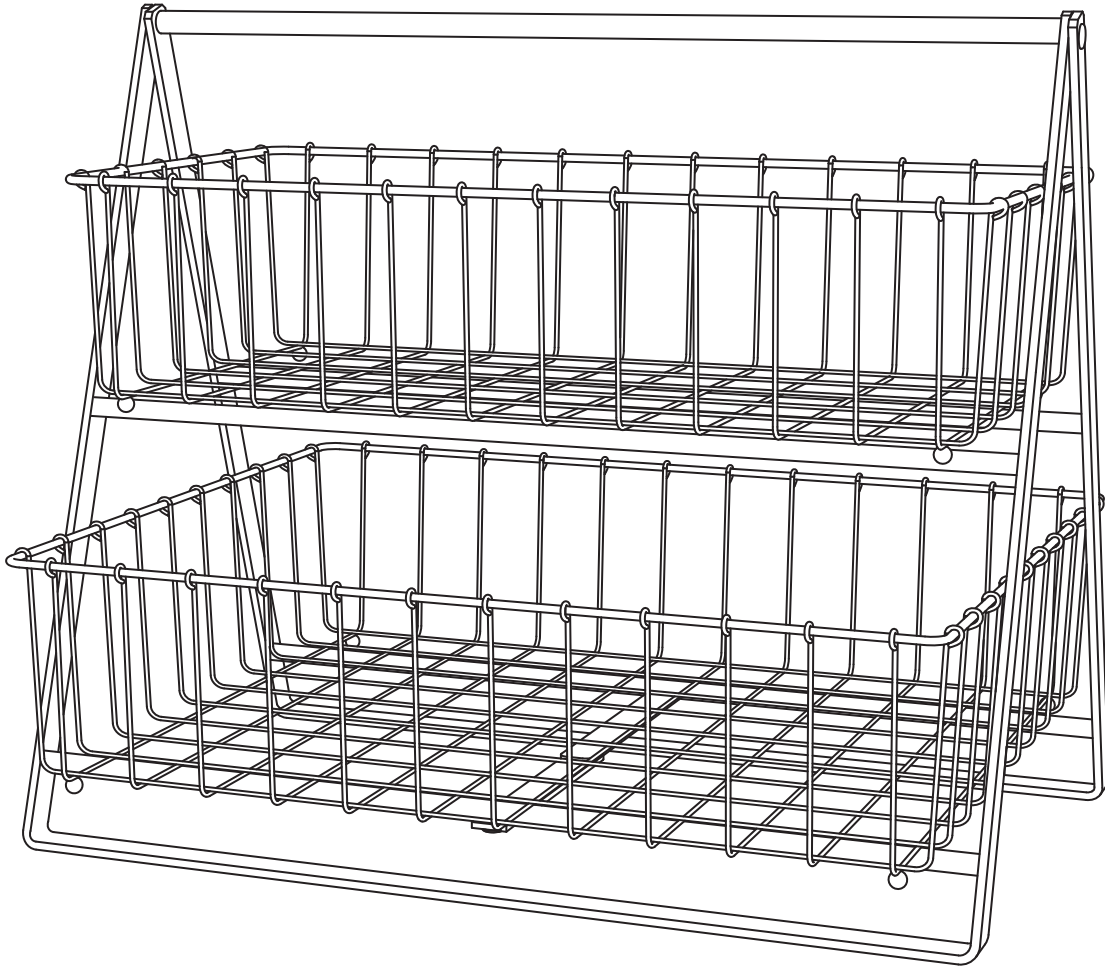

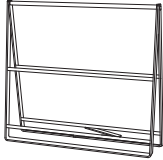
Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
Save the packing slip.

| No. | PARTS | | QTY. |
|-----|--|--------------|------|
| A |  | Stand | 1 |
| B |  | Large Basket | 1 |
| C |  | Small Basket | 1 |

ASSEMBLY

STEP 1

 
A: 1

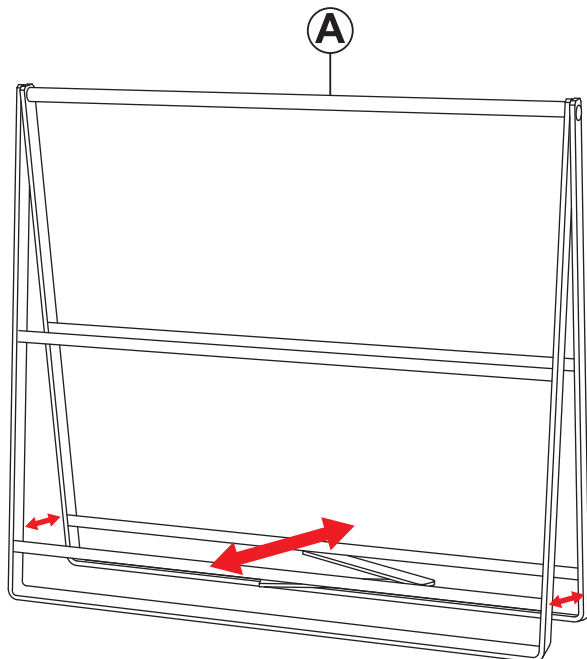

Pull the bottom of Stand (A) outward until it is fully extended.

STEP 2

 
B: 1

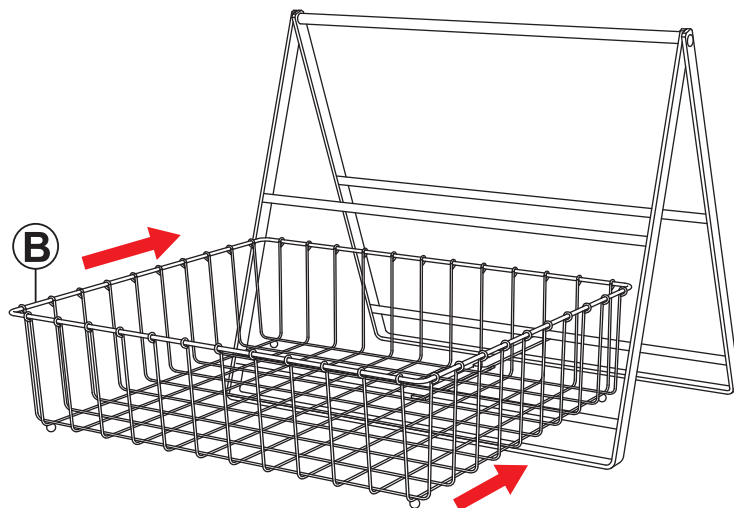

Place Large Basket (B) on the bottom of the stand.

STEP 3

 C: 1

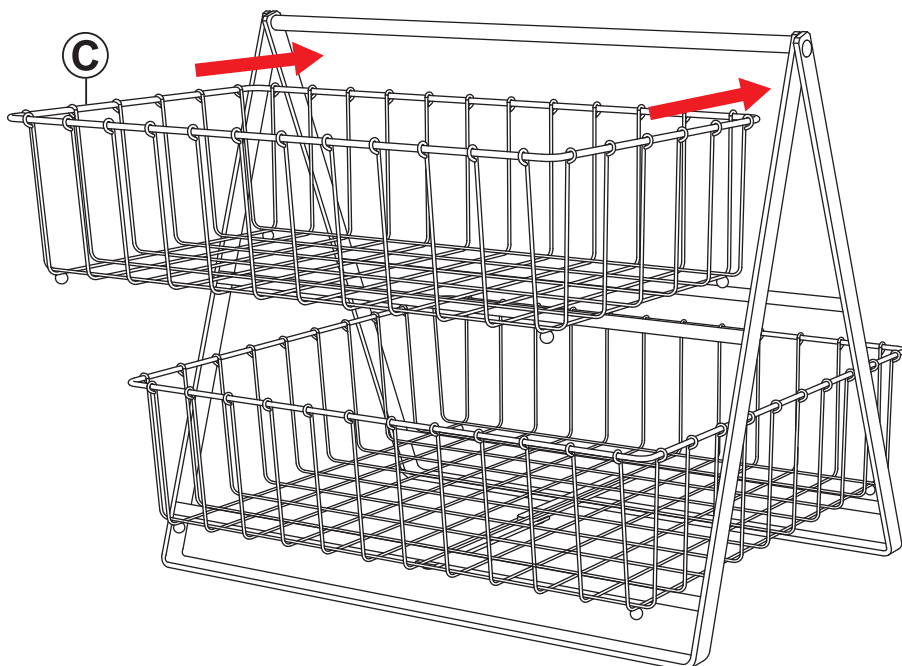

Place Small Basket (C) on the top of the stand, as shown.

Ensure both baskets are centered within the stand before placing items into the baskets.

Care & Maintenance

SAFE USE: For indoor use only. For residential use only. Only use on a flat, level surface.

Use caution if moving the basket; the baskets are not secured to the stand and could fall off of the stand.

SCRATCHES: The finish on this product is tough & durable but, even under normal use, some scratching is inevitable. Scratches can be repaired with rust-resistant paint (not included).

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, TOUCH-UP PAINT, OR CLEANING PRODUCTS.

Cleaning



HAND-WIPE ONLY



DO NOT USE BLEACH



NOT DISHWASHER SAFE

Do not submerge in water; use a soft, damp cloth to clean this unit. Use a soft, dry cloth or towel to remove excess moisture. Ensure the unit is completely dry before collapsing and storing it.

SAFETY STATEMENTS & WARNINGS

- For indoor use only.
- For residential use only. Not for commercial or industrial use.
- Only use this unit on a flat, level surface.
- Do not exceed the weight capacity of the unit.
- Never allow children to use this product unsupervised.
- Never use chemical cleaning products or polishes as doing so may damage the finish.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team directly through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.