

# Green Laser Sight

ITEM: Rifle Green Laser

## INSTRUCTIONS

**NOTE: PLEASE FOLLOW ALL OF THE DIRECTIONS IN THIS MANUAL CAREFULLY.**

**ATTENTION:**

**THIS LASER SIGHT IS A POWERFUL DEVICE THAT REQUIRES SPECIAL ATTENTION TO ITS USE. READ THE FOLLOWING INSTRUCTIONS AND SAFETY PRECAUTIONS CAREFULLY BEFORE USE.**

**CAUTIONS: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE LISTED HERE MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

**AVOID DIRECT EYE EXPOSURE TO THE LASER BEAM.**

**KEEP OUT OF THE REACH OF CHILDREN.**

**FOR ADULT USE ONLY.**

**Statement:**

The product has been carefully checked and tested in our

factory, please check carefully whether the product appearance is damaged caused by transport and whether the accessories are complete before using the product. The accessories include: 1. One piece of laser sight; 2. Allen wrench; 3. One piece of mount; 4. One piece of CR123 battery; 5. One piece of remote wire pressure switch; 6. Instruction Manual.

**Note:** Always be sure to turn off this laser sight after use to avoid draining the battery. When you won't use it for a long time, please remove the battery.

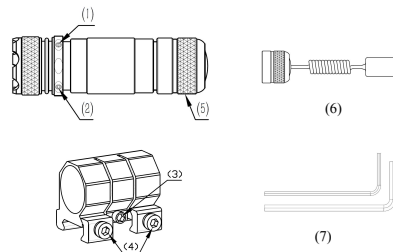


Figure 1

**SPECIFICATIONS:**

- Model: Rifle Green Laser
- Brand Name: Osprey Global
- Wavelength: 520nm
- Power Output: <5mW
- Class 3a laser product
- Working Temperature: -20°C ~ +60°C
- Storage Temperature: -20°C ~ +60°C
- Length: 3.5"
- Height : 1.5"(Mount incl.)
- Width : 1.6"(Mount incl.)
- Weight: 3.7 oz. (with Battery)
- Battery: 1pc CR123 Lithium Battery
- Battery Life: 7 hours
- Material: Aircraft aluminum 6061-T6
- Finish: Anodic oxidation/ black
- Operation: (1) ON/OFF button;  
(2) Remote wire pressure switch.
- Place of Origin: China (Mainland)

**ATTACHING THE CORRECT MOUNT TO THE DEVICE**

**WARNING: BE CERTAIN THAT YOUR GUN IS UNLOADED AND POINTING TO A SAFE DIRECTION**

**ACTIVATING THE LASER:**

**WARNING: DO NOT LOOK DIRECTLY INTO THE LASER BEAM OUTPUT APERTURE DURING OPERATION. PERMANENT EYE DAMAGE MAY RESULT.**

**EXERCISE SAFE GUN HANDLING. SHOOT ONLY AT AN APPROVED RANGE OR SUITABLE LOCATION. USE EYE AND EAR PORTECTION AS NECESSARY.**

A. Installing the battery:

Your new laser is powered by one long-life lithium battery. First, turn the battery cap(5) counter-clockwise until it's free from the main body of the laser sight; Next ,insert the battery into the battery holder with the positive "+" side up, then turn the battery cap clockwise until tight.

B. Installing the main body of laser sight:

At first, loosen the screws(3)&(4) of the mount, insert the laser sight into the mount;Then install the mount on your firearm by using provided Allen wrench(7).

C. ON/OFF button:

The laser turns on by depressing the button(battery cap)(5) until it clicks, and the laser turns off by the same procedure.

D.Remote wire pressure switch(6):

The laser turns on by pressing the wire switch pad, and the laser turns off by releasing the wire switch pad.

E. Zeroing:

Fire a few shots at a target, if the point of impact is directly in the center of the target, then the laser sight is zeroed. Otherwise the sight needs to be adjusted both windage and elevation by twisting screws(1)&(2) in the head of laser sight for windage space&elevation space adjustment.

**SPECIAL NOTE: THIS UNIT WILL ONLY WORK UNDER THE TEMPERATURES LISTED ABOVE. THE UNIT WILL NOT WORK IN EXTREME COLD OR**

EXTREME HEAT.

**REPLACING THE BATTERY:**

The battery included in your package will provide long service. However, if the dot grows to be dim, the battery may need to be replaced. To do so, remove the used battery and replace with new battery.

**Note:**If you are not sure of any of the procedures in this manual, always seek the help of a qualified professional to avoid damage to your laser sight and your firearm.

**CAUTION - LASER LIGHT IS BRIGHT AND BLINDING - DO NOT SHINE AT AIRCRAFT OR VEHICLES AT ANY DISTANCE.**

